

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic 8 kg Fully-Automatic Front Loading Washer Dryer Machine User Manual](#)

Panasonic NA-S085M2W01

Panasonic 8 kg Fully-Automatic Front Loading Washer Dryer Machine

Model: NA-S085M2W01 | Brand: Panasonic

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Panasonic 8 kg Fully-Automatic Front Loading Washer Dryer Machine (Model: NA-S085M2W01). This appliance is designed for washing and drying household laundry. Please read this manual thoroughly before using the machine and keep it for future reference.

The Panasonic NA-S085M2W01 is an 8 kg capacity fully-automatic front-loading washer dryer machine featuring an inbuilt heater, a white LED display, and a wide 480mm door for easy loading and unloading.



Image 1.1: Front view of the Panasonic NA-S085M2W01 Washer Dryer Machine.

2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage to the appliance:

- Ensure the machine is connected to a properly grounded electrical outlet.
- Do not operate the machine if the power cord is damaged.
- Keep children and pets away from the appliance during operation.
- Do not wash or dry items that have been soiled with flammable substances.
- Always unplug the machine before cleaning or performing maintenance.
- Do not open the door forcefully during operation, especially when the drum is spinning or hot.

3. WHAT'S IN THE BOX

Upon unpacking, verify that all components listed below are present:

- 1 x Panasonic Washer Dryer Machine
- 1 x User Manual
- 1 x Warranty Card
- 1 x Inlet hose with universal adapter
- 1 x Drain hose support
- 4 x Transport Plugs
- 4 x Screws
- 1 x Rat Panel



Image 3.1: Included accessories: inlet hose, drain hose support, transport plugs, and screws.



Image 3.2: The machine's power cord.

4. SETUP AND INSTALLATION

The Panasonic NA-S085M2W01 is designed for free-standing installation. Follow these steps for proper setup:

1. **Unpacking:** Carefully remove all packaging materials.
2. **Remove Transport Plugs:** Before first use, remove the four transport plugs located at the rear of the machine. These are essential for securing the drum during transit and must be removed to prevent damage during operation.
3. **Leveling:** Adjust the leveling feet at the bottom of the machine to ensure it stands stable and level on the floor. This minimizes vibration and noise during operation.
4. **Water Inlet Connection:** Connect the provided inlet hose to the water tap and the corresponding inlet valve on the back of the machine. Ensure connections are tight to prevent leaks.
5. **Drain Hose Setup:** Position the drain hose into a suitable drain pipe or sink, ensuring it is securely fixed to prevent displacement during drainage. Use the drain hose support if necessary.

6. **Power Connection:** Plug the power cord into a grounded electrical outlet.



Image 4.1: Rear view of the machine, illustrating hose connections and transport plug locations.

5. OPERATING INSTRUCTIONS

Your Panasonic washer dryer offers a range of programs and features for optimal laundry care.

5.1. Loading Laundry

Open the 480mm wide door and load laundry into the drum. Do not overload the machine; ensure there is enough space for clothes to tumble freely. The drum is made of durable stainless steel.



Image 5.1: Opening the machine door.



Image 5.2: Interior view of the stainless steel drum.

5.2. Adding Detergent and Softener

Pull out the detergent dispenser drawer located on the front of the machine. Add appropriate amounts of detergent to the main wash compartment and fabric softener to its designated compartment. Refer to your detergent packaging for recommended dosages.



Image 5.3: Detergent dispenser drawer.

5.3. Selecting a Program

The machine features 16 option cycles, including specific programs for various fabric types and soil levels. Use the program selector dial to choose your desired wash or wash-dry cycle. The white LED display will show program information.

- **Wash Cycles:** Select from various wash programs tailored for cottons, synthetics, delicates, etc.
- **Drying Cycles:** Choose a drying program based on the desired dryness level.
- **Combined Wash & Dry:** For convenience, select a program that includes both washing and drying.

5.4. Adjusting Settings

Customize your wash with additional settings:

- **Temperature:** Adjust the wash temperature. The inbuilt heater allows for hot water washes.
- **Spin Speed:** Select the desired spin speed, up to a maximum rotational speed of 1400 RPM.
- **Cycle Options:** Utilize options like Prewash or Speed Wash for specific needs.

5.5. Starting the Cycle

Press the 'Start/Pause' button to begin the selected program. The machine will automatically proceed through the wash and dry phases. In case of a power cut, the machine can resume operation from where it left off.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washer dryer.

6.1. Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup.

6.2. Cleaning the Drum

Run a drum clean cycle (if available) or a hot wash with no laundry and a descaling agent to remove any buildup.

6.3. Cleaning the Drain Filter

The drain filter should be cleaned regularly to prevent blockages and ensure efficient drainage. Access the filter through the small panel at the bottom front of the machine.



Image 6.1: Accessing the drain filter for cleaning.

6.4. Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7. TROUBLESHOOTING

If you encounter issues with your machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is firmly closed; Select a program and press Start.
Excessive vibration/noise	Transport plugs not removed; Machine not level; Uneven load.	Remove transport plugs; Adjust leveling feet; Redistribute laundry evenly.

Problem	Possible Cause	Solution
Water not draining	Drain hose kinked or blocked; Drain filter clogged.	Check drain hose for kinks; Clean the drain filter.
Clothes not drying properly	Overloaded; Incorrect drying program; Lint filter clogged (if applicable).	Reduce load size; Select appropriate drying program; Clean lint filter.

If the problem persists after attempting these solutions, please contact Panasonic customer support.

8. SPECIFICATIONS

Feature	Specification
Model	NA-S085M2W01
Capacity	8 Kilograms
Operation Mode	Fully Automatic
Installation Type	Free Standing
Form Factor	Front-Loading
Special Feature	Inbuilt Heater
Number of Cycles	16
Maximum Rotational Speed	1400 RPM
Voltage	230 Volts
Material	Plastic (Body), Stainless Steel (Drum)
Color	White
Item Weight	78 kg
Item Dimensions (LxWxH)	59.5 x 56.5 x 85 Centimeters

9. WARRANTY AND SUPPORT

Your Panasonic NA-S085M2W01 Washer Dryer Machine comes with a comprehensive warranty:

- **Product Warranty:** 2 years on the entire product.
- **Motor Warranty:** 5 years on the motor.

Please retain your purchase receipt and the included Warranty Card for any warranty claims. For technical assistance, service requests, or further inquiries, please contact Panasonic customer support through their official channels. Refer to the Warranty Card for specific contact details and terms.