

[Manuals.plus](#) /

> [Piebert](#) /

> Piebert Kneading Hook Instruction Manual for AICOK Bread Makers MBF-004 and MBF-013

Piebert santa2747

Piebert Kneading Hook Instruction Manual

For AICOK Bread Maker Models MBF-004 and MBF-013

1. INTRODUCTION

Thank you for choosing the Piebert Kneading Hook. This manual provides essential information for the correct installation, operation, and maintenance of your new kneading hook. This product is designed as a direct replacement part for AICOK bread maker models MBF-004 and MBF-013. Please read these instructions carefully before use to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

The Piebert Kneading Hook is a high-quality replacement accessory specifically engineered to fit AICOK bread machines. Its primary function is to effectively mix and knead dough ingredients within the bread maker's pan, ensuring consistent results for various bread types. The hook features a durable construction and an easy-to-clean coating.



Image 1: The Piebert Kneading Hook. This image displays the single kneading hook, light grey in color, with a square-shaped attachment point at its base, designed for bread machine compatibility.

3. SETUP AND INSTALLATION

Follow these steps to correctly install the kneading hook into your AICOK bread maker:

1. **Ensure Safety:** Before installation, always unplug your AICOK bread maker from the power outlet to prevent electrical hazards.
2. **Remove Bread Pan:** Carefully remove the bread pan from the bread maker unit.
3. **Remove Old Hook (if applicable):** If replacing an existing hook, gently pull it upwards from the drive shaft inside the bread pan. If it is stuck, fill the pan with warm water for a few minutes to loosen any baked-on dough.
4. **Clean Drive Shaft:** Ensure the drive shaft within the bread pan is clean and free from any dough residue.
5. **Install New Hook:** Align the square opening at the base of the Piebert Kneading Hook with the drive shaft in the bread pan. Push the hook firmly downwards until it sits securely on the shaft.
6. **Verify Installation:** Gently rotate the hook to ensure it is properly seated and moves freely.
7. **Reinsert Bread Pan:** Place the bread pan back into the bread maker unit, ensuring it is securely locked in place according to your bread maker's instructions.

Your Piebert Kneading Hook is now ready for use.

4. OPERATING INSTRUCTIONS

The Piebert Kneading Hook operates automatically as an integral part of your AICOK bread maker's normal function. Once installed, it will engage during the kneading cycles as programmed by your bread maker. No specific manual operation of the hook itself is required.

- Ensure all ingredients are added to the bread pan before starting a program.
- Select the desired program on your AICOK bread maker.
- The kneading hook will begin to mix and knead the dough according to the selected cycle.

For detailed instructions on operating your AICOK bread maker, please refer to its original instruction manual.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and hygiene of your kneading hook:

- **Cleaning After Use:** After each use, remove the kneading hook from the bread pan. It is easiest to remove after the bread has cooled slightly.
- **Washing:** Wash the kneading hook by hand using warm, soapy water and a soft sponge or cloth. The non-stick coating is designed for easy cleaning. Avoid abrasive cleaners or scouring pads, as these can damage the coating.
- **Drying:** Thoroughly dry the kneading hook before storing it or reinstalling it in the bread pan.
- **Storage:** Store the kneading hook in a dry place, preferably within the bread pan or with your bread maker accessories.

Regular cleaning prevents dough buildup and ensures the hook functions effectively during future use.

6. TROUBLESHOOTING

If you encounter issues related to the kneading hook, consider the following:

- **Hook Not Turning:**
 - Ensure the hook is correctly seated on the drive shaft.
 - Check for any dough or debris obstructing the shaft or the hook's movement.
 - Verify that the bread pan is properly installed in the bread maker.
- **Dough Sticking to Hook:**
 - This is common. Ensure you remove the hook after baking and clean it promptly.
 - Soaking the pan with the hook in warm water can help loosen stubborn dough.
- **Hook Damaged or Worn:**
 - If the hook shows signs of wear, bending, or coating damage, it may need replacement to ensure proper kneading and prevent contamination.

For issues related to the bread maker itself, consult your AICOK bread maker's instruction manual or contact AICOK customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Piebert
Model Number	santa2747
Compatibility	AICOK Bread Maker Models MBF-004, MBF004, MBF-013, MBF013
Package Dimensions	11.4 x 6.4 x 1.6 cm
Item Weight	0.02 Kilograms (20 g)
Quantity	1 piece
ASIN	B07GWVP6F3
Date First Available	2 November 2018

8. WARRANTY AND SUPPORT

This Piebert Kneading Hook is manufactured to high-quality standards. For any questions regarding product defects or performance, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty claims.

For general inquiries or further assistance, refer to the contact information provided by the retailer or the manufacturer, Piebert.

