

[Manuals.plus](#) /

> [Northlight](#) /

> Northlight Lighted Holographic Snowmen on See Saw Outdoor Christmas Decoration User Manual

Northlight B07GWZDVJD

Northlight Lighted Holographic Snowmen on See Saw Outdoor Christmas Decoration User Manual

Model: B07GWZDVJD

PRODUCT OVERVIEW

This animated outdoor decoration features a pair of playful snowmen on a see-saw, designed to enhance your outdoor Christmas decor with a whimsical style. It includes a dazzling holographic background and is pre-lit with 140 multicolor berry lights. The unit is constructed with a solid metal frame and stand, featuring rust-resistant coated wire for durability.

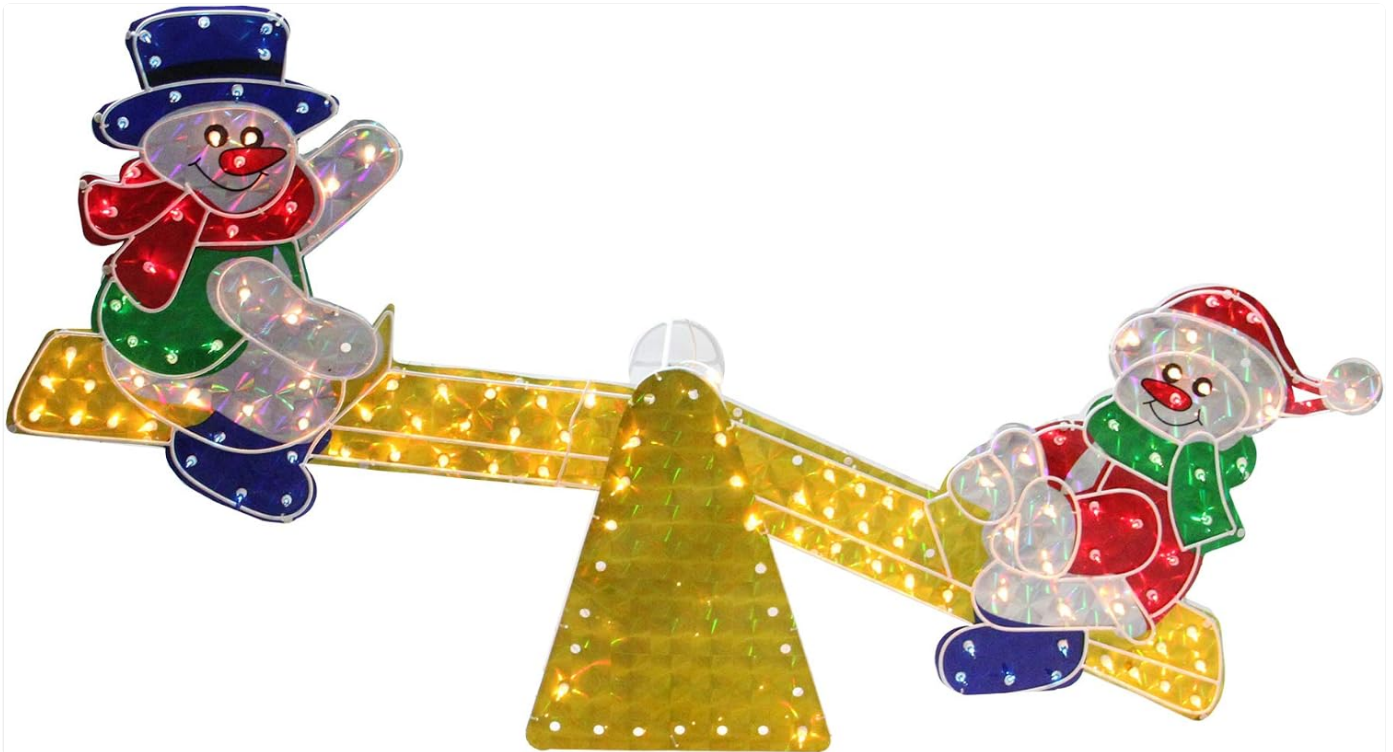


Image 1: The Lighted Holographic Snowmen on See Saw Outdoor Christmas Decoration, showcasing its vibrant colors and design.

Key Features:

- Animated Holographic Snowmen On See Saw Christmas Decor
- Designed with 140 multicolor berry lights (G12, 15mm diameter)
- Coated wire metal frame and stand is rust resistant
- Recommended for both indoor and outdoor use
- Approximate Dimensions: 46 inches wide x 25-26 inches high x 5.75-7 inches deep

SAFETY INFORMATION

WARNING: Handling the coated electrical wires of this product exposes you to lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after use.

- Ensure all bulbs are securely fastened within their covers. Loose bulbs may occur during shipping.
- This product is UL certified and approved for both indoor and outdoor use.
- Always connect to a compatible power source (Input: 100-120 volts, 50-60 hertz, 0.3 amps; Output: 29 volts, .310 mA, 9 watts).
- Do not overload electrical outlets.
- Keep away from heat sources and open flames.
- Inspect the product for any damage before each use. Do not use if wires are frayed or insulation is compromised.

SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for off-season storage.
2. **Component Check:** Verify all parts are present:
 - Holographic Snowmen See-Saw Unit
 - Solid Metal Frame and Stand
 - Rain Tight AC Adapter
3. **Assembly:**
 - Attach the metal stand to the main see-saw unit. Ensure it is stable and secure.
 - Confirm all 140 multicolor berry lights are firmly seated in their respective positions.
4. **Placement:**
 - For outdoor use, select a flat, stable surface to prevent tipping.
 - Ensure the product is placed in an area where the 5-foot white lead cord (lights) and 4.5-foot white lead cord (see-saw) can reach a power outlet without tension.
 - Avoid placing in areas prone to excessive wind or heavy snow accumulation.
5. **Power Connection:** Connect the rain-tight AC adapter to the unit, then plug the adapter into a standard 100-120 volt electrical outlet.



Image 2: The Lighted Holographic Snowmen on See Saw Outdoor Christmas Decoration illuminated at night, demonstrating its visual effect.

OPERATING INSTRUCTIONS

The Lighted Holographic Snowmen on See Saw Outdoor Christmas Decoration is designed for simple operation.

1. **Power On:** Once properly set up and plugged into a power source, the unit will automatically illuminate and the see-saw animation will begin.
2. **Power Off:** To turn off the decoration, simply unplug the rain-tight AC adapter from the electrical outlet.
3. **Animation:** The snowmen figures will move up and down on the see-saw, creating an animated display. This motion is continuous when powered.

MAINTENANCE

- **Cleaning:** Disconnect from power before cleaning. Wipe the unit with a soft, damp cloth. Do not use harsh

chemicals or abrasive cleaners.

- **Bulb Check:** Periodically check that all 140 berry lights are securely in place. If any bulbs become loose, gently push them back into their covers.
- **Storage:** When not in use, especially during off-season, store the decoration in its original packaging or a suitable protective container in a cool, dry place away from direct sunlight.
- **Wire Inspection:** Regularly inspect the lead cords and wiring for any signs of damage, cuts, or fraying. If damage is found, discontinue use immediately and replace the unit.
- **Rust Prevention:** The metal frame is rust-resistant coated, but prolonged exposure to extreme moisture can still cause issues. Ensure proper drainage around the base if used outdoors.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights are not illuminating.	<ul style="list-style-type: none">◦ Not plugged in.◦ Power outlet is not active.◦ Loose bulb(s).◦ Damaged wiring or adapter.	<ul style="list-style-type: none">◦ Ensure the AC adapter is fully plugged into a working outlet.◦ Test the outlet with another device.◦ Check all bulbs and gently push any loose ones into place.◦ Inspect wiring and adapter for damage. If damaged, discontinue use.
See-saw animation is not moving or moving slowly.	<ul style="list-style-type: none">◦ Insufficient power.◦ Obstruction in mechanism.◦ Motor malfunction.	<ul style="list-style-type: none">◦ Ensure the unit is receiving full power from the outlet.◦ Check for any debris or foreign objects obstructing the see-saw mechanism.◦ If the issue persists after checking power and obstructions, the internal motor may be faulty. Contact customer support.
Product appears damaged upon arrival.	Shipping damage.	Contact the retailer or manufacturer immediately for assistance with returns or replacements.

SPECIFICATIONS

Attribute	Detail
Model Number	B07GWZDVJD
Brand	Northlight

Attribute	Detail
Product Dimensions (L x W x H)	46 x 7 x 26 inches (Approximate WxHxD: 46" W x 25-26" H x 5.75-7" D)
Item Weight	Approximately 3.85 - 3.9 Pounds
Frame Material	Metal (Rust-resistant coated)
Light Type	Berry Lights (G12, 15mm diameter)
Number of Lights	140
Light Color	Multicolor
Input Voltage	100-120 Volts, 50-60 Hertz, 0.3 Amps
Output Voltage	29 Volts, 0.310 mA, 9 Watts
Lead Cord Length (Lights)	5 feet (white)
Lead Cord Length (See-saw)	4.5 feet (white)
Certifications	UL certified for indoor and outdoor use
UPC	193228036552
Country of Origin	China

WARRANTY AND SUPPORT

Specific warranty information for the Northlight Lighted Holographic Snowmen on See Saw Outdoor Christmas Decoration is typically provided at the point of purchase or within the product packaging. Please refer to your purchase receipt or the documentation included with your product for details regarding warranty coverage and duration.

For technical support, replacement parts, or further inquiries, please contact Northlight customer service. You may find contact information on the product packaging, the manufacturer's official website, or through the retailer from whom you purchased the item.

Manufacturer: Northlight

Website: [Visit the Northlight Store on Amazon](#) (for general brand information)