

[manuals.plus](#) /

› [Intex](#) /

› [Intex Dura-Beam Ultra Plush Inflatable Pillow Top Bed Air Mattress with Headboard, Built-in Internal Electric Pump and Carry Storage Bag, Queen, Gray - User Manual](#)

## Intex 64448

# Intex Dura-Beam Ultra Plush Inflatable Pillow Top Bed Air Mattress with Headboard

## USER MANUAL

### 1. PRODUCT OVERVIEW

The Intex Dura-Beam Ultra Plush Inflatable Pillow Top Bed Air Mattress with Headboard is designed for comfort and convenience, offering a plush sleeping surface and an integrated headboard for added support. It features a built-in internal electric pump for easy inflation and deflation, and comes with a carry storage bag for portability.



Image 1.1: The Intex Dura-Beam Ultra Plush Air Mattress, showcasing its integrated headboard and plush top.

## Key Features:

- Integrated pillow top for enhanced comfort.
- Built-in internal electric pump for quick inflation and deflation.
- Durable Dura-Beam construction for stability and support.
- Convenient headboard design to prevent pillows from falling.
- Includes a carry storage bag for easy transport and storage.
- Queen size, suitable for various sleeping arrangements.

## 2. SAFETY INFORMATION

---

Please read and understand all safety warnings and instructions before using this product. Failure to follow these instructions may result in serious injury or product damage.

- **Do not overinflate:** Overinflation can cause the mattress to burst, leading to injury or damage. Inflate only until firm.
- **Keep away from sharp objects:** Avoid placing the mattress near or on sharp objects that could puncture the material.
- **Weight Limit:** The maximum recommended load for this mattress is 600 pounds (272 kg). Do not exceed this weight limit.
- **Supervision:** Children should be supervised when near the air mattress.
- **Electrical Safety:** Ensure the electrical outlet used for the pump is properly grounded and rated for the pump's voltage (110-120V, 60Hz, 0.9A). Do not operate the pump with a damaged cord or plug.
- **Temperature:** Avoid extreme temperatures. Do not expose the mattress to direct sunlight for extended periods or use in extremely cold conditions, as this can affect material integrity.
- **Flammable Materials:** Keep the mattress away from open flames and heat sources.

## 3. SETUP

---

Setting up your Intex Dura-Beam Ultra Plush Air Mattress is quick and easy with the built-in electric pump.

### Inflation Steps:

1. Unroll the air mattress on a clean, flat surface, ensuring there are no sharp objects underneath.
2. Locate the built-in electric pump on the side of the mattress.
3. Plug the power cord into a standard electrical outlet.

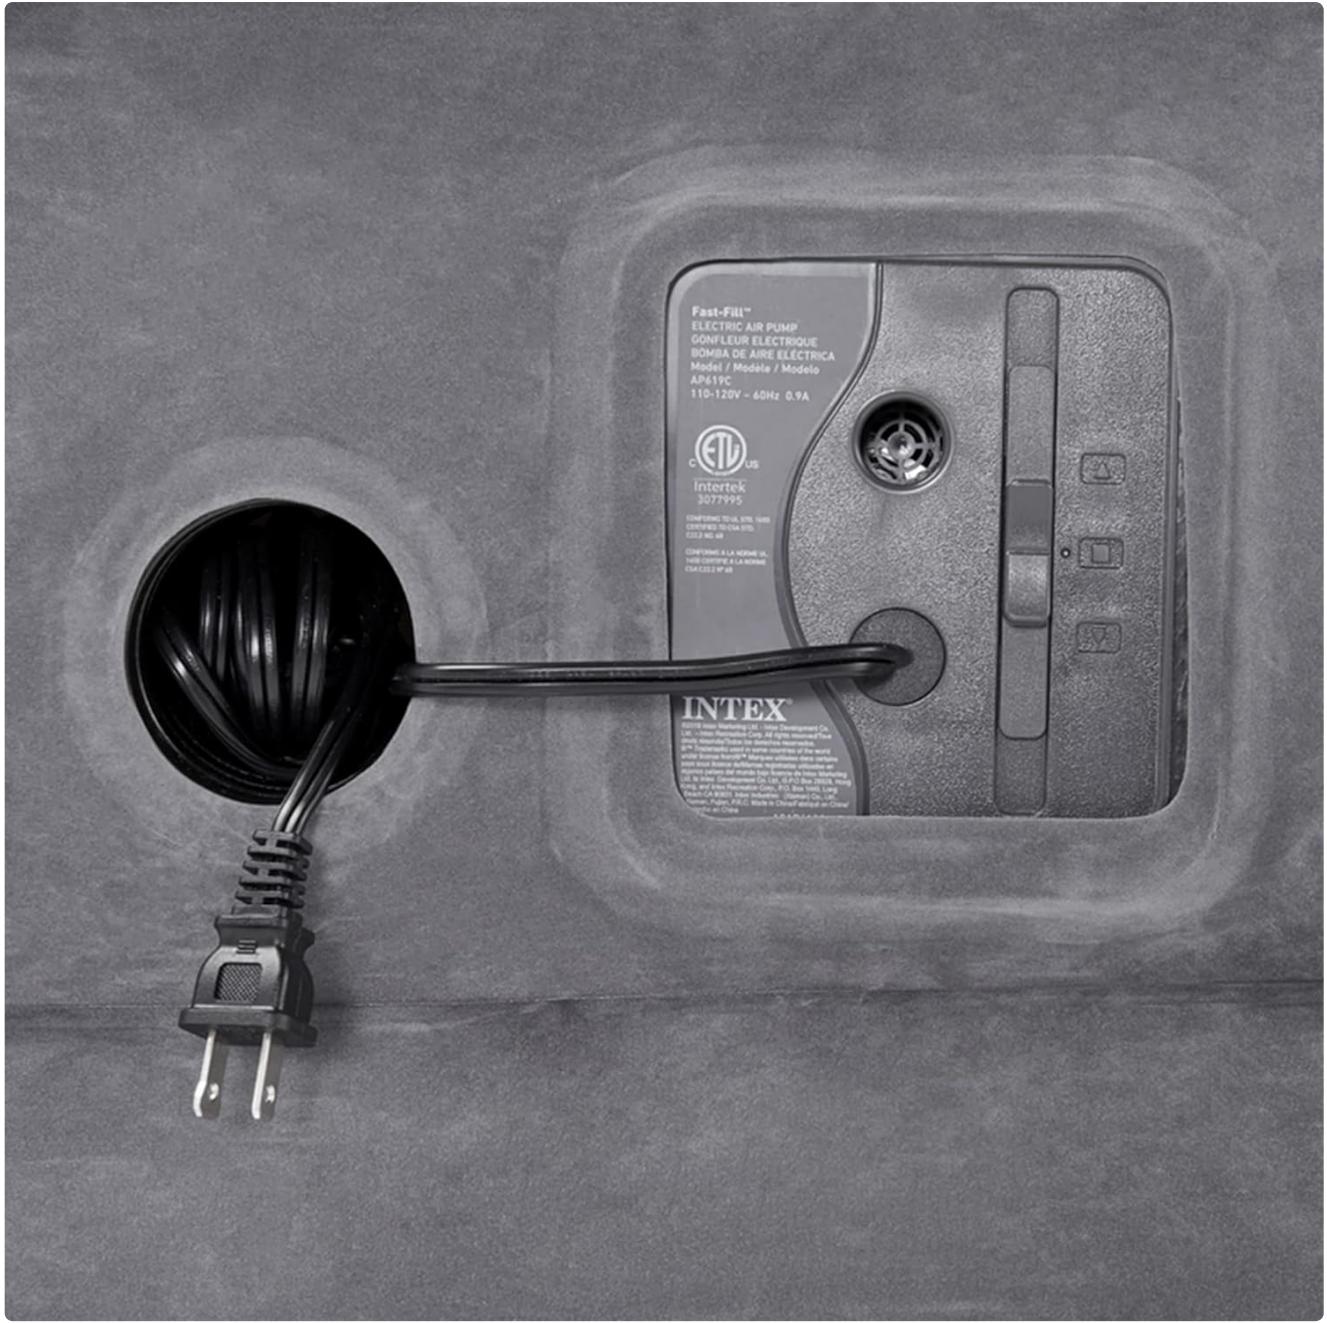


Image 3.1: Detail of the built-in electric pump, showing the power cord connection and control switch.

4. Turn the pump switch to the "Inflate" position. The mattress will begin to inflate.
5. Allow the mattress to inflate until it reaches your desired firmness. For initial use, inflate fully. The mattress may stretch slightly after the first few uses, requiring minor re-inflation.
6. Once inflated, turn the pump switch to the "Off" position.
7. Unplug the power cord and store it neatly in the integrated cord storage compartment next to the pump.



Image 3.2: The Intex air mattress fully inflated and ready for use in a room.

## 4. OPERATION

---

Using your Intex Dura-Beam Ultra Plush Air Mattress for sleeping or lounging.

### Adjusting Firmness:

If the mattress feels too firm, you can slightly deflate it by briefly turning the pump switch to the "Deflate" position until the desired comfort level is achieved. For a firmer feel, briefly turn the switch to "Inflate".



Image 4.1: The air mattress in use, highlighting its spacious and comfortable design for multiple users.

### Deflation Steps:

1. Ensure the mattress is unplugged from the power outlet.
2. Turn the pump switch to the "Deflate" position. The mattress will begin to deflate automatically.
3. Once fully deflated, turn the pump switch to the "Off" position.
4. Fold or roll the mattress neatly to remove any remaining air and prepare it for storage.
5. Place the deflated mattress into the provided carry storage bag.

## 5. MAINTENANCE

---

Proper care and maintenance will extend the life of your Intex air mattress.

### Cleaning:

- Spot clean the mattress surface with a mild soap and water solution.
- Do not use harsh chemicals or abrasive cleaners, as these can damage the material.
- Ensure the mattress is completely dry before storing to prevent mold or mildew.

### Storage:

- After deflating and cleaning, fold or roll the mattress carefully.
- Store the mattress in its original carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- Avoid storing heavy objects on top of the folded mattress.

## 6. TROUBLESHOOTING

---

If you encounter issues with your air mattress, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Mattress loses air overnight.	<ul style="list-style-type: none"><li>Initial material stretching (normal for new mattresses).</li><li>Temperature changes (cooler air causes pressure drop).</li><li>Small puncture or leak.</li></ul>	<ul style="list-style-type: none"><li>Re-inflate to desired firmness. This is common for the first few uses.</li><li>Re-inflate as needed to compensate for temperature changes.</li><li>Inspect for punctures. Use a patch kit if a leak is found.</li></ul>
Built-in pump not working.	<ul style="list-style-type: none"><li>Not plugged in correctly.</li><li>Power outlet issue.</li><li>Pump switch in wrong position.</li></ul>	<ul style="list-style-type: none"><li>Ensure the power cord is fully inserted into the outlet and the pump.</li><li>Test the outlet with another appliance.</li><li>Verify the switch is set to "Inflate" or "Deflate" as desired.</li></ul>
Mattress is not firm enough.	<ul style="list-style-type: none"><li>Insufficient inflation.</li><li>Material stretching.</li></ul>	<ul style="list-style-type: none"><li>Inflate for a longer period until desired firmness is achieved.</li><li>Re-inflate as needed, especially during initial uses.</li></ul>

If you continue to experience issues, please contact Intex customer support for further assistance.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Intex
Model Name	Dura-Beam Ultra Plush
Item Model Number	64448
Size	Queen
Color	White/Grey
Product Dimensions (L x W x H)	93" L x 60" W x 34" Th
Item Thickness	18 Inches (without headboard)
Item Weight	22.8 pounds (10.34 kg)
Weight Limit	600 Pounds (272 kg)
Included Components	Built-in Electric Pump, Carry Storage Bag
Power Requirements (Pump)	110-120V, 60Hz, 0.9A
Product Care Instructions	Spot Clean


## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Intex customer service. Keep your purchase receipt as proof of purchase.

You can find more information and contact details by visiting the official Intex store:[Intex Store on Amazon](#).

© 2024 Intex. All rights reserved.

### Related Documents - 64448

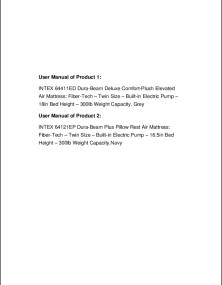	<p><a href="#">INTEX Quickfill Plus Internal Pump Air Mattress User Manual</a></p> <p>Comprehensive user manual for the INTEX Quickfill Plus Internal Pump air mattress (Models AP619D, AP619DP). Includes safety instructions, operating procedures, inflation/deflation guides, maintenance, and troubleshooting tips.</p>
	<p><a href="#">Intex Fiber-Tech Dura-Beam Airbed Owner's Manual and Safety Guide</a></p> <p>Comprehensive guide for Intex Fiber-Tech Dura-Beam airbeds, covering safety instructions, inflation, deflation, maintenance, and storage. Includes model numbers and usage tips.</p>
	<p><a href="#">Intex Air Mattress Safety Guide</a></p> <p>Essential safety tips for Intex air mattresses, covering infant suffocation risks and general usage guidelines to prevent injury and damage.</p>
	<p><a href="#">INTEX Air Mattress FAQ: Leaks, Patches, Warranties, and Valves</a></p> <p>Find answers to common questions about INTEX air mattresses, including how to find and patch leaks, warranty information, and how to identify different valve types.</p>
	<p><a href="#">INTEX Owner's Manual: Built-in Fast-Fill™ Electric Pump Model AP619A</a></p> <p>Comprehensive owner's manual for the INTEX Built-in Fast-Fill™ Electric Pump Model AP619A, providing essential safety instructions, operating procedures for inflation and deflation, important notes on airbed care, and storage guidelines. Learn how to properly use and maintain your INTEX airbed pump.</p>



## [INTEX Air Bed with Built-in Foot Pump: Owner's Manual & Instructions](#)

Comprehensive guide to inflating, deflating, and using your INTEX air bed with a built-in foot pump. Includes safety tips and maintenance advice.