

## Easytry123 Easytry2069

# Easytry123 Replacement Remote Control User Manual

MODEL: EASYTRY2069

Compatible with Sharp Portable Air Conditioner Models: CRMC-A657JBEZ, CRMC-A343JBEO, CRMC-A344JBEO, CRMC-A310JBEO, CRMC-A305JBE

## 1. INTRODUCTION

This manual provides instructions for the Easytry123 Replacement Remote Control, Model Easytry2069. This remote is designed as a replacement for specific Sharp Portable Air Conditioner models. Please note that as a replacement unit, it may not offer all the advanced functions of your original remote control. Ensure your air conditioner model is listed above for compatibility.

For optimal performance, please read this manual thoroughly before use.

## 2. SETUP: BATTERY INSTALLATION

The remote control requires two (2) AAA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the cover downwards or press the latch and lift to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

**Important:** Always replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

### 3. OPERATING INSTRUCTIONS

---

Point the remote control directly at the air conditioner's receiver when operating. Ensure there are no obstructions between the remote and the unit.



Image: Front view of the remote control, highlighting the display screen and various function buttons.

### Button Functions:

- **Power Button (○):** Turns the air conditioner ON or OFF.
- **MODE Button:** Cycles through available operating modes such as Cool, Fan, Dry, and Heat (if supported by your AC unit).
- **TEMP ▲/▼ Buttons:** Adjusts the desired temperature setting. ▲ increases temperature, ▼ decreases temperature.
- **FAN Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TIMER Button:** Used to set the ON/OFF timer for the air conditioner. Press to activate, then use TEMP ▲/▼ to adjust time.
- **SWING Button:** Controls the vertical airflow direction (louver swing).
- **DISPLAY MODE Button:** Changes the information displayed on the remote's screen or the AC unit's display.
- **CANCEL Button:** Cancels the currently set timer or other active functions.

## 4. MAINTENANCE

---

### Cleaning the Remote Control:

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these can damage the remote's surface or internal components.

### Battery Replacement:

- Replace batteries when the remote's display becomes dim or the remote stops responding consistently.
- Follow the battery installation steps outlined in Section 2.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

## 5. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly and have sufficient charge. Replace if necessary.
  - Ensure there is a clear line of sight between the remote control and the air conditioner's receiver.
  - Confirm the remote is pointed directly at the air conditioner.
- **Limited functionality:**
  - As a replacement remote, some advanced or specific functions of your original air conditioner remote may not be supported. This is normal for universal or replacement remotes.
  - Refer to your air conditioner's original manual for specific functions not covered by this replacement remote.

## 6. SPECIFICATIONS

---

Feature	Description
Brand	Easytry123
Model Number	Easytry2069
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic design
Color	White
Number of Batteries Required	2
Battery Type	AAA (Lithium recommended)

## 7. WARRANTY INFORMATION

---

This Easytry123 replacement remote control is typically covered by a standard manufacturer's warranty against

defects in materials and workmanship. Please refer to the product packaging or contact your retailer for specific warranty terms and duration. Keep your purchase receipt as proof of purchase.

## 8. CUSTOMER SUPPORT

---

For any questions, technical assistance, or issues not covered in this manual, please contact the Easytry123 customer support or your product retailer. Provide your product model number (Easytry2069) and details of your inquiry for efficient service.