

Easytry123 Easytry2055

Easytry123 Replacement Remote Control User Manual

Model: Easytry2055

1. INTRODUCTION

This manual provides instructions for the Easytry123 Replacement Remote Control, model Easytry2055. This remote is designed to operate various Sharp Room Air Conditioner models, including AY-A07BEAH-PN10, AH-PN10-GY, AH-PN13, AH-PN13-GY, and AH-PN19.

Important Note:

- This is a replacement remote control. While designed for compatibility, it may not support all functions of your original air conditioner remote.
- Ensure your air conditioner model number is listed in the compatible models to guarantee functionality.
- No batteries or separate instruction manual are included with the product.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

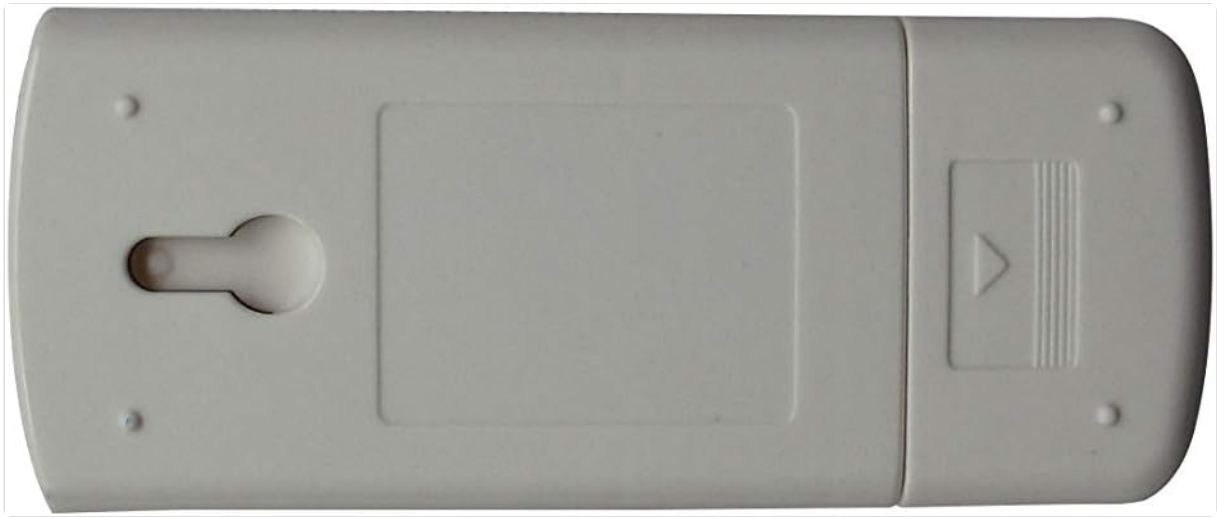


Figure 1: Back view of the remote control with the battery compartment. The cover slides down to reveal the battery slots.

2.2 Initial Use

Once batteries are installed, the remote control is ready for use. No programming is typically required for this replacement unit; it should function directly with compatible Sharp air conditioner models.

3. OPERATING INSTRUCTIONS

Point the remote control directly at the infrared receiver on your Sharp air conditioner unit. Ensure there are no obstructions between the remote and the air conditioner.



Figure 2: Front view of the remote control, displaying the power, mode, temperature, and fan speed buttons.

3.1 Basic Functions

The remote control features an ergonomic design with standard buttons for common air conditioner functions. While specific button labels may vary slightly, typical functions include:

- **Power Button:** Turns the air conditioner ON or OFF.
- **Mode Button:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **Temperature Adjustment Buttons (Up/Down Arrows):** Increases or decreases the desired temperature.
- **Fan Speed Button:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Swing/Vane Button:** Controls the direction of the air flow.
- **Timer Button:** Sets a timer for the air conditioner to turn ON or OFF.

Refer to your Sharp air conditioner's original manual for detailed explanations of each function and how they interact with the unit.

4. MAINTENANCE

4.1 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's range decreases or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AAA batteries.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Verify that the remote control is pointed directly at the air conditioner.
- **Some functions do not work:**
 - As a replacement remote, it may not support all advanced or specific functions of your original air conditioner remote. This is normal for universal or replacement units.
 - Confirm your air conditioner model is listed as compatible.
- **Short operating range:**
 - Replace the batteries.
 - Ensure the remote's infrared emitter is clean and unobstructed.

6. SPECIFICATIONS

Feature	Detail
Model Number	Easytry2055
Brand	Easytry123
Compatible Devices	Sharp Room Air Conditioners (AY-A07BEAH-PN10, AH-PN10-GY, AH-PN13, AH-PN13-GY, AH-PN19)
Power Source	2 x AAA Batteries (not included)
Controller Type	Button Control
Special Feature	Ergonomic Design
Color	White

7. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information or technical support, please refer to the seller or the original manufacturer of the remote control, Easytry123. Please note that warranty terms may vary.

For issues related to your Sharp Air Conditioner's functionality, please consult the air conditioner's original user manual or contact Sharp customer support.