

Stokke Nomi High Chair

Stokke Nomi High Chair Instruction Manual

Model: Nomi High Chair (B07GXVG8YH)

INTRODUCTION

The Stokke Nomi High Chair is designed to encourage active sitting and facilitate family mealtimes. Its ergonomic design supports proper posture and allows for unrestricted movement, crucial for a child's development. This chair is built to adapt as your child grows, from infancy through adulthood, offering seamless, tool-free adjustability.

This manual provides essential information for the safe and correct assembly, operation, and maintenance of your Stokke Nomi High Chair.

WHAT'S INCLUDED

Verify that all components are present before beginning assembly.

- Backrest
- Seat
- Footplate
- Passive restraint
- 5-point safety harness
- Hardware (screws, tools)
- Centerstem (European oak/beech wood)
- Foot Cross

KEY FEATURES

The Stokke Nomi High Chair incorporates several design elements for comfort, safety, and adaptability.

- **Ergonomic Backrest:** Designed to support proper posture for comfortable and active sitting.
- **Adjustable Seat & Footrest:** Tool-free adjustment allows for optimal positioning as your child grows.
- **Rounded Contours:** Provides a comfortable and safe seating experience.
- **Lightweight Design:** Easy to move around the home.
- **Solid Construction:** Built to last, supporting up to 330 lbs (150 kg).
- **Anti-tilt Wheels:** Enhances stability and prevents tipping.
- **Dimensions:** Length: 23.2 in (59 cm) / Height: 32.9 in (83.5 cm) / Width: 20.5 in (52 cm).

SETUP AND ASSEMBLY

The Stokke Nomi High Chair requires assembly. While designed for tool-free adjustments, initial setup involves securing components. Ensure all parts are correctly aligned and tightened according to the included instructions to guarantee stability and safety. Refer to the detailed assembly guide provided in the product packaging for step-by-step instructions.

Important: Always ensure the chair is stable and all connections are secure before placing a child in it.

OPERATING INSTRUCTIONS

The Nomi High Chair offers tool-free adjustability for both the seat and footrest, adapting to your child's needs.

1. Adjusting Seat and Footrest

Locate the adjustment knobs on the central wooden stem. Unscrew these knobs to loosen the seat and footrest. Slide the components up or down to the desired height, ensuring your child's feet are flat on the footrest and their posture is supported. Once positioned, firmly re-tighten the knobs.

2. Using the Baby Set (for 6-24 months)

For infants and younger toddlers, attach the Baby Set, which includes a passive restraint and a 5-point safety harness. The Baby Set securely clicks into place on the chair's backrest and seat. Always ensure the harness is properly fastened and adjusted for a snug fit.

3. Transition to Chair (for older children and adults)

As your child grows, the Baby Set can be easily removed. The chair's design allows it to be used as a regular chair for older children and even adults, supporting up to 330 lbs (150 kg).

MAINTENANCE

Regular cleaning and inspection will ensure the longevity and safety of your Stokke Nomi High Chair.

- **Surfaces:** Wipe down all plastic and wooden surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals that could damage the materials.
- **Harness:** The 5-point safety harness can be removed and hand-washed with mild detergent. Allow to air dry completely before reattaching.
- **General Care:** Regularly inspect the chair for any loose parts, cracks, or damage. Tighten any loose screws or connections immediately. Do not use the chair if any part is damaged or missing.

TROUBLESHOOTING

If you encounter any issues with your Nomi High Chair, refer to the following common solutions:

- **Chair feels unstable:** Ensure all adjustment knobs for the seat and footrest are securely tightened. Verify that the foot cross is properly installed and stable on the floor.
- **Difficulty adjusting seat/footrest:** Loosen the adjustment knobs sufficiently before attempting to slide the components. Ensure no debris is obstructing the grooves in the central stem.
- **Baby Set not attaching securely:** Confirm that the Baby Set is correctly aligned with the attachment points on the backrest and seat, and listen for a distinct click to ensure it is locked in place.

If problems persist, contact Stokke customer support.

SPECIFICATIONS

Feature	Detail
Brand	Stokke
Model	Nomi High Chair
Color	Grey/Oak
Material Type	Wood
Age Range Description	Baby (with Baby Set), extends to adult use
Maximum Weight Recommendation	330 Pounds (150 kg)
Item Dimensions (D x W x H)	26"D x 21"W x 33"H (66 cm D x 53 cm W x 84 cm H)
Item Weight	13.4 Pounds (6.1 kg)
Assembly Required	Yes
Is Portable	No

WARRANTY

The Stokke Nomi High Chair comes with a 2-year manufacturer's warranty. For detailed information regarding warranty coverage, terms, and how to make a claim, please refer to the warranty documentation included with your product or visit the official Stokke website.

SUPPORT

For further assistance, product inquiries, or to purchase accessories and spare parts, please visit the official Stokke website or contact their customer service department. Contact information can typically be found on the Stokke website under the 'Support' or 'Contact Us' sections.

DESIGNER'S PHILOSOPHY

The Nomi High Chair was designed by Peter Opsvik, a renowned Norwegian industrial designer. His design philosophy emphasizes that children can concentrate better on activities at the table when their physical environment is adapted to their size and needs. This principle is central to the Nomi's adjustable and ergonomic design, promoting active sitting and family interaction.

PRODUCT USAGE EXAMPLES

The Stokke Nomi High Chair allows your child to sit comfortably at the family table, promoting interaction and connection during mealtimes.

The versatile design of the Stokke Nomi Chair means it can be used from birth (with a Newborn Set, sold separately) and adapted for use throughout life, offering a comfortable and supportive seat at every age.

Enjoy family meals with your child seated at the table in their Nomi High Chair, fostering a sense of belonging and encouraging active participation.