

Easytry123 Easytry2094

Easytry123 Replacement Remote Control User Manual

For Samsung HW-J450/ZA, PS-WJ651, PS-WJ470/ZA, HW-J6502, HW-J650 Audio Soundbar Systems

1. INTRODUCTION

This manual provides instructions for the Easytry123 replacement remote control, designed for use with various Samsung audio soundbar systems. This remote control offers basic functionality for compatible models. Please note that as a replacement unit, it may not support all advanced functions of the original remote control.

Compatible Models:

- Samsung HW-J450/ZA
- Samsung PS-WJ651
- Samsung PS-WJ651/ZA
- Samsung PS-WJ470/ZA
- Samsung HW-J6502
- Samsung HW-J650

2. SETUP

2.1 Battery Installation

The remote control requires batteries for operation. Batteries are not included with the remote control and must be purchased separately. This remote typically uses standard Lithium batteries.

1. Locate the battery compartment on the back of the remote control.
2. Remove the battery compartment cover by sliding or gently prying it open.
3. Insert the new batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.



Figure 1: Remote control with battery compartment open.



Figure 2: Remote control showing the battery cap detached.

2.2 Initial Use

This remote control utilizes infrared (IR) technology. No complex pairing or programming is typically required. Once batteries are installed, point the remote directly at your Samsung soundbar system and begin operation.

3. OPERATING INSTRUCTIONS

The remote control features 15 buttons for various functions. While specific button labels may vary, common functions include:

- **Power:** Turns the soundbar system on or off.

- **Volume Up/Down:** Adjusts the audio output level.
- **Mute:** Silences the audio output.
- **Input/Source:** Cycles through available audio input sources (e.g., HDMI, Optical, Bluetooth).
- **Navigation Buttons:** Used for menu navigation (if supported by the soundbar and remote).
- **Playback Controls:** Play, Pause, Skip (if controlling a connected media device).

For optimal performance, ensure a clear line of sight between the remote control and the soundbar's IR receiver. The maximum effective range is approximately 10 meters (33 feet).

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace all batteries at the same time with new ones of the same type. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the proper polarity.
 - Replace the batteries with fresh ones.
 - Ensure there is a clear line of sight between the remote and the soundbar's IR receiver. Remove any obstructions.
 - Make sure you are within the effective operating range (approximately 10 meters).
- **Some functions do not work:**
 - As a replacement remote, it may not support all advanced or specific functions of the original equipment. This is normal for universal or replacement remotes.
 - Verify that your soundbar model is listed as compatible in the Introduction section.

6. SPECIFICATIONS

Feature	Specification
Brand	Easytry123
Model Name	Easytry2094
Connectivity Technology	Infrared (IR)
Button Quantity	15
Controller Type	Button Control
Maximum Range	10 Meters
Battery Type	Lithium (not included)
Color	Black
Compatible Devices	Samsung Audio Soundbar Systems (specific models listed)

7. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the seller or retailer from whom you purchased this product. Specific warranty terms and support channels are typically provided at the point of sale.