

[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components Replacement Remote Control for Vizio VR2 TV (Model RC-VR2-DL37) User Manual

UpStart Components RC-VR2-DL37

UpStart Components Replacement Remote Control

MODEL: RC-VR2-DL37 FOR VIZIO VR2 / VW37LHDTV40A TELEVISIONS

Product Overview

This UpStart Components replacement remote control is designed to function as a direct replacement for your original Vizio VR2 TV remote, compatible with models such as the Vizio VW37LHDTV40A Television. It offers an ergonomic design and button control for intuitive operation.

Key Features:

- Designed to match and operate like the original remote control.
- Easy replacement: No programming required; simply install batteries and use.
- Constructed from premium quality materials for long-lasting durability.



Figure 1: Front view of the UpStart Components replacement remote control.

Setup

Follow these steps to prepare your remote control for use:

1. Unpack the remote control from its packaging.
2. Locate the battery compartment on the back of the remote control.
3. Open the battery compartment cover by sliding or pressing the latch.
4. Insert two (2) AA batteries (not included), ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
5. Close the battery compartment cover securely.
6. No programming is required. The remote is ready for immediate use with compatible Vizio televisions.



Figure 2: Back view of the remote control, indicating the battery compartment.

Operating Instructions

To operate your television using the remote control:

- Point the remote control directly at your Vizio television's infrared sensor.
- Press the **Power** button (usually red or marked with a power symbol) to turn the TV on or off.
- Use the **Volume Up/Down** buttons to adjust the sound level.
- Use the **Channel Up/Down** buttons to change channels.
- Press **Menu** to access the TV's on-screen menu system.
- Use the directional **Arrow** buttons (Up, Down, Left, Right) and the central **OK/Select** button to navigate through menus and confirm selections.
- Press **Input** to cycle through available input sources (e.g., HDMI, AV, Component).
- Specific buttons like **GUIDE**, **AV**, **COMP**, **HDMI**, **MUTE**, and **LAST** perform their indicated functions.
- The **Number Pad (0-9)** allows for direct channel entry.

Maintenance

Proper care will ensure the longevity of your remote control:

- Keep the remote control clean by wiping it with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.
- If the remote will not be used for an extended period (e.g., several weeks or months), remove the batteries to prevent potential leakage, which can damage the battery compartment and circuitry.
- Store the remote in a cool, dry place, away from direct sunlight, high humidity, and extreme temperatures.

Troubleshooting

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the positive (+) and negative (-) terminals aligned as indicated.
 - Replace old or depleted batteries with new AA batteries.
 - Ensure there is a clear line of sight between the remote control's infrared emitter and the TV's infrared sensor. Remove any obstructions.
 - Try moving closer to the television to ensure the signal reaches the sensor.
- **Buttons Unresponsive:**
 - Clean the remote control surface, especially around the buttons, to remove any dirt, dust, or debris that might be obstructing them.
 - If specific buttons are consistently unresponsive after battery replacement and cleaning, the remote may need to be replaced.

Specifications

Brand	UpStart Components
Model Number	RC-VR2-DL37

Compatible Devices	Television (Vizio VR2, VW37LHDTV40A)
Connectivity Technology	Infrared
Controller Type	Button Control
Power Source	2 x AA Batteries (not included)
Special Feature	Ergonomic
Color	Black

Warranty Information

This product is a replacement part manufactured by UpStart Components. Any warranties for this product are offered solely by UpStart Components. This product is not affiliated with any OEM brands and is not covered under any warranties offered by the original manufacturers.

For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact UpStart Components directly.

Customer Support

For further assistance or inquiries regarding your UpStart Components replacement remote control, please contact the manufacturer directly.

When contacting support, please ensure you have your product model number (RC-VR2-DL37) and purchase information available to facilitate a quicker resolution.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question