

MAJORITY Snowdon

MAJORITY Snowdon Bluetooth Soundbar User Manual

Model: Snowdon | Brand: MAJORITY

1. INTRODUCTION

Thank you for choosing the MAJORITY Snowdon Bluetooth Soundbar. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.



Image: The MAJORITY Snowdon Soundbar, a sleek black unit, is shown with its remote control. Key features like Bluetooth connectivity, 120 Watts power output, and 2.1 audio channels are highlighted.

2. SAFETY INFORMATION

Please observe the following safety precautions:

- Do not expose the unit to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not attempt to open or repair the unit yourself. Refer all servicing to qualified personnel.
- Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- MAJORITY Snowdon Soundbar
- Remote Control
- Power Adapter
- 3.5mm Audio Cable (AUX Cable)
- RCA Cable
- User Manual
- Wall Mounting Screws and Plugs (for optional wall installation)



MAJORITY Snowdon

H 8.5cm
L 81cm
W 8.5cm



**Remote
Control**



**RCA
Cable**



**AUX
Cable**



Mains Power



User Manual

Image: A clear layout of the MAJORITY Snowdon Soundbar and its accessories. The soundbar is positioned at the top, with the remote control, RCA cable, AUX cable, power adapter, and user manual arranged below it.

4. PRODUCT OVERVIEW

4.1 Front and Top Panel Controls

- **POWER:** Press to turn the unit on or off.
- **SOURCE:** Press to cycle through input modes (Bluetooth, Optical, AUX, RCA).
- **VOL+:** Increase volume.
- **VOL-:** Decrease volume.
- **PAIR:** Press and hold to initiate Bluetooth pairing.
- **LINE IN:** 3.5mm AUX input port.

4.2 Rear Panel Connections

- **OPTICAL IN:** For connecting to devices via optical cable.
- **DC 18V:** Power input port.

- **L/R RCA:** For connecting to devices via RCA cables.



Image: A close-up of the rear panel of the soundbar, clearly displaying the various input ports including AUX, Optical, and RCA connections, along with the DC 18V power input.

5. SETUP

5.1 Placement

The soundbar can be placed on a flat surface in front of your TV or wall-mounted.

- **Tabletop Placement:** Position the soundbar on a stable, flat surface directly below your television.
- **Wall Mounting:** Use the provided screws and plugs to securely mount the soundbar to a wall. Ensure the wall can support the weight of the soundbar.



Image: The MAJORITY Snowdon Soundbar is shown mounted on a wall directly beneath a television, demonstrating its wall-mountable capability in a home environment.

5.2 Connecting to Power

1. Connect the power adapter to the DC 18V input port on the rear of the soundbar.
2. Plug the power adapter into a wall outlet.

5.3 Audio Connections

Choose one of the following methods to connect your audio source:

5.3.1 Bluetooth Connection

1. Press the **POWER** button on the soundbar or remote to turn it on.
2. Press the **SOURCE** button repeatedly until 'BT' (Bluetooth) mode is selected. The indicator light will flash.
3. On your device (e.g., smartphone, tablet), enable Bluetooth and search for 'MAJORITY Snowdon'.
4. Select 'MAJORITY Snowdon' to pair. Once connected, the indicator light will stop flashing.



MAJORITY



Image: The MAJORITY Snowdon Soundbar is depicted alongside a smartphone, which shows a music player interface and a prominent 'Bluetooth 5.0' graphic, illustrating wireless connectivity.

5.3.2 Optical Connection

1. Connect one end of an optical cable to the OPTICAL OUT port on your TV or audio device.
2. Connect the other end to the **OPTICAL IN** port on the soundbar.
3. Press the **SOURCE** button on the soundbar or remote until 'OPT' (Optical) mode is selected.

5.3.3 AUX Connection

1. Connect one end of the 3.5mm audio cable to the headphone jack or AUX OUT port on your device.
2. Connect the other end to the **LINE IN** port on the soundbar.
3. Press the **SOURCE** button on the soundbar or remote until 'AUX' mode is selected.

5.3.4 RCA Connection

1. Connect the red and white plugs of the RCA cable to the corresponding audio output ports on your TV or audio device.
2. Connect the other end of the RCA cable to the **L/R RCA** input ports on the soundbar.
3. Press the **SOURCE** button on the soundbar or remote until 'RCA' mode is selected.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

Press the **POWER** button on the soundbar or remote control to turn the unit on or off.

6.2 Source Selection

Press the **SOURCE** button on the soundbar or remote control to switch between input modes: Bluetooth, Optical, AUX, and RCA.

6.3 Volume Control

Use the **VOL+** and **VOL-** buttons on the soundbar or the volume buttons on the remote control to adjust the audio level.

6.4 Remote Control Functions

The included remote control provides convenient access to all soundbar functions:

- **Power:** Turn the soundbar on or off.
- **Source:** Select input mode.
- **Volume Up/Down:** Adjust volume level.
- **Mute:** Mute or unmute the sound.
- **Play/Pause:** Control media playback in Bluetooth mode.
- **Previous/Next Track:** Skip tracks in Bluetooth mode.
- **EQ Modes:** Select preset equalizer settings (e.g., Music, Movie, News).

7. MAINTENANCE

To ensure the longevity and optimal performance of your soundbar:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the soundbar. Do not use liquid cleaners or abrasive materials.
- **Storage:** If storing the soundbar for an extended period, disconnect it from power and store it in a cool, dry place.
- **Avoid Obstructions:** Ensure no objects block the speaker grilles or ventilation openings.

8. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not active	Check power cable connection; Try a different power outlet
No sound	Incorrect input source selected; Volume too low; Audio cable not connected properly	Select correct input source; Increase volume; Reconnect audio cables securely

Problem	Possible Cause	Solution
Bluetooth pairing fails	Soundbar not in pairing mode; Device too far; Interference	Ensure soundbar is in BT pairing mode; Move device closer; Turn off other Bluetooth devices
Distorted sound	Volume too high; Poor audio source quality; Loose cable connection	Reduce volume; Try a different audio source; Check cable connections

9. SPECIFICATIONS

Feature	Detail
Model Name	Snowdon
Brand	MAJORITY
Power Output	120 Watts
Sound Channels	2.1 (with integrated subwoofer)
Connectivity Technology	Bluetooth, AUX, Optical, RCA
Bluetooth Version	5.0
Dimensions (L x D x H)	81 cm x 8.3 cm x 8.3 cm
Weight	1.2 Kilograms
Frequency Response	18 KHz
Control Method	Remote Control
Material	Plastic
Color	Black
Mounting Type	Wall Mountable



Image: The MAJORITY Snowdon Soundbar is displayed with its accessories, including the remote, power adapter, and various cables. Dimensions are overlaid on the image, showing the soundbar's length as 36 inches (approximately 91.4 cm), depth as 3.5 inches (approximately 8.9 cm), and height as 2.6 inches (approximately 6.6 cm).

MAJORITY



Image: A detailed view of the soundbar's internal speaker component, emphasizing its 120W power output and Xtra Bass technology for enhanced low-frequency audio.

10. WARRANTY AND SUPPORT

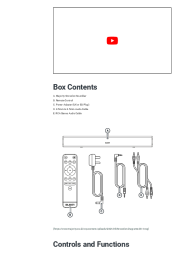 
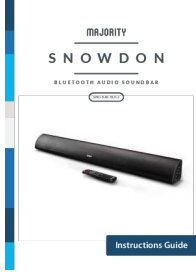 
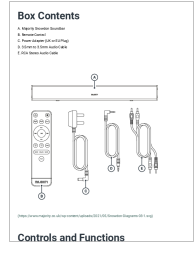 
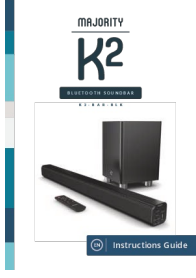 
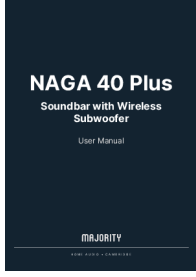 
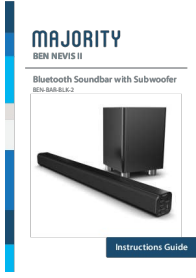 
10.1 Warranty Information

The MAJORITY Snowdon Soundbar comes with a **3-year extended warranty**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty card included in your package or visit the official MAJORITY website.

10.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact MAJORITY customer support through their official website or the contact information provided in your product documentation.

Related Documents - Snowdon

	<p>Majority Snowdon Soundbar User Manual and Instructions</p> <p>Comprehensive user manual for the Majority Snowdon Soundbar, covering box contents, controls, functions, setup instructions for RCA, Optical, AUX, and Bluetooth inputs, wall mounting, specifications, and safety information.</p>
	<p>Majority Snowdon Bluetooth Audio Soundbar Instructions Guide</p> <p>This guide provides instructions for setting up and using the Majority Snowdon Bluetooth Audio Soundbar, including controls, connections, troubleshooting, specifications, and safety information.</p>
	<p>Majority Snowdon Soundbar: User Manual and Instructions</p> <p>A comprehensive guide to the Majority Snowdon Soundbar (SNO-BAR-BLK), detailing box contents, controls, setup instructions for various inputs (RCA, Optical, AUX, Bluetooth), audio settings, wall mounting, specifications, and important safety information.</p>
	<p>Majority K2 Bluetooth Soundbar Instructions Guide</p> <p>This guide provides instructions for setting up and using the Majority K2 Bluetooth Soundbar, including controls, connections, Bluetooth operation, FM mode, troubleshooting, specifications, warranty, and safety information.</p>
	<p>Majority NAGA 40 Plus Soundbar User Manual</p> <p>User manual for the Majority NAGA 40 Plus Soundbar with Wireless Subwoofer, covering setup, operation, features, troubleshooting, and specifications. Enhance your home audio experience with Majority.</p>
	<p>Majority Ben Nevis II Bluetooth Soundbar with Subwoofer - Instructions Guide</p> <p>This document provides instructions for setting up and using the Majority Ben Nevis II Bluetooth Soundbar with Subwoofer, including controls, connections, Bluetooth operation, FM mode, troubleshooting, specifications, and safety information.</p>