

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [HOFSTEIN](#) /

› HOFSTEIN Oravi Ceiling Light H3259092 Instruction Manual

HOFSTEIN H3259092

HOFSTEIN Oravi Ceiling Light Instruction Manual

Model: H3259092

1. INTRODUCTION

Thank you for choosing the HOFSTEIN Oravi Ceiling Light. This manual provides essential information for the safe installation, operation, and maintenance of your new ceiling light. Please read these instructions carefully before installation and retain them for future reference.



Figure 1: HOFSTEIN Oravi Ceiling Light in operation, showcasing its unique light effect.

2. SAFETY INSTRUCTIONS

- **Electrical Safety:** Installation must be performed by a qualified electrician or competent person in accordance with local wiring regulations.
- **Power Disconnection:** Always disconnect the main power supply before installation, maintenance, or bulb replacement to prevent electric shock.
- **Voltage:** Ensure the supply voltage is compatible with the light fixture.
- **Bulb Type:** Use only E27 bulbs with a maximum wattage of 60W. Compatible with LED, eco-halogen, and energy-saving lamps.
- **Environment:** This light fixture is designed for indoor use only (IP20 protection class). Do not expose to moisture or extreme temperatures.
- **Handling:** Handle the light fixture with care to avoid damage.

3. PACKAGE CONTENTS

Please check that all components are present before beginning installation:

- 1 x HOFSTEIN Oravi Ceiling Light fixture
- Mounting Hardware (screws, wall plugs)
- *Note: Bulb is not included.*

4. INSTALLATION GUIDE

Follow these steps for safe and correct installation:

1. **Prepare the Installation Area:** Ensure the power supply to the installation area is switched off at the main circuit breaker.
2. **Mark Drilling Points:** Hold the mounting bracket (part of the light fixture's base) against the ceiling at the desired installation location. Use a pencil to mark the drilling points.
3. **Drill Holes:** Drill holes at the marked points suitable for the provided wall plugs. Insert the wall plugs.
4. **Secure Mounting Bracket:** Attach the mounting bracket to the ceiling using the provided screws. Ensure it is firmly secured.
5. **Electrical Connection:** Connect the household electrical wires to the terminal block on the light fixture's base. Ensure correct polarity (Live, Neutral, Earth). Refer to local wiring codes.
6. **Attach Light Fixture:** Carefully align the light fixture with the secured mounting bracket and attach it. Secure the fixture to the bracket using the appropriate screws or locking mechanism.
7. **Install Bulb:** Insert an E27 bulb (max. 60W) into the socket.
8. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.

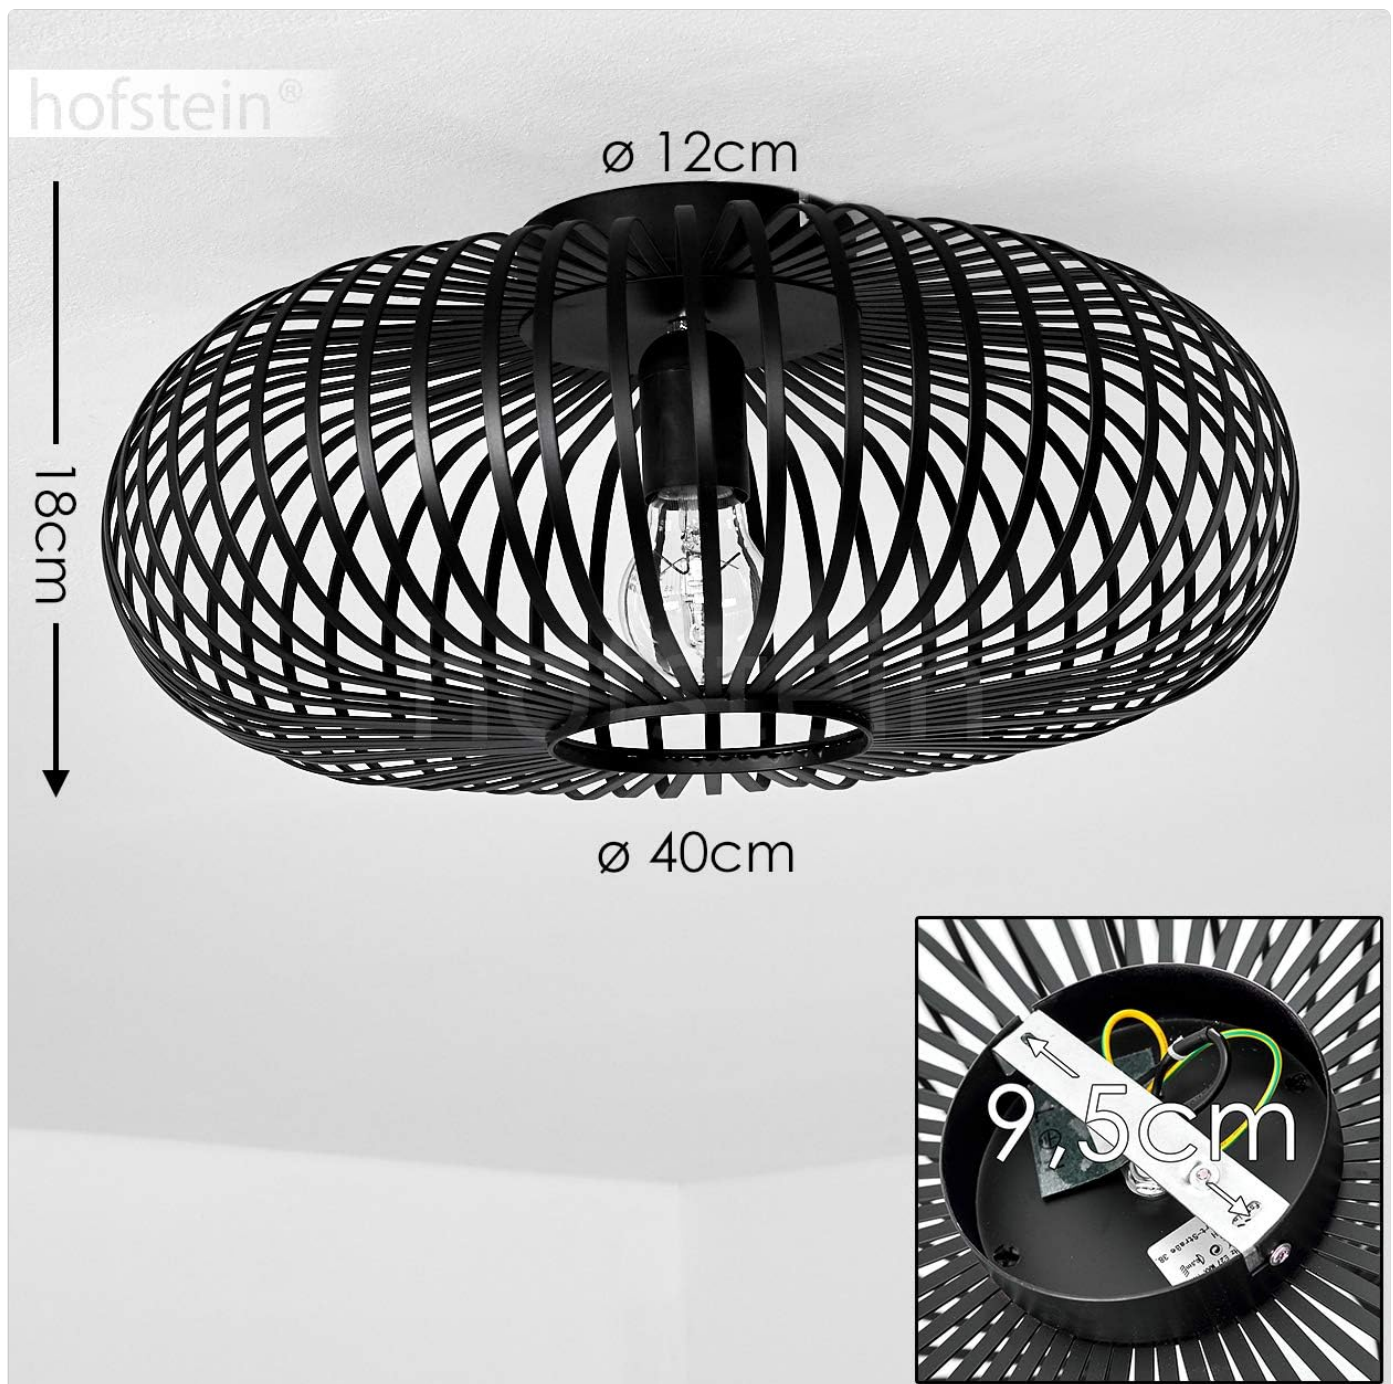


Figure 2: Product dimensions and wiring connection detail for installation.



Figure 3: Detail of the light fixture's internal structure and bulb socket.

5. OPERATING INSTRUCTIONS

Once installed and powered, the HOFSTEIN Oravi Ceiling Light operates via a standard wall light switch. Ensure a compatible E27 bulb is correctly inserted into the socket before switching on the power.

- **Bulb Type:** The fixture uses one E27 bulb.
- **Maximum Wattage:** Do not exceed 60 watts for the bulb.
- **Switching On/Off:** Use your existing wall switch to control the light.

6. MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents.

- **Bulb Replacement:** Disconnect power. Allow the old bulb to cool completely before carefully unscrewing it. Insert a new E27 bulb (max. 60W) by screwing it clockwise until snug. Do not overtighten.
- **Inspection:** Periodically check the fixture for any signs of damage or loose connections. If any issues are found, disconnect power and consult a qualified electrician.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Bulb is faulty or not installed correctly. Loose wiring connection.	Check circuit breaker. Replace bulb or ensure it is screwed in properly. Disconnect power and check wiring connections (consult electrician if unsure).
Light flickers.	Loose bulb. Incompatible bulb type. Faulty wiring.	Tighten bulb. Ensure bulb is compatible (E27, max 60W). Disconnect power and check wiring (consult electrician).

8. SPECIFICATIONS

Brand: HOFSTEIN

Model Number: H3259092

Dimensions (L x W x H): 40 x 40 x 18 cm

Weight: 2.3 kg

Material: Metal

Color: Black

Number of Lights: 1

Socket Type: E27

Max Wattage: 60 watts

Compatible Bulb Types: LED, Eco-Halogen, Energy-Saving Lamps

Protection Class: IP20 (Indoor use only)

Included Components: Mounting Hardware

Power Source: Corded Electric

Switch Style: Light Switch (external)

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the retailer where the product was purchased or visit the official HOFSTEIN website. Keep your purchase receipt as proof of purchase.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07GYTXTQG>

More documents and user manuals: **<https://manuals.plus/>**