

[Manuals.plus](#) /

› [KaraoKing](#) /

› Karaoke Machine - Portable PA System User Manual

KaraoKing ogreww-425

KaraoKing Portable PA System Karaoke Machine User Manual

Model: **ogreww-425** | Brand: **KaraoKing**

1. PRODUCT OVERVIEW

The KaraoKing Portable PA System Karaoke Machine is designed to provide a complete entertainment experience for both adults and children. This versatile system combines a high-quality speaker, wireless microphones, dynamic lighting, and multiple connectivity options, making it ideal for parties, gatherings, or personal practice sessions.

Key Features:

- **Perfect Package:** High-quality speaker, two wireless microphones for solos and duets, and dancing disco ball lights.
- **Multiple Connectivity:** Supports USB, AUX, Bluetooth, and FM radio for diverse audio sources.
- **Kid-Friendly Design:** Durable construction suitable for children's use, with a magic mic for kids.
- **Portability:** Equipped with built-in wheels for easy transport, allowing you to take the party anywhere.
- **Long-lasting Performance:** Designed for extended use, ensuring continuous entertainment.
- **Included Accessories:** Comes with a free phone/tablet holder that attaches to the machine.



Figure 1: KaraoKing Portable PA System Karaoke Machine with included accessories.

2. SETUP GUIDE

2.1 Unboxing and Initial Inspection

Carefully remove all components from the packaging. Verify that all items listed in the "What's in the Box" section (Bluetooth, Voice Tune, Recorder, 2 wireless microphones, remote, power adapter, audio cables, phone/tablet holder) are present and undamaged. Place the unit on a stable, flat surface.

2.2 Charging the Unit

Before first use, fully charge the karaoke machine. Connect the provided power adapter to the "DC IN 15V/2A" port on the control panel and plug it into a standard wall outlet. The charging indicator light will show the charging status. A full charge provides up to 6 hours of battery life.

2.3 Connecting Microphones

The system includes two wireless microphones. These microphones are pre-paired with the unit and should connect automatically when powered on. Ensure the microphones have fresh batteries. For wired microphones, connect them to the "MIC IN" jack on the control panel.



Figure 2: Overview of connection options and included wireless microphones.

3. OPERATING INSTRUCTIONS

3.1 Power On/Off

To power on the unit, locate the main power switch on the control panel and slide it to the "ON" position. To power off, slide the switch back to "OFF".

3.2 Connecting to Audio Sources

- **Bluetooth:** Turn on the unit and enable Bluetooth on your smartphone or tablet. Search for "KaraoKing" in your device's Bluetooth settings and pair. The unit will confirm successful connection.
- **AUX:** Connect your audio device (e.g., phone, MP3 player) to the "AUX IN" port using the provided audio

cable.

- **USB/TF Card:** Insert a USB drive or TF (MicroSD) card into the respective slot on the control panel. The unit will automatically detect and play compatible audio files.
- **FM Radio:** Switch to FM radio mode using the "MODE" button. Use the "CH-" and "CH+" buttons to scan for stations.

3.3 Using the Microphones

Adjust the microphone volume using the "Mic.Vol" knob. The "Echo.Vol" knob controls the echo effect for the microphones, enhancing vocal performance. Ensure microphones are powered on for wireless use.

3.4 Light Modes

The unit features a disco ball and front panel lights. Use the "LED ON/OFF" switch to control the lights. The disco ball projects colorful patterns, and the front lights can flash to the beat of the music, creating a dynamic atmosphere.



Figure 3: Control panel with options for turning party lights on or off.

3.5 Recording Function

To record your karaoke performance, insert a TF card into the designated slot. Press the "REC" button to start recording. Press it again to stop. Recorded files will be saved on the TF card.

3.6 Equalizer Adjustment

The "MASTER EQUALIZATION" section allows you to fine-tune the audio output. Adjust the sliders for different frequency bands (50Hz, 400Hz, 1KHz, 7KHz, 12KHz) to customize the sound to your preference, enhancing bass, treble, or mid-range frequencies.

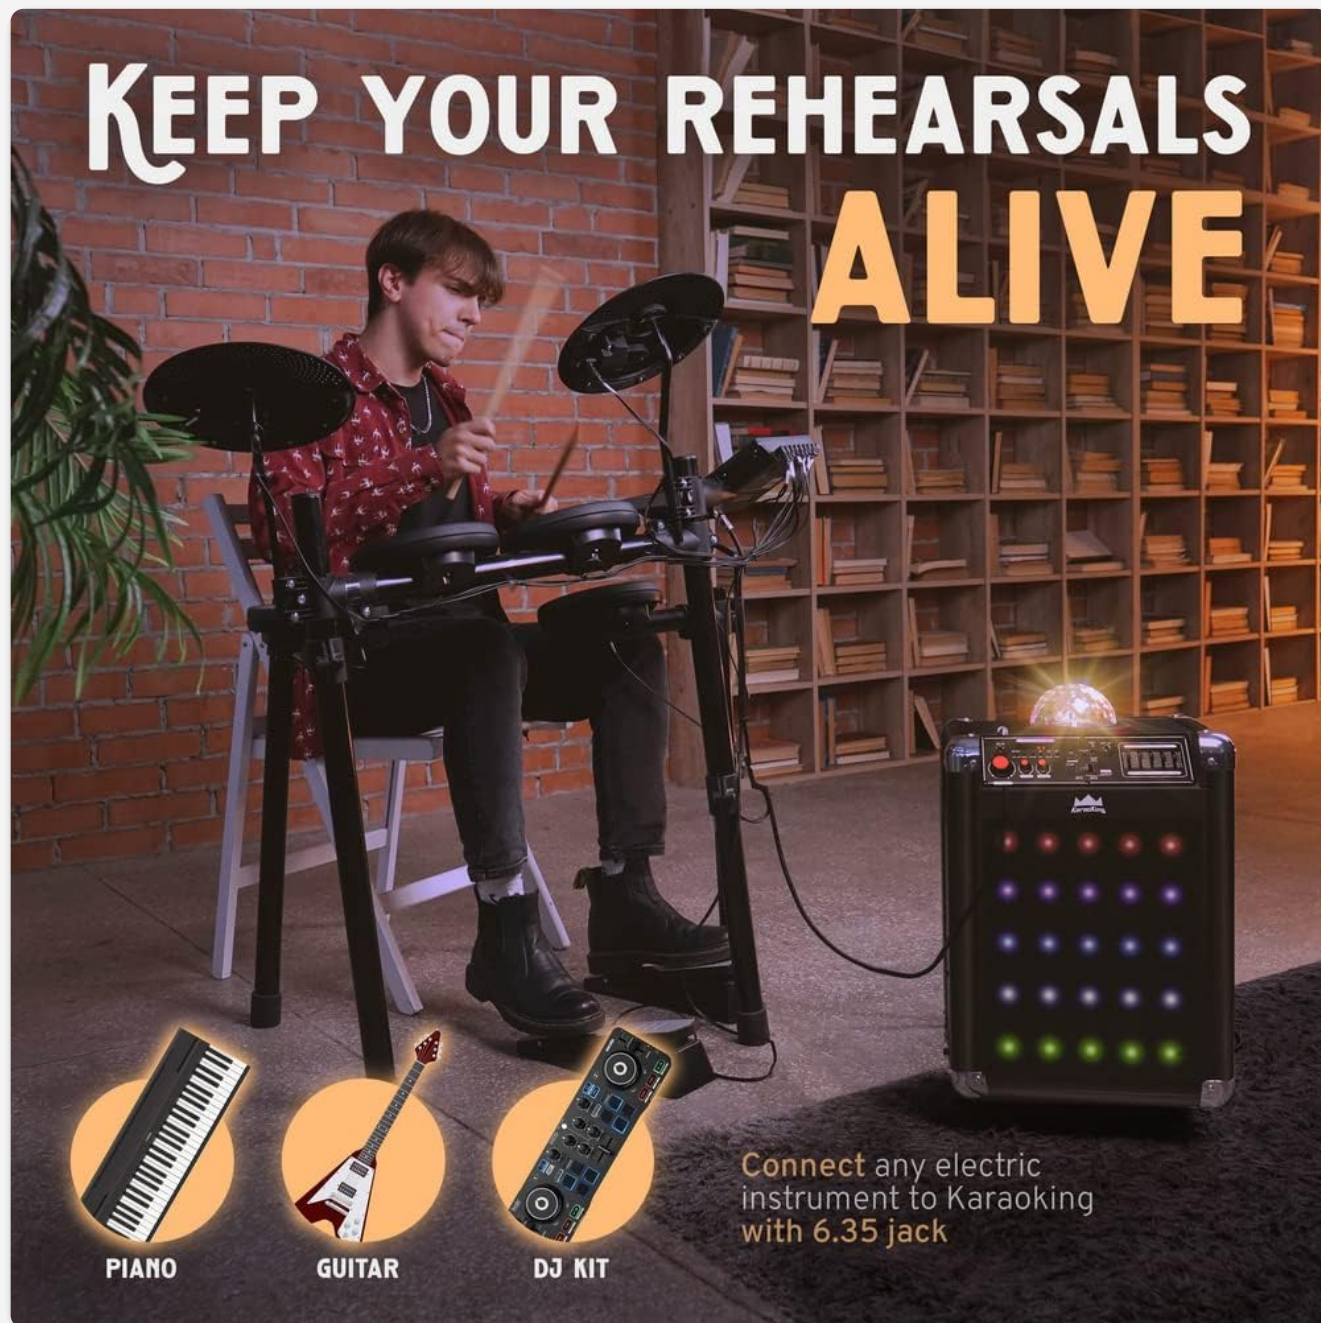


Figure 4: Detailed view of the control panel for adjusting sound and recording.

3.7 Official Product Video

Your browser does not support the video tag.

Video 1: "Party and Rock & Roll made easy!!!" - This video demonstrates the various features and ease of use of the KaraoKing Karaoke Machine, including microphone usage, light effects, and connectivity options.

4. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the unit frequently. Charge it regularly, even if not in use for extended periods.
- **Microphone Care:** Handle microphones with care. Avoid dropping them. If not in use for a long time, remove batteries to prevent leakage.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Low battery or power adapter issue.	Ensure the unit is fully charged. Check power adapter connection and wall outlet.
No sound from speaker.	Volume too low, incorrect input mode, or disconnected audio source.	Increase master volume. Verify correct input mode (Bluetooth, AUX, USB). Check audio cable connections.
Microphone not working.	Microphone not powered on, low battery, or out of range.	Ensure microphone is switched on. Replace batteries. Move closer to the main unit. Adjust "Mic.Vol" knob.
Lights not working.	LED switch is off.	Toggle the "LED ON/OFF" switch to activate the lights.
Bluetooth connection issues.	Device too far, interference, or pairing issue.	Ensure your device is within range (approx. 30 feet). Turn off and on Bluetooth on both devices. Forget device and re-pair.

6. PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	14.4 x 9.6 x 18.5 inches
Item Weight	23.9 pounds
Manufacturer	KaraoKing
ASIN	B07GZ8DCZ3
Item Model Number	ogreww-425
Brand	KaraoKing
Special Feature	Portable
Color	Black
Included Components	Bluetooth, Voice Tune, Recorder
Recommended Uses	For Televisions, For Smartphones or Tablets

Feature	Detail
First Available Date	August 30, 2018

7. WARRANTY AND SUPPORT

The KaraoKing Karaoke Machine comes with a 30-day warranty. If you experience any defects within this period, please contact customer support for assistance. For issues arising after 30 days, please still reach out to the manufacturer for further support.

For detailed information and additional support, you may refer to the official User Manual PDF available [here](#).

