

TopWit GLH-120A

TOPWIT GLH-120A 3L Electric Hot Pot Instruction Manual

Model: GLH-120A | Brand: TopWit

[Introduction](#) [Features](#) [Components](#) [Setup](#) [Operation & Support](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#)

1. INTRODUCTION

Thank you for purchasing the TOPWIT GLH-120A 3L Electric Hot Pot. This appliance is designed for versatile cooking, including deep frying, steak, pasta, and shabu shabu. Please read this manual thoroughly before use to ensure safe and efficient operation. Keep this manual for future reference.

Important Safety Instructions

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- The inner pot features a food-grade non-stick coating. Avoid using metal utensils that could scratch the surface.
- The appliance is equipped with overheat protection, which automatically shuts off power if the pot is dry or overheated.

2. PRODUCT FEATURES

- **3L Large Capacity:** With a depth of 3.34 inches and a diameter of 10.43 inches, this electric hot pot holds up to 3 liters of liquid, suitable for 3 to 6 people.

- **Dual Power Electric Pot:** Offers two adjustable power levels (400W and 1000W) to meet various cooking needs. The low setting (400W) is ideal for eggs, oatmeal, instant noodles, or pancakes, while the high setting (1000W) is suitable for steaks, hot pot, frying chicken, and French fries.
- **Portable Design:** Moderate size with a dual-handle design for easy portability, making it convenient for use in families, dorms, offices, camping, or RV trips. The power cord is non-detachable to prevent loss.
- **Multiple Vent Holes & Visible Glass Lid:** The lid features four vent holes to dissipate steam and reduce pressure, enhancing cooking results. The transparent glass lid allows for easy monitoring of food without lifting.
- **Healthy Material & High Safety:** The inner pot is made with a food-grade non-stick coating, free from BPA and PFAS, promoting healthier cooking with less oil and easy cleaning. Includes overheat protection for safety.



Image: The TOPWIT Electric Hot Pot showcasing its dual power settings (450W and 1000W) for various dishes like ramen, eggs, oatmeal, steak, hot pot, and deep fry.

Multi-use Electric Pot

ONE POT =



Saute Pan



Deep Fryer



Slower Cooker



Hot Pot



Steamer



Image: The TOPWIT Electric Hot Pot being used for a multi-purpose meal, illustrating its versatility as a saute pan, deep fryer, slower cooker, hot pot, and steamer.



Image: Close-up of the TOPWIT Electric Hot Pot showing the cool-touch handle and the visible glass lid with four steam vents.

3. COMPONENTS

The TOPWIT GLH-120A Electric Hot Pot includes the following components:

- Electric Hot Pot Unit (with non-detachable power cord)
- Glass Lid with Handle and Vent Holes
- Egg Steamer Rack (if included in your package)
- Instruction Manual

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future transport.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Clean:** Before first use, wash the inner pot and glass lid with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the pot with a damp cloth. Do not immerse the main unit with the power cord in water.
4. **Placement:** Place the electric hot pot on a stable, flat, heat-resistant surface away from flammable materials. Ensure there is adequate ventilation around the unit.
5. **Power Connection:** Ensure the power switch is in the "OFF" position before plugging the non-detachable power cord into a suitable electrical outlet (110V).

5. OPERATING INSTRUCTIONS

General Cooking

1. Add desired ingredients and liquid (if applicable) to the inner pot. Do not exceed the maximum fill line.
2. Place the glass lid on the pot.
3. Plug the appliance into a power outlet.
4. Select the desired power level using the switch on the handle:
 - **Low (400W):** Suitable for gentle heating, simmering, cooking eggs, oatmeal, or instant noodles.
 - **High (1000W):** Ideal for rapid boiling, frying, cooking steaks, or hot pot.
5. The indicator light will illuminate when the power is on.
6. Monitor your food through the glass lid. Adjust the power setting as needed.
7. Once cooking is complete, switch the power to "OFF" and unplug the appliance from the outlet.
8. Use caution when serving hot food.

Using the Egg Steamer Rack (if included)

1. Pour water into the pot, ensuring it does not cover the egg steamer rack when placed inside.
2. Place the egg steamer rack into the pot.
3. Carefully place eggs into the designated holes on the rack.
4. Cover with the glass lid.
5. Select the desired power level (usually Low for steaming).
6. Steam until eggs reach desired doneness.
7. Switch off and unplug. Use caution when removing hot eggs and rack.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your TOPWIT Electric Hot Pot.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Inner Pot Cleaning:** The inner pot has a non-stick coating. Clean it with warm soapy water and a soft sponge. Avoid abrasive cleaners or metal scouring pads that can damage the non-stick surface. Rinse thoroughly and dry.
3. **Exterior Cleaning:** Wipe the exterior of the pot with a damp cloth. Do not immerse the main unit (with the power cord) in water or any other liquid.
4. **Lid Cleaning:** The glass lid can be washed with warm soapy water, rinsed, and dried.
5. **Storage:** Ensure all parts are clean and dry before storing. Store the appliance in a cool, dry place.

Perfect for Deep Frying



Image: The TOPWIT Electric Hot Pot being cleaned under a faucet, highlighting its non-stick coating and ease of washing. The non-detachable power cord is also visible.

7. TROUBLESHOOTING

If you encounter issues with your TOPWIT Electric Hot Pot, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power switch off; power outage.	Ensure the power cord is securely plugged into a working outlet. Turn the power switch to the "ON" position. Check your household's power supply.
Food is not heating or cooking slowly.	Incorrect power setting; insufficient liquid; lid not properly sealed.	Ensure the power switch is set to the appropriate level (High for faster cooking). Add sufficient liquid if cooking requires it. Ensure the lid is placed correctly.
Appliance automatically shuts off during use.	Overheat protection activated (pot is dry or overheated).	This is a safety feature. Unplug the appliance and allow it to cool down. Check if there is enough liquid in the pot. Do not operate without liquid.
Plastic smell during initial use.	Normal for new appliances.	A slight odor may occur during the first few uses. This is normal and will dissipate. Ensure good ventilation.

8. SPECIFICATIONS

- **Model Name:** GLH-120A

- **Brand:** TopWit
- **Capacity:** 3 Liters
- **Power Levels:** 400W (Low), 1000W (High)
- **Product Dimensions:** 5.8"L x 5.2"W x 8.8"H
- **Item Weight:** 2.55 pounds (1.16 Kilograms)
- **Material:** Stainless Steel (inner pot with non-stick coating)
- **Color:** Dark Black
- **UPC:** 720355125530, 720355125608
- **Manufacturer:** TOPWIT
- **Country of Origin:** China

9. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit the official TopWit website. Keep your purchase receipt as proof of purchase.