

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Easytry123](#) /

› **Easytry123 Replacement Remote Control User Manual for Philips Smart 3D LED HDTV TV Models L3118T/12, YKF319-007, 42PFL7008K/12, 46PFL8007K/12**

## Easytry123 Easytry2179

# Easytry123 Replacement Remote Control User Manual

For Philips Smart 3D LED HDTV TV Models L3118T/12, YKF319-007, 42PFL7008K/12, 46PFL8007K/12

## 1. INTRODUCTION

This manual provides instructions for the setup, operation, and basic maintenance of your Easytry123 Replacement Remote Control. This remote is designed to be compatible with specific Philips Smart 3D LED HDTV TV models, including L3118T/12, YKF319-007, 42PFL7008K/12, and 46PFL8007K/12. Please read this manual thoroughly to ensure proper use and functionality.

### Important Note:

- This is a replacement remote control. While it is designed for compatibility, it may not support all advanced functions present on the original remote control.
- Batteries are not included with this product and must be purchased separately.

## 2. PRODUCT OVERVIEW

The Easytry123 Replacement Remote Control (Model: Easytry2179) is an ergonomic, button-controlled device utilizing infrared technology for communication with your television. Its design focuses on ease of use for common television functions.



Figure 2.1: Front view of the Easytry123 Replacement Remote Control, showing the button layout for various functions including power, channel, volume, navigation, and smart TV access.

## 3. SETUP

---

### 3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3.1: Back view of the remote control with the battery cover removed, illustrating the battery placement area.

### 3.2 Compatibility Check

Before use, verify that your television model is listed as compatible. This remote control is specifically designed for Philips Smart 3D LED HDTV TV models L3118T/12, YKF319-007, 42PFL7008K/12, and 46PFL8007K/12. If your model number is not listed, the remote may not function correctly or at all.

## 4. OPERATING INSTRUCTIONS

---

Once batteries are installed and compatibility is confirmed, the remote control is ready for immediate use. Point the remote control directly at your television's infrared receiver.

### 4.1 Basic Functions

- **Power Button:** Turns the TV on or off.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes the television channel.
- **Number Buttons (0-9):** Directly select channels or input numerical data.
- **Mute Button:** Silences the TV audio.
- **Source/Input Button:** Cycles through available input sources (HDMI, AV, etc.).
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.

Refer to your television's user manual for specific functions related to its menu system and smart features, as the remote's buttons are designed to send standard commands.

## 5. MAINTENANCE

---

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote away from direct sunlight, heat sources, and moisture.

## 6. TROUBLESHOOTING

---

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new ones.
  - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
  - Confirm that the remote control is pointed directly at the TV.
- **Some functions do not work:**
  - As a replacement remote, it may not support all advanced or specific functions of your original TV remote. This is normal for universal or replacement remotes.
  - Ensure your TV model is explicitly listed as compatible.

## 7. SPECIFICATIONS

---

Feature	Detail
Brand	Easytry123
Model Number	Easytry2179
Compatible Devices	Philips Smart 3D LED HDTV TV (Models: L3118T/12, YKF319-007, 42PFL7008K/12, 46PFL8007K/12)
Connectivity Technology	Infrared
Controller Type	Button Control
Special Feature	Ergonomic Design

## 8. WARRANTY AND SUPPORT

Information regarding specific warranty terms for the Easytry123 Replacement Remote Control is not provided within the product details. For any support inquiries or to obtain warranty information, please contact the seller or manufacturer directly through your purchase platform.