

[Manuals.plus](#) /

› [Easytry123](#) /

› Easytry123 Replacement Remote Control User Manual for Philips HDTVs (Models: 46PFL5007K/12, 40PFL4308H/12, 46PFL3108H, 39PFL3108HSmart)

Easytry123 Easytry2164

Easytry123 Replacement Remote Control User Manual

For Philips 3D LED HDTV TV Models: 46PFL5007K/12, 40PFL4308H/12, 46PFL3108H, 39PFL3108HSmart

1. INTRODUCTION

This manual provides instructions for the setup and operation of your Easytry123 replacement remote control. This remote is designed to be compatible with specific Philips 3D LED HDTV TV models. Please refer to the compatibility list to ensure your TV model is supported.

Important Note: While this remote is a functional replacement, it may not support all advanced functions present on your original Philips remote control. No instructions are included with the physical product, so please retain this digital manual for future reference.

2. PACKAGE CONTENTS

- 1 x Easytry123 Replacement Remote Control (Model: Easytry2164)

Batteries and a physical instruction manual are not included in the package.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.



Image: Back of the remote control with the battery cover open, revealing the battery slots. This illustrates how to access the battery compartment for installation.

3.2. Initial Use

The Easytry123 replacement remote control is pre-programmed for the listed Philips TV models. No additional programming or setup is typically required. Once batteries are installed, point the remote towards your Philips TV and begin operation.

4. OPERATING INSTRUCTIONS

The remote control features standard buttons for TV operation. Below is a general overview of common functions. Refer to your Philips TV's original manual for specific functions of each button if needed.



Image: Front view of the replacement remote control, displaying all buttons and their labels. This image helps users identify the various controls.

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Direct channel selection.
- **Channel Up/Down (CH+/CH-):** Changes TV channels sequentially.
- **Volume Up/Down (VOL+/VOL-):** Adjusts the TV volume.
- **Mute:** Silences the TV audio.
- **Source/Input:** Selects input sources (HDMI, AV, etc.).
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Menu/Home:** Accesses the TV's main menu or smart TV interface.
- **Back/Exit:** Returns to the previous screen or exits a menu.
- **Info:** Displays program information.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward):** Controls media playback if supported by the TV.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote is not working.	◦ Check if batteries are inserted correctly with the correct polarity (+/-). ◦ Replace old batteries with new AAA batteries. ◦ Ensure there are no obstructions between the remote and the TV's infrared sensor. ◦ Confirm the remote is pointed directly at the TV.
Some functions do not work.	◦ This replacement remote may not support all advanced or smart TV functions of your original remote. ◦ Ensure your TV model is listed as compatible.
Remote works intermittently.	◦ Batteries may be low; replace them. ◦ Ensure a clear line of sight to the TV's IR receiver.

7. SPECIFICATIONS

- **Model:** Easytry2164
- **Brand:** Easytry123
- **Compatible Devices:** Philips 3D LED HDTV TV (Specific models listed in title)
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)

8. WARRANTY AND SUPPORT

This product is a replacement remote control. For specific warranty information, please refer to the seller's policy on the platform where the purchase was made. As a third-party replacement, warranty terms may differ from original manufacturer products.

For further assistance or inquiries, please contact the seller directly through the platform's messaging system. Ensure you provide your order details for efficient support.

Note: This product is manufactured by Easytry123 and is not an original Philips product.