

[Manuals.plus](#) /

› [UBay](#) /

› UBay Universal Remote Control for TCL Roku TV (Model TCL RC280) Instruction Manual

UBay TCL RC280

UBay Universal Remote Control for TCL Roku TV (Model TCL RC280)

Instruction Manual

INTRODUCTION

This manual provides instructions for the UBay Universal Remote Control, model TCL RC280, designed for use with various TCL Roku TV models. This remote control offers a direct replacement experience, requiring no programming or pairing. Simply install batteries, and it is ready for immediate use.

COMPATIBILITY

This remote is compatible with a wide range of TCL Roku TV models. It **is not** compatible with Roku Stick or Roku Players.

Compatible TCL Roku TV Models (Partial List):

- 49S405, 55S405, 40S3800, 55US57, 50UP120
- 28S3750, 32S3750, 40FS3750, 48FS3750, 55FS4610R
- 55US5800, 65US5800, 55FS3750, 32S3700, 32S3800
- 48FS3700, 55FS3700, 32S3850(A/B/P), 32S3850A, 32S3850B, 32S3850P
- 40FS3850, 50FS3850, 28S305, 55FS3850, 40FS3800
- 50FS3800, 40FS4610R, 48FS4610R, 43FP110, 49FP110
- 55UP120, 32S4610R, 50FS3750, 32FS3700, 32FS4610R
- 32S800, 32S850, 32S3850, 32S305, 40S305, 43S305, 49S305, 65S405, 43S405

For a complete list of compatible models, please refer to your product packaging or the product description.

SETUP

Installing Batteries

The remote control requires two (2) AAA 1.5V alkaline batteries (not included).

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Image Description: A view of the back of the UBay Universal Remote Control with the battery compartment open, showing two AAA battery slots with positive and negative polarity markings. The battery cover is shown detached next to the remote.

Initial Use

No programming or pairing is required. Once batteries are installed, the remote is ready for immediate use with your compatible TCL Roku TV.

OPERATING INSTRUCTIONS

The UBay Universal Remote Control features standard buttons for navigating your TCL Roku TV.



Image Description: A front and side view of the UBay Universal Remote Control. The front displays standard Roku remote buttons including Power, Home, Back, Directional Pad with OK button, Volume Up/Down, Mute, Play/Pause, Fast Forward, Rewind, and dedicated app buttons for Netflix, Sling, Hulu, and Vudu. The side view shows the ergonomic design.

Button Functions:

- **Power Button** (): Turns the TV on or off.
- **Home Button** (): Returns to the Roku TV home screen.
- **Back Button** (←): Navigates back to the previous screen or menu.
- **Directional Pad** (Up, Down, Left, Right): Navigates through menus and content.
- **OK Button**: Selects highlighted items.
- **Volume Up/Down** (/): Adjusts the TV volume.
- **Mute Button** (): Mutes or unmutes the TV audio.
- **Instant Replay Button** (): replays the last few seconds of video.

- **Options Button** (*): Accesses additional options or settings within an app or menu.
- **Rewind Button** (◀◀): Rewinds video playback.
- **Play/Pause Button** (▶): Plays or pauses video playback.
- **Fast Forward Button** (▶▶): Fast forwards video playback.
- **Dedicated App Buttons** (Netflix, Sling, Hulu, Vudu): Provides direct access to these streaming applications.

MAINTENANCE

Cleaning

To clean the remote, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA 1.5V alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Storage

If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place.

TROUBLESHOOTING

Problem	Solution
Remote not responding	• Ensure batteries are inserted correctly with correct polarity. • Replace old batteries with new AAA 1.5V alkaline batteries. • Ensure there are no obstructions between the remote and the TV's infrared receiver. • Point the remote directly at the TV.
Specific buttons not working	• Check for physical obstructions or debris under the button. • If only app buttons are not working, ensure your TV is connected to the internet and the apps are installed.
Remote works intermittently	• Replace batteries. • Ensure you are within the effective range of the TV's IR receiver.

If issues persist after following these steps, please contact customer support.

SPECIFICATIONS

- **Model:** TCL RC280

- **Brand:** UBay
- **Power Supply:** 2 x 1.5V AAA Alkaline Batteries (not included)
- **Dimensions:** 5.5 x 1.6 x 0.5 inches (13.97 x 4.06 x 1.27 cm)
- **Item Weight:** 1.58 ounces (44.79 grams)
- **Compatible Devices:** TCL Roku Televisions *(Not compatible with Roku Stick or Roku Players)*
- **Special Feature:** Universal (for specified TCL Roku TVs)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact your retailer. For further assistance, you may visit the UBay official website or contact their customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07H1MJQGY>

More documents and user manuals: <https://manuals.plus/>