

[Manuals.plus](#) /

› [HuiYing](#) /

› HuiYing Digital Gold Dial Men's Watch - Model 3s_fulldigital_w_gold1 User Manual

HuiYing 3s_fulldigital_w_gold1

HuiYing Digital Gold Dial Men's Watch

Model: 3s_fulldigital_w_gold1

INTRODUCTION

Thank you for choosing the HuiYing Digital Gold Dial Men's Watch. This manual provides essential information for setting up, operating, and maintaining your watch. Please read it carefully to ensure optimal performance and longevity of your timepiece.

This digital watch features a gold dial, black silicone band, and a plastic case. It includes multiple functions such as a calendar (Month/Day/Date), alarm, stopwatch, LED display with 7 color options, and a backlight. It is also shock-resistant and water-resistant up to 30 meters.

PRODUCT OVERVIEW



Image 1: Front and side view of the HuiYing Digital Gold Dial Men's Watch, showing the digital display, gold-colored case, and control buttons. The watch face displays "HuiYing" and "SPORT".



Image 2: Back view of the HuiYing Digital Gold Dial Men's Watch, showing the stainless steel back plate with "STAINLESS STEEL BACK" and "WATER RESISTANT" engravings, and the black silicone strap with a buckle closure.

SETUP

Initial Power On

Your watch is designed to be ready for use. If the display is off, press any button to activate the LED display. The watch uses an automatic movement type, which means it is powered by the motion of your wrist. For initial setup, ensure the watch has sufficient movement or manually set the time.

Setting Time and Date

1. Locate the "MODE" button (usually on the bottom left or right side).
2. Press the "MODE" button repeatedly until the time setting mode is displayed (e.g., flashing hours).
3. Use the "ADJUST" or "SET" button (usually on the top right) to change the flashing value (hours, minutes, etc.).
4. Use the "LIGHT" or "START" button (usually on the top left or bottom right) to move to the next setting item (e.g.,

from hours to minutes).

5. Repeat steps 3 and 4 to set minutes, year, month, and day.
6. Once all settings are correct, press the "MODE" button to exit the setting mode.

Note: Button labels may vary slightly. Refer to the watch's physical buttons for exact identification.

OPERATING INSTRUCTIONS

Using the LED Display and Backlight

- The watch features an LED display with 7 color options. To activate the backlight, press the "LIGHT" button (typically on the top left).
- Pressing the "LIGHT" button repeatedly may cycle through the 7 LED colors, depending on the model's specific functionality.

Alarm Function

1. From the normal time display, press the "MODE" button until the alarm setting screen appears.
2. Use the "ADJUST" or "SET" button to set the desired alarm time (hours and minutes).
3. Use the "LIGHT" or "START" button to toggle between setting hours and minutes.
4. To turn the alarm ON/OFF, press a specific button (often "START" or "RESET" while in alarm mode). An alarm icon will typically appear on the display when activated.
5. Press "MODE" to return to the normal time display.

Stopwatch Function

1. From the normal time display, press the "MODE" button until the stopwatch screen appears (usually displaying "00:00:00").
2. Press the "START" button (typically on the bottom right) to begin timing.
3. Press "START" again to pause the stopwatch.
4. Press the "RESET" button (often on the top right) to clear the stopwatch to zero.
5. Press "MODE" to return to the normal time display.

MAINTENANCE

Water Resistance

This watch is water-resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Avoid pressing buttons while the watch is wet or submerged to prevent water ingress.

Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and seals.

Battery

The watch features an automatic movement. While it primarily charges through wrist motion, it may also contain a small battery for digital functions. If the display becomes dim or functions are erratic, consult a professional watch repair service.

for inspection.

TROUBLESHOOTING

- **Display is blank or dim:** Ensure the watch has been worn regularly to power the automatic movement. If the issue persists, the internal battery (if present) may need checking by a professional.
- **Time is incorrect:** Follow the "Setting Time and Date" instructions in the Setup section.
- **Buttons are unresponsive:** Ensure the watch is not wet. If the issue continues, there might be an internal malfunction requiring professional service.
- **Water inside the watch:** Immediately take the watch to a professional watch repair service to prevent further damage. Do not attempt to open the watch yourself.

SPECIFICATIONS

Model Number	3s_fulldigital_w_gold1
Display Type	Digital
Movement Type	Automatic
Case Material	Plastic
Case Diameter	35 Millimetres
Dial Color	Gold
Band Material	Silicone
Band Color	Black
Water Resistance Depth	30 Metres (3 ATM)
Special Features	Alarm, Stopwatch, LED Display (7 colors), Backlight, Shock Resistant, Calendar (Month/Day/Date)
Item Weight	150 Grams

WARRANTY AND SUPPORT

This product comes with a Manufacturer's Warranty. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your purchase or contact the manufacturer directly.

For technical support or service inquiries, please contact HuiYing customer service through their official channels. Keep your purchase receipt and model number handy for faster assistance.

Manufacturer: Cachet India

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I reset the HuiYing 3s_fulldigital_w_gold1 watch or fix common errors?

The HuiYing 3s_fulldigital_w_gold1 digital watch does not have a dedicated "factory reset" button. However, you can resolve most display or functional errors by following these troubleshooting steps:To Reset Time/Date: Press the MODE button repeatedly...

[Read full answer](#)