



Manuals.plus /

› Easytry123 /

› Easytry123 Replacement Remote Control User Manual for Haier LCD LED HDTV TV Models 55E3500, 50E3500, 40E3500, 40D3500M, 48D3500M, 48D3500

Easytry123 Easytry2300

Easytry123 Replacement Remote Control User Manual

For Haier LCD LED HDTV TV Models: 55E3500, 50E3500, 40E3500, 40D3500M, 48D3500M, 48D3500

INTRODUCTION

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your Easytry123 replacement remote control. Please read this guide carefully to ensure proper use and to maximize the functionality of your remote with compatible Haier LCD LED HDTV TV models.

Note: As a replacement remote, some advanced functions present on the original remote may not be fully supported. This remote is designed to provide core functionality for your television.

SETUP GUIDE

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.



Image: Rear view of the remote control, highlighting the battery compartment for AAA battery insertion.

Initial Use

This replacement remote control is typically pre-programmed for the specified Haier TV models. No complex pairing or code entry is usually required. Simply install the batteries and point the remote towards your television to begin operation.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. Below is a general overview of common functions:



Image: Front view of the Easytry123 remote control, displaying all buttons for operation.

Basic Functions

- **POWER (●):** Turns the TV on or off.
- **SOURCE:** Selects input sources (e.g., HDMI, AV, Component).
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL (+/-):** Adjusts the volume level.
- **CH (+/-):** Changes channels sequentially.
- **MUTE ():** Mutes or unmutes the TV sound.
- **MENU:** Accesses the TV's main menu.
- **OK:** Confirms selections within menus.
- **Directional Arrows (▲ ▼ ◀▶):** Navigates through menu options.
- **BACK/←:** Returns to the previous screen or menu.
- **EXIT/↵:** Exits the current menu or function.

Advanced Functions

- **P.MODE (Picture Mode):** Cycles through various picture presets (e.g., Standard, Dynamic, Movie).
- **S.MODE (Sound Mode):** Cycles through various sound presets (e.g., Standard, Music, Movie).
- **Q.VIEW (Quick View):** Switches between the current and previously viewed channel.
- **SLEEP:** Sets a timer for the TV to automatically turn off.
- **SUBTITLE:** Toggles subtitles on or off (if available).
- **3D WORLD:** Activates or deactivates 3D mode (if supported by TV and content).
- **INFO/CD:** Displays information about the current program or input.

- **FAV/BB (Favorites/Browser):** Accesses favorite channels list or web browser (if TV supports).
- **SCREEN:** Adjusts screen display options.
- **CH.LIST/SB (Channel List/Sound Balance):** Displays the channel list or adjusts sound balance.
- **GUIDE:** Opens the electronic program guide (EPG).
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons typically correspond to specific functions within menus or interactive services, as indicated on the TV screen.

MAINTENANCE AND CARE

To ensure the longevity and optimal performance of your remote control, follow these guidelines:

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA). Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

If you encounter issues with your remote control, try the following solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's infrared sensor.
 - Point the remote directly at the TV's sensor.
- **Specific Buttons Not Working:**
 - Some advanced functions may not be fully compatible with all TV models. Refer to your TV's original manual for specific button functionalities.
 - Clean the remote's surface, especially around the unresponsive buttons, to ensure no debris is interfering.
- **TV Not Turning On/Off:**
 - Verify the TV is plugged into a working power outlet.
 - Try using the power button directly on the TV.

SPECIFICATIONS

- **Brand:** Easytry123
- **Model Number:** Easytry2300
- **Compatible Devices:** Haier LCD LED HDTV TV models (55E3500, 50E3500, 40E3500, 40D3500M, 48D3500M, 48D3500)

- **Connectivity Technology:** Infrared (IR)
- **Controller Type:** Button Control
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

This Easytry123 replacement remote control is designed to function as a direct replacement for the specified Haier TV models. Please note that specific warranty details are typically provided by the original seller at the time of purchase.

For any issues not covered in this manual, or if the remote does not function as expected with your compatible TV model, please refer to the seller's return policy or contact the point of purchase for assistance.