

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [Whirlpool](#) /

› Whirlpool AKP 782 IX Built-in Oven User Manual

Whirlpool AKP 782 IX

Whirlpool AKP 782 IX Built-in Oven User Manual

Model: AKP 782 IX

INTRODUCTION

Thank you for choosing the Whirlpool AKP 782 IX Built-in Oven. This manual provides essential information for the safe and efficient use, installation, maintenance, and troubleshooting of your new appliance. Please read these instructions carefully before using the oven and keep them for future reference.



Image: Front view of the Whirlpool AKP 782 IX built-in oven, showcasing its stainless steel finish and black glass door.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the oven is properly installed and grounded by a qualified technician.
- Do not touch hot surfaces. Use oven mitts or pot holders.
- Never use water on grease fires. Smother fire or flame or use dry chemical or foam-type extinguisher.
- Do not store flammable materials in or near the oven.
- Supervise children when the oven is in use.
- Disconnect power before servicing or cleaning.

SETUP AND INSTALLATION

The Whirlpool AKP 782 IX is designed for built-in installation. Proper installation is crucial for safe and efficient operation. It is recommended that installation be performed by a qualified professional.

Unpacking

Carefully remove all packaging materials. Check for any damage during transit. Keep packaging materials out of reach of children.

Installation Requirements

- Ensure the cabinet opening dimensions match the oven specifications.
- The electrical supply must comply with local regulations and the oven's power requirements (3.65 kW).
- Ensure adequate ventilation around the appliance.

Installation Diagram



Image: Detailed technical diagram showing the precise dimensions for cabinet cut-outs and clearances required for installing the Whirlpool AKP 782 IX built-in oven. All measurements are in millimeters.

Initial Cleaning

Before first use, clean the oven interior and accessories with a damp cloth and mild detergent. Run the oven empty at a high temperature (e.g., 200°C) for about 30 minutes to burn off any manufacturing residues, ensuring good ventilation during this process.

OPERATING INSTRUCTIONS

Your Whirlpool AKP 782 IX oven features electronic controls and two Push-Push knobs for selecting functions and temperature.

Control Panel Overview

The control panel includes an Invensys display, function selector knob, and temperature selector knob.

- **Function Selector Knob:** Turn to choose from 8 heating functions.
- **Temperature Selector Knob:** Turn to set the desired cooking temperature.
- **Invensys Display:** Shows current settings, time, and other relevant information.

Oven Functions

The oven offers various cooking modes to suit different dishes:

- **Conventional:** Top and bottom heating elements for traditional baking and roasting.
- **Convection (Fan-assisted):** Circulates hot air for even cooking, ideal for multiple dishes.
- **Turbogrill:** Combines grilling with fan assistance for faster, more even grilling.
- **Grill:** For grilling smaller items and toasting.
- *Additional functions may include defrost, bottom heat, etc. Refer to the display for specific icons.*

Setting the Timer

The integrated timer allows you to set cooking durations or a delayed start. Consult the Invensys display for detailed timer setting instructions.

Preheating

For best results, preheat the oven to the desired temperature before placing food inside, especially for baking.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your oven.

Smart Clean Feature

Your oven is equipped with a Smart Clean feature, which uses steam to loosen food residues, making manual cleaning easier. Follow these steps:

1. Remove all accessories from the oven.
2. Pour approximately 200ml of water into the bottom of the oven cavity.
3. Select the Smart Clean function (refer to your display for the specific icon).
4. Run the cycle as indicated by the oven.
5. Once the cycle is complete and the oven has cooled, wipe the interior with a damp cloth.

General Cleaning

- Clean the oven interior regularly with a non-abrasive oven cleaner or warm soapy water.
- Wipe down the exterior with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads.
- Clean the oven door glass with a glass cleaner.
- The baking tray and grid can be washed by hand or in a dishwasher.

Accessories



Image: The standard accessories included with the oven, featuring two black enamel baking trays and one chrome-plated wire grid.

TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Oven does not heat up.	No power supply; door not closed properly; function/temperature not set.	Check circuit breaker; ensure door is fully closed; verify function and temperature settings.
Uneven cooking.	Incorrect rack position; overloaded oven; door opened too frequently.	Use recommended rack position; avoid overcrowding; minimize door opening.
Smoke or odor during first use.	Residues from manufacturing process.	This is normal. Ensure good ventilation. It will dissipate after initial use.

If the problem persists, please refer to the Support section for assistance.

SPECIFICATIONS

Feature	Detail
Model	Whirlpool AKP 782 IX
Type	Built-in Electric Oven
Capacity	65 Liters
Control Type	Electronic, 2 Push-Push Knobs
Display	Invensys
Heating Functions	8 (e.g., Conventional, Convection, Turbogrill, Grill)
Special Features	Smart Clean (self-cleaning), Cooling Fan
Power	3.65 kW
Color/Finish	Stainless Steel, Black Glass
Included Accessories	Baking Tray, Grid
Weight	35 Kilograms

WARRANTY INFORMATION

Your Whirlpool AKP 782 IX oven is covered by a manufacturer's warranty. The terms and conditions of the warranty are provided separately with your purchase documentation. Please retain your proof of purchase for any warranty claims. For specific details regarding warranty duration and coverage, refer to the warranty card or contact Whirlpool customer service.

CUSTOMER SUPPORT

If you require further assistance, have questions, or encounter issues not covered in this manual, please contact Whirlpool customer support.

- **Online Support:** Visit the official Whirlpool website for FAQs, product registration, and service requests.
www.whirlpool.com/support
- **Telephone Support:** Refer to your product documentation for local customer service telephone numbers.
- When contacting support, please have your oven's model number (AKP 782 IX) and serial number ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07H2K46Z4>

More documents and user manuals: **<https://manuals.plus/>**