

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Gemmy](#) /

> [Gemmy 20FT Colossal Airblown Inflatable Santa Claus Instruction Manual](#)

## Gemmy 20FT Colossal Santa Inflatable

# Gemmy 20FT Colossal Airblown Inflatable Santa Claus Instruction Manual

Model: 20FT Colossal Santa Inflatable | Brand: Gemmy

### IMPORTANT SAFETY INSTRUCTIONS

---

- Always ensure the inflatable is securely anchored to the ground using all provided stakes and ropes to prevent it from blowing away in windy conditions.
- Keep the fan unit clear of obstructions (leaves, debris, snow) to ensure proper airflow and prevent overheating.
- Do not operate the inflatable near open flames, heaters, or other heat sources.
- Ensure all electrical connections are dry and protected from moisture. Use a ground fault circuit interrupter (GFCI) for outdoor use.
- Do not allow children to play on or around the inflatable. This is a decoration, not a toy.
- Inspect the inflatable and electrical components for damage before each use. Do not use if damaged.
- Unplug the inflatable when not in use or during severe weather conditions.

### PACKAGE CONTENTS

---

Your Gemmy 20FT Colossal Airblown Inflatable Santa Claus package includes:

- 1 x 20FT Colossal Airblown Inflatable Santa Claus
- 1 x Internal Heavy Duty Fan
- Internal Lights (pre-installed)
- Ropes for securing
- Stakes for securing

### SETUP INSTRUCTIONS

---

Follow these steps for easy assembly and setup:

1. **Unpack:** Carefully remove the inflatable from its packaging. Lay it flat on a clean, dry surface in the

desired display area. Ensure the area is free of sharp objects or debris that could puncture the material.

2. **Position:** Place the inflatable in your chosen indoor or outdoor location. For outdoor use, select a spot with access to a power outlet and sufficient space for the 20-foot height and 11-foot width.
3. **Connect Power:** Locate the internal heavy-duty fan and ensure its power cord is accessible. Plug the power cord into a suitable electrical outlet. The inflatable will begin to inflate automatically.
4. **Inflate:** Allow the fan to run until the Santa Claus inflatable is fully expanded and standing upright. This typically takes a few minutes.
5. **Secure:** Once fully inflated, use the provided ropes and stakes to anchor the inflatable securely to the ground. Attach ropes to the designated tie-down points on the inflatable and secure them with stakes. This is crucial for stability, especially in outdoor environments.



Image: The 20-foot Gemmy Colossal Airblown Inflatable Santa Claus fully inflated and standing tall in an outdoor setting.

### [Setup Demonstration Video](#)

Your browser does not support the video tag.

Video: A demonstration of setting up and inflating a 14-foot Christmas Santa Claus inflatable, showing the process of unrolling, plugging in, and securing the decoration. This video is provided by Wothfav-US.

## Inflatable Santa Overview Video

Your browser does not support the video tag.

Video: A brief overview of a 14-foot giant Christmas Santa Claus inflatable, highlighting its features and size. This video is provided by InnoWis.

## OPERATING INSTRUCTIONS

---

Operating your Gemmy inflatable is straightforward:

- **Power On:** The inflatable will begin to inflate as soon as it is plugged into a live electrical outlet.
- **Continuous Operation:** For the inflatable to remain inflated and illuminated, it must remain continuously plugged into the power source.
- **Nighttime Display:** The internal lights will automatically illuminate when powered, providing a glowing display for nighttime visibility.
- **Power Off:** To deflate the inflatable, simply unplug it from the electrical outlet. It will slowly deflate on its own.

## MAINTENANCE

---

Proper maintenance ensures the longevity of your inflatable:

- **Cleaning:** To clean the inflatable, wipe it down with a damp cloth. Do not use harsh chemicals or abrasive cleaners, as these can damage the material.
- **Storage:** Before storing, ensure the inflatable is completely dry to prevent mold or mildew. Deflate it fully, fold it neatly, and store it in a cool, dry place away from direct sunlight and pests.
- **Repair:** In case of small punctures or tears, repair kits (often sold separately or included with similar products) can be used. Follow the repair kit instructions carefully.

## TROUBLESHOOTING

---

If you encounter issues with your inflatable, refer to the following:

- **Inflatable Not Inflating:**
  - Check if the power cord is securely plugged into a working outlet.
  - Ensure the fan is free from obstructions.
  - Verify that all zippers on the inflatable are fully closed to prevent air leakage.
- **Inflatable Falling Over:**
  - Ensure all ropes and stakes are properly installed and tightened.
  - Check for strong winds; consider deflating during severe weather.
- **Lights Not Working:**
  - Confirm the inflatable is powered on.
  - Check for loose connections to the internal lights.
  - If individual bulbs are replaceable, check for burnt-out bulbs (refer to specific bulb replacement

instructions if available).

## SPECIFICATIONS

---

<b>Brand</b>	Gemmy
<b>Theme</b>	Christmas
<b>Cartoon Character</b>	Santa Claus
<b>Color</b>	Red, Bright White, Multicolor (lights)
<b>Occasion</b>	Christmas
<b>Material</b>	Vinyl (Durable Nylon)
<b>Special Feature</b>	Internal Lights, Airblown
<b>UPC</b>	086786167168
<b>Package Dimensions</b>	16 x 14.5 x 13.5 inches
<b>Item Weight</b>	12.23 pounds

## WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the documentation included with your purchase or contact Gemmy customer service directly. Keep your proof of purchase for any warranty claims.