Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- > Logitech HD Pro Webcam C922 Instruction Manual

Logitech C922/960-001088

Logitech HD Pro Webcam C922 Instruction Manual

Model: C922 / 960-001088

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Logitech HD Pro Webcam C922. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The Logitech C922 HD Pro Webcam is designed for high-definition video calls and streaming, offering clear 1080p video capture and reliable performance.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Logitech C922 Webcam.



Figure 1: Front view of the Logitech C922 HD Pro Webcam, showing the lens and "HD 1080p" branding.



Figure 2: Logitech C922 HD Pro Webcam with its adjustable clip extended, suitable for mounting on monitors or laptops.



Figure 3: Logitech C922 HD Pro Webcam shown with its included mini-tripod, offering alternative placement options.

SETUP

System Requirements

- Windows 7 or later
- macOS 10.10 or later
- Chrome OS
- USB 2.0 port
- Internet connection for software download

Installation Steps

1. Unpack the Webcam: Carefully remove the C922 webcam and any accessories from its packaging.

- 2. **Connect to Computer:** Plug the USB cable of the C922 webcam into an available USB 2.0 or 3.0 port on your computer.
- 3. Position the Webcam:
 - On a Monitor/Laptop: Open the flexible clip base and place it over the top edge of your monitor or laptop screen. Adjust the front part of the clip so the webcam sits securely.
 - On a Tripod: If using the included tripod, screw the webcam onto the tripod mount. Place the tripod on a stable, flat surface.
- 4. **Software Installation:** Your operating system should automatically detect and install basic drivers. For full functionality, including advanced settings and features, download and install the Logitech G HUB software from the official Logitech website (www.logitech.com/ghub).
- 5. **Test the Webcam:** Open a video conferencing application (e.g., Zoom, Skype, Google Meet) or your computer's camera application to verify the webcam is working correctly.

OPERATING INSTRUCTIONS

Basic Operation

- Once connected and drivers are installed, the C922 webcam is ready for use with most video applications.
- Select "Logitech C922 Pro Stream Webcam" as your video device within your chosen application's settings.
- The integrated dual microphones will automatically be selected as the audio input.

Using Logitech G HUB Software

The Logitech G HUB software provides advanced control over your C922 webcam:

- **Resolution and Frame Rate:** Adjust video resolution (up to 1080p) and frame rate (up to 60fps at 720p, 30fps at 1080p).
- Field of View: Customize the field of view.
- Autofocus: Enable or disable autofocus.
- Exposure and White Balance: Manually adjust exposure, white balance, and other image settings for optimal lighting conditions.
- ChromaCam (Background Replacement): Utilize the ChromaCam feature for virtual background replacement (requires compatible system).
- Profiles: Create and save custom profiles for different applications or lighting scenarios.

MAINTENANCE

- Cleaning the Lens: Use a soft, lint-free cloth specifically designed for optics to gently wipe the webcam lens. Avoid abrasive materials or harsh chemicals.
- Cleaning the Body: Wipe the body of the webcam with a soft, damp cloth. Do not submerge the webcam in water or use excessive moisture.
- Storage: When not in use, store the webcam in a clean, dry place away from extreme temperatures and direct

sunlight.

• Cable Care: Avoid bending or crimping the USB cable excessively to prevent damage.

TROUBLESHOOTING

Problem	Solution
Webcam not detected by computer.	 Try a different USB port. Restart your computer. Ensure Logitech G HUB software is installed and updated. Check Device Manager (Windows) or System Information (macOS) to see if the webcam is listed.
No video or black screen.	 Ensure the webcam is selected as the video source in your application. Check privacy settings in your operating system (e.g., Camera access for apps). Close other applications that might be using the webcam. Reinstall webcam drivers or Logitech G HUB.
Poor video quality (blurry, dark, grainy).	 Ensure adequate lighting in your environment. Clean the webcam lens. Adjust settings in Logitech G HUB (exposure, white balance, resolution). Check your internet connection speed if streaming.
No audio or poor audio quality.	 Ensure "Logitech C922 Pro Stream Webcam" is selected as the microphone input in your application and system sound settings. Check microphone volume levels. Ensure nothing is obstructing the webcam's microphones.

SPECIFICATIONS

Feature	Detail
Model Number	960-001088
Brand	Logitech
Video Capture Resolution	1080p (Full HD) at 30fps, 720p (HD) at 60fps
Image Sensor Technology	CMOS
Maximum Aperture	1.8 F

Feature	Detail
Maximum Focal Length	52 millimeters
Connectivity Technology	USB 2.0
Supported Audio Format	AAC
Video Capture Format	MP4
Color	Black
Shipping Dimensions	12.8 x 8.6 x 5.2 cm; 162 grams
First Available Date	February 11, 2019

Note: Some specifications from the source data (e.g., "Removable Memory Type: SD", "Connectivity Technology: Wi-Fi") appear to be generic or incorrect for this specific webcam model and have been omitted or corrected for accuracy. The C922 is a wired USB webcam.

WARRANTY AND SUPPORT

Logitech products typically come with a limited hardware warranty. For specific warranty details, registration, and technical support, please visit the official Logitech support website:

Logitech Support Website

You can also find FAQs, driver downloads, and community forums on their support page.

© 2024 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.

Related Documents - C922/960-001088



Logitech C922 Pro Stream Webcam Setup Guide

Comprehensive setup guide for the Logitech C922 Pro Stream Webcam, detailing features, quick setup, and streaming integration with XSplit and ChromaCam for high-quality live broadcasts.



Logitech C922 Pro HD Stream Webcam Setup Guide

Comprehensive setup guide for the Logitech C922 Pro HD Stream Webcam, covering product features, connection, and dimensions for optimal streaming and video conferencing.

