

tectake 402943

tectake 402943 Metal Roller Cabinet - Black

INSTRUCTION MANUAL

1. Introduction

This manual provides essential information for the assembly, operation, and maintenance of your tectake 402943 Metal Roller Cabinet. Please read these instructions carefully before assembly and use to ensure safe and efficient operation.

The tectake Metal Roller Cabinet is designed for organized storage of documents, work materials, and office supplies. Its mobile design and multiple drawers offer practical storage solutions for various environments.





Figure 1.1: The tectake 402943 Metal Roller Cabinet, showcasing its design and six storage drawers.

2. Safety Information

- Ensure all components are present and undamaged before beginning assembly.
- Assemble the cabinet on a soft, clean surface to prevent scratches.
- Do not exceed the maximum load capacity of 15 kg per shelf/drawer.
- Keep small parts away from children during assembly.
- Always move the cabinet carefully, especially when fully loaded, to prevent tipping.

3. Package Contents

Verify that all the following items are included in your package:

- 1 x Metal Roller Cabinet (main body)
- 6 x Drawers
- 4 x Wheels (casters)
- Mounting hardware (screws, etc.)
- Assembly instructions (this document)

4. Setup and Assembly

Follow these steps to assemble your tectake Metal Roller Cabinet:

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a clean, flat, and soft surface to avoid damage.
2. **Attach Wheels:** Secure the four wheels to the bottom of the cabinet using the provided mounting hardware. Ensure they are tightly fastened for stability.
3. **Insert Drawers:** Slide each of the six drawers into their respective slots in the cabinet body. Ensure they glide smoothly.
4. **Attach Handles and Label Holders:** Attach the handles to each drawer front. The cabinet features integrated label holders on each drawer for easy organization. Insert labels as needed.



Figure 4.1: Detail view showing open drawers, handles, and the mobile wheels at the base of the cabinet.





Figure 4.2: Front view of the assembled cabinet, highlighting the six drawers and their handles with label holders.

5. Operating Instructions

- **Drawer Use:** Pull the handles to open the drawers. Push them gently to close. Avoid forcing drawers.
- **Organization:** Utilize the label holders on each drawer to categorize and identify contents quickly.
- **Mobility:** The cabinet is equipped with four wheels for easy movement. To move, gently push or pull the cabinet to its desired location. Ensure the path is clear to prevent accidents.



Figure 5.1: The tectake metal roller cabinet in an office environment, demonstrating its practical use for under-desk storage.

6. Maintenance

- **Cleaning:** Clean the cabinet surfaces with a damp cloth. For stubborn dirt, a mild cleaning agent can be used. Dry immediately with a soft, dry cloth. Avoid abrasive cleaners or harsh chemicals.
- **Inspection:** Periodically check the wheels and drawer slides for smooth operation. Ensure all screws remain tight.

7. Troubleshooting

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Obstruction in the drawer slides; drawer overloaded; misaligned during assembly.	Check for any objects blocking the slides. Reduce drawer load. Re-insert the drawer carefully, ensuring proper alignment.
Cabinet is unstable or wobbles.	Wheels not securely fastened; uneven floor surface.	Ensure all wheel screws are tightened. Move the cabinet to a level surface.
Missing parts during assembly.	Packaging not thoroughly checked.	Carefully check all packaging materials. If parts are still missing, contact tectake customer support.

8. Specifications

Model Number	402943
Overall Dimensions (L x W x H)	41 cm x 28 cm x 69 cm
Drawer Interior Dimensions (L x W x H)	39 cm x 23 cm x 9 cm
Maximum Load per Drawer	15 kg
Weight	10.8 kg
Material	Powder-coated Alloy Steel
Color	Black
Number of Drawers	6



Figure 8.1: Dimensional diagram of the tectake metal roller cabinet.

9. Warranty and Customer Support

For warranty information, missing parts, or further assistance, please refer to the purchase documentation or contact tectake customer support directly. Contact details can typically be found on the manufacturer's official website or your purchase receipt.