

[Manuals.plus](#) /

› [VINABTY](#) /

› VINABTY MKJ39170828 TV Remote Control User Manual for LG Televisions

VINABTY MKJ39170828

VINABTY MKJ39170828 TV Remote Control User Manual

Model: MKJ39170828

INTRODUCTION

This manual provides detailed instructions for the VINABTY MKJ39170828 TV Remote Control. This remote is designed for use with various LG television models, offering both standard control functions and access to service menus for advanced configurations. Please read this manual thoroughly before use to ensure proper operation and to understand the remote's capabilities.

PRODUCT OVERVIEW

The VINABTY MKJ39170828 remote control features a comprehensive layout of buttons for various television functions. Its ergonomic design ensures comfortable handling.



Image: Front view of the VINABTY MKJ39170828 TV Remote Control, showing all buttons and their labels. The remote is light grey with various colored buttons.



Image: Angled view of the VINABTY MKJ39170828 TV Remote Control, highlighting the button layout and the "Factory SVC Remocon MKJ39170828" label at the bottom.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards or press the latch and lift to open.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery cover by sliding it back into place until it clicks securely.

Initial Use

This remote control operates using infrared (IR) technology. Once batteries are installed, it is ready for immediate use with compatible LG televisions. No pairing or programming is typically required for basic functions.

OPERATING INSTRUCTIONS

Standard Functions

The remote provides access to common TV functions:

- **POWER:** Turns the TV on or off.
- **INPUT:** Selects input sources (HDMI, AV, etc.).
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes TV channels.
- **MUTE:** Mutes or unmutes the TV audio.
- **Number Buttons (0-9):** Direct channel selection.
- **MENU:** Accesses the TV's main menu.
- **OK / Arrow Buttons:** Navigates menus and confirms selections.
- **EXIT:** Exits the current menu or function.
- **PSM (Picture Sound Mode):** Changes picture modes.
- **SSM (Sound Select Mode):** Changes sound modes.
- **HDMI 1-4, AV1-3, COMP1-2, RGB:** Direct selection of specific input ports.

Service Menu Access (Advanced Users Only)

This remote is capable of accessing the hidden service menu on compatible LG televisions. This feature is intended for qualified service technicians. **Unauthorized or incorrect adjustments in the service menu can lead to irreversible damage to your television, void your warranty, or cause malfunctions. Proceed with extreme caution and at your own risk.**

Common steps for accessing the service menu:

1. Ensure your TV is powered on.
2. Press the **IN START** button on the VINABTY remote.
3. When prompted on-screen, enter the service menu PIN. A common PIN is **0413**.
4. For some newer LG models (e.g., C3/G3 series), the **IN START** button may only show basic TV information. To access deeper service menus on these models, try pressing the **P-ONLY** button, then enter the PIN (e.g., 0413). The TV may restart.
5. Navigate the service menu using the arrow keys and **OK** button.
6. To exit a sub-menu, use the **EXIT** button.

Critical Warning:

- **DO NOT** press the **IN STOP** button unless you intend to reset the TV to factory settings, potentially including factory calibration data. This action may not prompt for confirmation and can have severe consequences.
- Any changes made in the service menu are at your sole discretion and risk. The manufacturer of this remote control is not responsible for any damage or issues arising from improper use of the service menu.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, remove the batteries to prevent leakage.

Troubleshooting

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Replace batteries, ensuring correct polarity. Remove any obstructions. Move closer to the TV.
Specific functions not working.	TV model incompatibility for certain advanced functions.	Verify your TV model's compatibility with the remote's advanced features. Basic functions should work with most LG TVs.
Service menu not appearing or incorrect PIN.	Incorrect button pressed. Incorrect PIN. TV model requires a different access method.	Ensure you are pressing IN START or P-ONLY (for newer models). Double-check the PIN (0413 is common). Consult specific LG TV forums or documentation for alternative service menu access methods for your model if 0413 does not work.

Specifications

- **Brand:** VINABTY
- **Model Name:** MKJ39170828
- **Compatible Devices:** Television (LG models)
- **Connectivity Technology:** Infrared
- **Power Source:** 2 x AAA Batteries (not included)
- **Maximum Range:** 10 Metres
- **Item Weight:** 60 Grams
- **Item Dimensions (L x W x H):** 15L x 6W x 1H centimetres
- **Color:** Black
- **Special Feature:** Ergonomic design

Warranty and Support

For warranty information or technical support, please refer to the retailer or the VINABTY official website. Keep your purchase receipt as proof of purchase.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question