

Emerio AF-112828.3

Emerio AF-112828.3 Airfryer Instruction Manual

Model: AF-112828.3 | Brand: Emerio

INTRODUCTION

Thank you for purchasing the Emerio AF-112828.3 Airfryer. This appliance uses hot air circulation to cook your favorite foods with little to no oil, offering a healthier alternative to traditional frying. Please read this manual carefully before use to ensure safe and efficient operation. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use the appliance for other than intended use.

- Ensure the appliance is placed on a stable, heat-resistant surface.
- Do not block any ventilation openings.
- The appliance features a Cool Touch handle, but exercise caution as other parts may become hot during operation.

PRODUCT COMPONENTS

Familiarize yourself with the main parts of your Emerio Airfryer:

- **Main Unit:** The primary housing containing the heating element and fan.
- **Frying Basket:** Removable basket for holding food.
- **Basket Handle:** Cool-touch handle for safely pulling out the frying basket.
- **Temperature Control Dial:** Adjusts cooking temperature (80°C - 200°C).
- **Timer Dial:** Sets cooking time (up to 30 minutes).
- **Power Indicator Light:** Illuminates when the appliance is powered on.
- **Heating Indicator Light:** Illuminates when the heating element is active.



Image: The Emerio AF-112828.3 Airfryer with its frying basket partially removed, displaying cooked chicken nuggets and french fries. A small plate with additional food and ketchup is visible next to the appliance.



Image: A close-up view of the control panel of the Emerio AF-112828.3 Airfryer, showing the upper temperature control dial (ranging from 60°C to 200°C) and the lower timer dial (ranging from 0 to 30 minutes), along with the power and heating indicator lights.

SETUP

1. **Unpacking:** Remove all packaging materials, stickers, and labels from the appliance.
2. **Initial Cleaning:** Clean the frying basket and pan thoroughly with hot water, some dishwashing liquid, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the appliance on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm of free space on the back and sides, and 10 cm above the appliance to allow for proper ventilation.
4. **First Use (Burn-in):** It is recommended to run the airfryer empty for about 10-15 minutes at 200°C before first use to burn off any manufacturing residues. A slight odor may be present during this process; this is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

General Operation

1. **Prepare Food:** Place the ingredients into the frying basket. Do not overfill the basket; ensure hot air can circulate.
2. **Insert Basket:** Slide the frying basket back into the appliance. Ensure it is fully inserted.
3. **Set Temperature:** Turn the temperature control dial to your desired temperature (80°C to 200°C).
4. **Set Timer:** Turn the timer dial to the required cooking time (up to 30 minutes). The appliance will start heating immediately. The power indicator light and heating indicator light will illuminate.
5. **Cooking Process:** The heating indicator light will cycle on and off during cooking, indicating that the heating element is maintaining the set temperature.
6. **Shaking Ingredients:** For some foods (e.g., fries, nuggets), it is recommended to shake the basket halfway through the cooking time to ensure even cooking. To do this, pull the basket out by the Cool Touch handle, shake it gently, and then slide it back in. The appliance will resume cooking.
7. **Completion:** When the timer reaches zero, a bell will ring, and the appliance will automatically switch off. The indicator lights will turn off.
8. **Remove Food:** Carefully pull out the frying basket by the handle. Place the basket on a heat-resistant surface. Do not turn the basket upside down, as excess oil may collect in the bottom of the pan.
9. **Serve:** Transfer the cooked food to a plate using tongs.
10. **Cool Down:** Allow the appliance to cool down completely before cleaning or storing.

Tips for Best Results

- For crispier results, lightly brush or spray food with oil.
- Smaller ingredients usually require a shorter cooking time than larger ingredients.
- A quick preheating of 3-5 minutes at the desired temperature can improve cooking results for some foods.
- Do not cook extremely greasy ingredients in the airfryer.

MAINTENANCE AND CLEANING

Clean the appliance after every use.

1. **Unplug and Cool:** Always unplug the airfryer and allow it to cool down completely before cleaning.
2. **Frying Basket and Pan:** The frying basket is dishwasher safe. Alternatively, clean it with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak the basket in hot water and dish soap for about 10 minutes.
3. **Interior:** Wipe the inside of the appliance with a damp cloth. Do not use abrasive cleaners or steel wool.
4. **Exterior:** Clean the exterior of the appliance with a damp cloth.
5. **Heating Element:** Use a cleaning brush to remove any food residue from the heating element.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
The airfryer does not work.	The appliance is not plugged in. The timer is not set.	Plug the main plug into an earthed wall socket. Turn the timer dial to the required cooking time.
Food is not cooked evenly.	Too much food in the basket. Food not shaken during cooking.	Reduce the amount of food per batch. Shake the basket halfway through cooking.
Food is not crispy.	Some foods require a light coating of oil. Temperature too low or cooking time too short.	Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke comes from the appliance.	Fat residues from previous use. Greasy ingredients being cooked.	Clean the basket and pan thoroughly after each use. Avoid cooking extremely greasy foods.
The timer dial gets stuck or does not move towards 0.	Mechanical issue with the analog timer.	Monitor cooking time manually. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Emerio
Model Number	AF-112828.3
Type	Hot Air Fryer (Airfryer)
Capacity	3.6 Liters
Output Power	1400 Watts
Voltage	240 Volts
Minimum Temperature Setting	80°C
Maximum Temperature Setting	200°C
Control Method	Analog Dials (Temperature, Timer)
Material	Plastic (Exterior), Non-stick coating (Interior)
Special Features	Cool Touch Handle, Indicator Lights
Dishwasher Safe Parts	Frying Basket
Item Weight	3750 Grams

WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. For detailed warranty information, please refer to the

warranty card included with your purchase or contact your retailer. For technical support, spare parts, or service inquiries, please contact Emerio customer support through their official website or the contact information provided in your product packaging.

Please have your model number (AF-112828.3) and purchase date ready when contacting support.