



Manuals.plus /

› One Touch(tm) /

› One-Touch Electric Can Opener, Handheld Easy Grip Press Start and Stop Automatic Operation, Lightweight, Twist-free, Arthritis Relief

One Touch(tm) OTCO0006

One-Touch Electric Can Opener User Manual

Model: OTCO0006 | Brand: One Touch(tm)

INTRODUCTION

The One-Touch Electric Can Opener is designed for effortless and convenient can opening. Its automatic operation and compact design make it an ideal kitchen tool, especially beneficial for individuals with arthritis or hand pain. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your can opener.

IMPORTANT SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep hands clear of the cutting blade during operation.
- Do not immerse the can opener in water or other liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Remove batteries if the appliance will not be used for an extended period.
- Do not attempt to open cans with damaged or irregular rims.
- Ensure the can opener is securely placed on the can before starting operation.

PACKAGE CONTENTS

- 1 x One-Touch Electric Can Opener
- User Manual (this document)

Note: 2 AA batteries are required and not included.

SETUP

Battery Installation

1. Locate the battery compartment on the underside of the can opener.

2. Slide the battery compartment cover open.
3. Insert 2 AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.



Image: The One-Touch Electric Can Opener positioned on a can, demonstrating its compact design and readiness for use.

OPERATING INSTRUCTIONS

1. Place the can opener on top of the can, aligning the cutting wheel with the can's rim.
2. Press the button on top of the can opener once to start the automatic cutting process. The can opener will grip the can and begin to rotate, cutting along the outside edge of the lid.
3. Allow the can opener to complete a full rotation around the can. It will stop automatically once the lid is fully cut.
4. Once the cutting is complete, the built-in magnet will hold the lid, preventing it from falling into the can.

5. Carefully lift the can opener off the can. The lid will remain attached to the can opener via the magnet.
6. To release the lid, simply press the button again or gently detach it from the magnet. Dispose of the lid safely.

Important: The can opener cuts along the side of the rim, leaving a smooth, safe edge on both the can and the lid.

ONE•TOUCH

Automatic Can Opener

Just Place and Press Button!



- Great for people who have arthritis or hand pain
- Compact design allows for easy storage
- Hands-free operation

Hands-free Opening!

Built-In Magnet Holds Can Lid!

Image: Visual guide illustrating the hands-free operation and the magnetic lid-holding feature of the can opener.

MAINTENANCE

Cleaning

- Wipe the exterior of the can opener with a damp cloth. Do not use abrasive cleaners.
- The cutting wheel can be cleaned with a small brush or damp cloth. Be cautious of the sharp edge.
- Do not rinse the can opener under running water or immerse it in water.

Storage

Store the can opener in a dry place, away from direct sunlight and extreme temperatures. Its compact design allows for

easy storage in kitchen drawers or cabinets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Can opener does not start or operate.	Batteries are dead or incorrectly installed.	Check battery polarity or replace with new AA batteries.
Can opener stops mid-operation.	Batteries are low; can rim is irregular or damaged.	Replace batteries. Ensure the can rim is smooth and undamaged.
Lid is not fully cut or detached.	Can opener not properly aligned; battery low.	Ensure the can opener is firmly seated on the can. Replace batteries if needed.
Can opener does not stop after cutting.	Rare occurrence, possibly due to sensor issue or battery.	Press the button again to stop. If issue persists, replace batteries.

SPECIFICATIONS

Model Number	OTCO0006
Brand	One Touch(tm)
Operation Mode	Automatic
Power Source	2 x AA Batteries (not included)
Material	Stainless Steel (Blade), Plastic (Body)
Color	White
Product Dimensions	1.5"W x 5"H
Item Weight	0.18 Kilograms (6.3 ounces)
UPC	816119020750
Country of Origin	USA

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the contact details provided with your purchase or visit the official One Touch(tm) website. Keep your purchase receipt as proof of purchase for any warranty claims.