

Fujitsu Fi-7160

Fujitsu Fi-7160 Sheetfed Scanner User Manual

Model: Fi-7160 (PA03670-B085)

Brand: Fujitsu

INTRODUCTION

The Fujitsu Fi-7160 ADF Desktop Scanner is a high-quality and reliable tool designed for efficient document scanning. It supports scanning documents up to A4 size with excellent clarity and accuracy, offering both 8-bit grayscale and 24-bit color depth. Equipped with a CCD image sensor, it captures every detail, making it suitable for both personal and professional environments. This compact desktop scanner provides versatile USB connectivity (USB 1.0/1.1, USB 2.0, and USB 3.0) for seamless integration with your system.

SETUP GUIDE

Follow these steps to set up your Fujitsu Fi-7160 scanner:

1. **Unpacking:** Carefully remove the scanner and all accessories from the packaging. Ensure all components are present.
2. **Placement:** Place the scanner on a stable, flat surface with adequate space for paper feeding and output.
3. **Power Connection:** Connect the power adapter to the scanner's power input and then plug it into a suitable power outlet.
4. **USB Connection:** Connect the scanner to your computer using the provided USB cable. The scanner supports USB 1.0/1.1, USB 2.0, and USB 3.0.
5. **Driver Installation:** For optimal performance and full functionality, install the necessary drivers and software. These are typically provided on a CD-ROM or can be downloaded from the official Fujitsu support website. The scanner is compatible with Windows operating systems.
6. **Power On:** Press the power button on the scanner to turn it on. The indicator light should illuminate.



Figure 1: Front view of the Fujitsu Fi-7160 scanner, showing the paper input tray and control panel.

OPERATING INSTRUCTIONS

The Fujitsu Fi-7160 scanner is designed for fast and efficient document processing. Here's how to operate it:

- **Loading Documents:** Open the paper input tray and adjust the side guides to fit your documents. The scanner can handle mixed paper sizes and weights simultaneously, eliminating the need for pre-sorting.
- **Scanning Capabilities:** The scanner supports 24-bit color and 8-bit grayscale scanning at a maximum resolution of 600 DPI.
- **Intelligent Multi-feed Function:** This feature helps prevent misfeeds and ensures accurate scanning, even with documents that have sticky notes or taped receipts. It allows for manual bypass when necessary.
- **Initiating a Scan:** Once documents are loaded, you can initiate a scan directly from the scanner's control panel or through the installed scanning software on your computer. Refer to your software's user guide for detailed instructions on scan settings and profiles.
- **Scan Speed:** The Fi-7160 is known for its high-speed scanning, significantly reducing the time required to digitize large volumes of documents.



fi-7160



Source: Keypoint Intelligence, Document Imaging Scanner
Shipment Tracking, Worldwide, Jan. 2021 - Jun. 2021, Segment(All)

Figure 2: Documents of various sizes loaded into the scanner's input tray, demonstrating its mixed paper handling capability.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your scanner:

- **Cleaning the Rollers:** Periodically clean the feed rollers to prevent paper jams and ensure smooth document feeding. Use a soft, lint-free cloth lightly dampened with water or an approved cleaning solution.
- **Cleaning the Glass:** Clean the glass scanning surface with a soft, dry, lint-free cloth. For stubborn marks, use a small amount of glass cleaner applied to the cloth, not directly to the glass.
- **Exterior Cleaning:** Wipe the exterior of the scanner with a soft, dry cloth to remove dust and debris.
- **Consumables:** Check the condition of consumable parts like brake rollers and pick rollers. Replace them as recommended by the manufacturer or if you notice a decline in feeding performance.

TROUBLESHOOTING

If you encounter issues with your scanner, try these common troubleshooting steps:

- **Scanner Not Detected:**
 - Ensure the USB cable is securely connected to both the scanner and the computer.
 - Verify the scanner is powered on.
 - Check if the correct drivers are installed. Reinstall drivers if necessary.
 - Try a different USB port on your computer.
- **Paper Jams:**
 - Remove all documents from the input tray.
 - Open the scanner covers as indicated in the quick setup guide to access the paper path.
 - Carefully remove any jammed paper.
 - Ensure paper guides are properly adjusted for the document size.
- **Poor Scan Quality:**
 - Clean the scanner's glass and rollers as described in the Maintenance section.
 - Adjust scan settings (resolution, color mode) in your scanning software.
 - Ensure documents are clean and free from wrinkles or tears.
- **Documents Not Feeding:**
 - Check if the paper is loaded correctly and the paper guides are snug against the edges.
 - Clean or replace the feed rollers if they appear worn or dirty.

SPECIFICATIONS

Feature	Detail
Product Dimensions	8 x 11 x 8 inches (20.32 x 27.94 x 20.32 cm)
Item Weight	11 pounds (5 kg)
Model Name	Fujitsu fi-7160
Connectivity Technology	USB (USB 1.0/1.1, USB 2.0, USB 3.0)
Resolution	600 dpi Optical
Color Depth	24-Bit Color, 8-Bit Grayscale
Scanner Type	Document, Sheetfed
Operating System	Windows
Sheet Size	Legal (up to A4 size)
Wattage	64 watts



Figure 3: Side view of the Fujitsu Fi-7160 scanner, illustrating its compact dimensions.

WARRANTY AND SUPPORT

For specific warranty details and technical support, please refer to the documentation provided with your scanner or visit the official Fujitsu support website. As this product may be an Amazon Renewed item, warranty terms might differ from new products. It is recommended to verify warranty coverage directly with the seller or Fujitsu.

Additional protection plans may be available for purchase from third-party providers, offering extended coverage beyond the standard manufacturer's warranty.

© 2025 Fujitsu. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question