

[Manuals.plus](#) /

› [Denver](#) /

› Denver Electronics DVH-7787 DVD Player User Manual

Denver DVH-7787 MK3

Denver Electronics DVH-7787 DVD Player User Manual

Model: DVH-7787 MK3

PRODUCT OVERVIEW

The Denver Electronics DVH-7787 is a compact and versatile DVD player designed for home entertainment. It supports various disc formats including DVD, CD, CD-R, CD-RW, DVD+R, and DVD+RW, and features HDMI and USB connectivity for modern setups. This manual provides essential information for setting up, operating, and maintaining your DVD player.




Image: Front view of the Denver DVH-7787 DVD Player, showcasing its sleek black design, disc tray, and front panel controls including a USB port.

denver

DVH-7787 MK3

DVD Player

 with USB, HDMI &
SCART connection

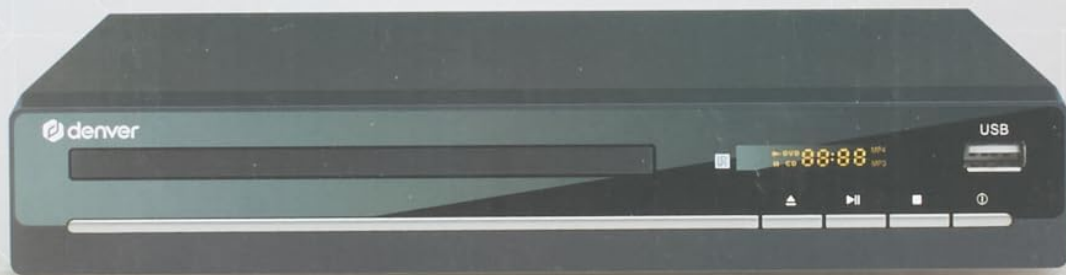

DVD



HDMI



USB



REMOTE
CONTROL

denver.eu

Image: The Denver DVH-7787 DVD Player integrated into a home entertainment setup, positioned next to a cactus and other decorative items, demonstrating its compact size.



Image: The Denver DVH-7787 DVD Player placed on a white shelf alongside a small speaker and a stack of DVDs, illustrating its compact footprint in a media setup.




Image: The Denver DVH-7787 DVD Player positioned on a wooden surface, connected to a monitor that is displaying a movie scene, demonstrating its operational use.

SETUP GUIDE

1. Unpacking and Contents

Carefully remove all components from the packaging. Please ensure the following items are present:

 - Denver DVH-7787 DVD Player
- Remote Control
- Power Cable
- User Manual (this document)

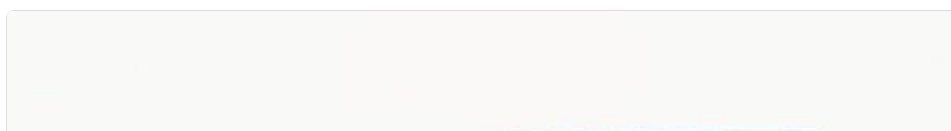

**ENG**

- Plays DVD, CD, CD-R/RW, DVD-RW/+RW, DVD-R/+R, VCD/SVCD
- USB for WMA, JPEG, AVI
- PAL/NTSC compatible
- Built-in dolby digital stereo decoder
- On screen function
- Selectable screen format (4:3/16:9)
- Scart, coaxial, video, HDMI
- Full function remote control

GER

- DVD, CD, CD-R/ RW, DVD-RW/ +RW, DVD-R/ +R, VCD/ SVCD
- USB für WMA, JPEG, AVI
- NTSC/PAL Wiedergabe
- Integrierter Dolby Digital Stereo Decoder
- OSD Menü
- Bildschirmformatumstellung (4:3/16:9) möglich
- Scart, Coaxial, video, HDMI
- Voll Funktionale Fernbedienung

DEN

- Afspiller DVD, CD, CD-R/RW, DVD-RW/+RW, DVD-R/+R, VCD/SVCD
- USB til WMA, JPEG, AVI
- PAL/NTSC kompatibel
- Indbygget dolby digital stereo dekoder
- Skærm menu
- Valgfrit skærmformat (4:3/16:9)
- Scart, coaxial, video, HDMI
- Fjernbetjening

NED

- Speelt DVD, CD, CD-R/RW, DVD-RW/+RW, DVD-R/+R, VCD/SVCD
- USB voor WMA, JPEG, AVI
- PAL/NTSC compatibel
- Ingebouwde dolby digital stereo decodeerder
- On-screen display
- Selecteerbaar schermformaat (4:3/16:9)
- Scart, coaxial, video, HDMI
- Volledig functionele afstandsbediening

FRA

- Lecture de DVD, CD, CD-R/RW, DVD-RW/+RW, DVD-R/+R, VCD/SVCD
- USB pour WMA, JPEG, AVI
- Compatible PAL/NTSC
- Décodeur stéréo dolby digital intégré
- Affichage sur écran
- Format d'écran sélectionnable (4:3/16:9)
- Péritel, coaxial, vidéo, HDMI
- Télécommande multifonctions

ESP

- Totalmente compatible con DVD, CD, CD-R/RW, DVD-RW/+RW, DVD-R/+R, VCD/SVCD
- USB de WMA, JPEG, AVI
- Compatible con PAL/NTSC
- Codificador integrado de dolby digital stereo
- Visualización en pantalla
- Selección del formato de la pantalla (4:3/16:9)
- Scart, coaxial, video, HDMI
- Control remoto de todas las funciones

ITA

- Riproduce DVD, CD, CD-R/RW, DVD-RW/+RW, DVD-R/+R, VCD/SVCD
- USB per WMA, JPEG, AVI
- compatibile con PAL/NTSC
- Decoder stereo dolby digital integrato
- Visualizzazione on-screen

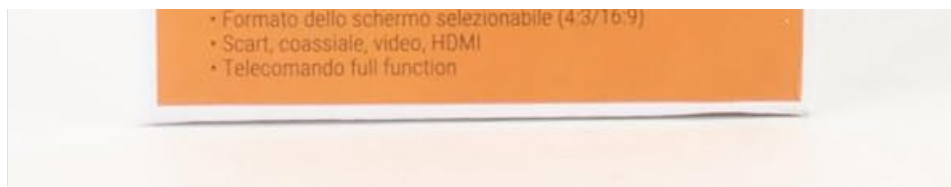 


Image: Front view of the Denver DVH-7787 DVD Player retail box, highlighting its model number, USB, HDMI, and SCART connection features.

2. Connecting to Your Television/Audio System

The DVH-7787 offers multiple connection options. Choose the one that best suits your television or audio receiver.

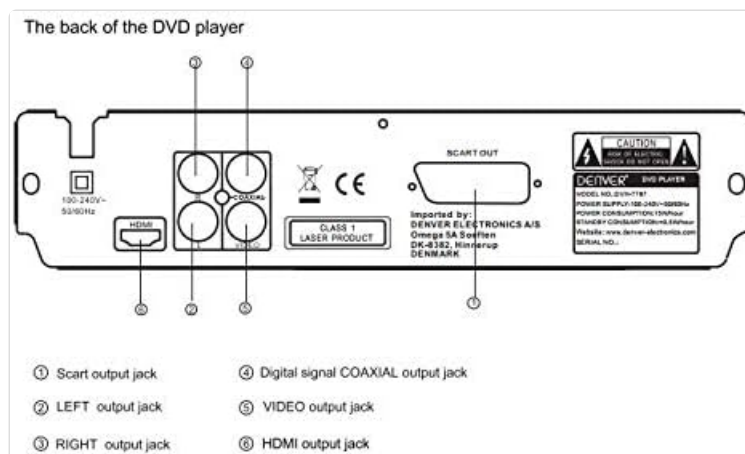


Image: Diagram illustrating the rear connections of the Denver DVH-7787 DVD Player, with numbered labels for each port.

- HDMI Connection (Recommended):** For the best video and audio quality, connect an HDMI cable (not included) from the HDMI output (labeled ⑥) on the DVD player to an HDMI input on your television. Select the corresponding HDMI input on your TV.
- SCART Connection:** If your TV has a SCART input, connect a SCART cable from the SCART OUT port (labeled ①) on the DVD player to the SCART input on your TV.
- Analog Audio/Video Connection:**
 - Connect the VIDEO output (labeled ⑤) to the video input on your TV using a yellow RCA cable.
 - Connect the LEFT output (labeled ②) and RIGHT output (labeled ③) to the corresponding audio inputs on your TV or audio receiver using red and white RCA cables.
- Digital Audio Connection:** For digital audio output, connect an optical cable from the Digital signal COAXIAL output jack (labeled ④) to a compatible digital audio input on your audio receiver or soundbar.

3. Power Connection

After connecting all necessary audio/video cables, plug the power cable into the power input on the back of the DVD player and then into a standard electrical outlet (110-240V, 50-60Hz).

OPERATING INSTRUCTIONS

1. Front Panel Controls

The front panel of your DVH-7787 DVD player features essential controls for basic operation:

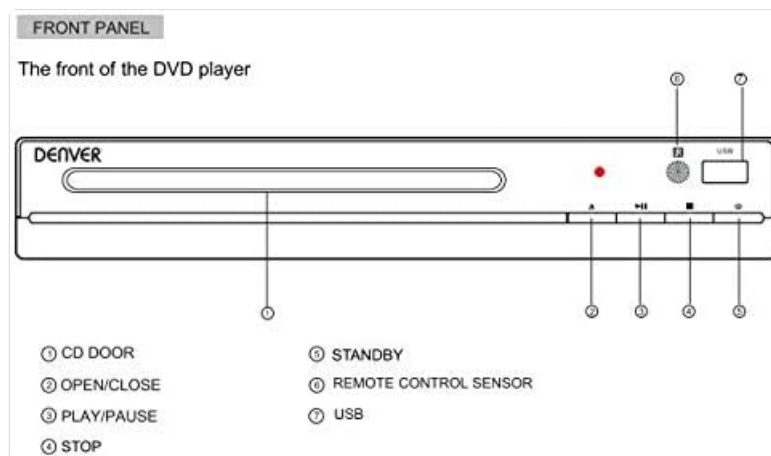


Image: Diagram illustrating the front panel controls of the Denver DVH-7787 DVD Player, with numbered labels for each button and feature.

- ① **CD DOOR:** The disc tray where you insert DVDs or CDs.
- ② **OPEN/CLOSE:** Press to open or close the disc tray.
- ③ **PLAY/PAUSE:** Press to start playback or pause a playing disc/USB media.
- ④ **STOP:** Press to stop playback.
- ⑤ **STANDBY:** Power button to turn the unit on or off (to standby mode).
- ⑥ **REMOTE CONTROL SENSOR:** Receives signals from the remote control. Ensure it is not obstructed.
- ⑦ **USB:** USB 2.0 port for playing media files from a USB flash drive.

2. Remote Control

The included remote control provides full functionality for navigating menus, controlling playback, and adjusting settings. Insert 1 AAAA battery (not included) into the remote control before first use.

3. Basic Disc Playback

1. Turn on your television and select the correct input source (e.g., HDMI 1).
2. Press the **STANDBY** button (⑤) on the front panel or the power button on the remote to turn on the DVD player.
3. Press the **OPEN/CLOSE** button (②) to open the disc tray.
4. Carefully place a DVD or CD onto the disc tray with the label side facing up.
5. Press the **OPEN/CLOSE** button (②) again to close the disc tray.
6. The player will automatically begin reading the disc. Playback should start shortly. If a menu appears, use the remote control to navigate and select your desired option.
7. Use the **PLAY/PAUSE** (③) and **STOP** (④) buttons on the front panel or remote control to manage playback.

4. USB Media Playback

The DVH-7787 supports playback of media files from a USB 2.0 flash drive.

- Insert your USB flash drive into the USB port (⑦) on the front panel.
- The player should automatically detect the USB drive and display a media browser.
- Navigate through your files using the remote control.
- Supported formats include JPG for images, and MP4, AVI for video files.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your DVD player.

1. Cleaning the Unit

- **Exterior:** Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- **Disc Tray:** Occasionally, gently wipe the disc tray with a soft, dry cloth to remove dust. Do not apply excessive force.
- **Lens:** The internal laser lens should not be cleaned manually. If disc reading issues occur, consider using a commercially available DVD lens cleaning disc.

2. Disc Care

- Always handle discs by their edges to avoid fingerprints on the playing surface.
- Store discs in their cases when not in use to prevent scratches and dust accumulation.
- Do not expose discs to direct sunlight or extreme temperatures.

TROUBLESHOOTING

If you encounter problems with your DVD player, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
No picture on TV.	Incorrect video connection or TV input.	Ensure HDMI, SCART, or RCA video cables are securely connected. Select the correct input source (e.g., HDMI 1, AV) on your television.
No sound.	Incorrect audio connection or TV/receiver volume.	Check audio cable connections (HDMI, RCA, Optical/Coaxial). Increase the volume on your TV or audio receiver. Ensure the player's audio output is not muted.
Disc does not play or loads slowly.	Disc is dirty, scratched, or incompatible format.	Clean the disc with a soft, lint-free cloth, wiping from the center outwards. Try a different disc to confirm if the issue is with the player or the disc. Ensure the disc format (DVD, CD) is supported by the player.
Remote control not working.	Batteries are dead or inserted incorrectly; sensor obstructed.	Replace the AAAA battery in the remote control. Ensure the remote control sensor on the player's front panel is not blocked. Point the remote directly at the player.
USB media not recognized.	Incompatible USB format or file type.	Ensure the USB drive is formatted to FAT32. Verify that the media files are in supported formats (JPG, MP4, AVI). Try a different USB drive.

SPECIFICATIONS

Feature	Detail
Brand	Denver
Model Number	DVH-7787 MK3

Feature	Detail
Product Dimensions	8.86 x 7.99 x 1.57 inches
Item Weight	0.317 ounces (approx. 9 grams)
Media Type Supported	DVD, CD, CD-R, CD-RW, DVD+R, DVD+RW, Blu-Ray Disc
Video Resolution	1280 x 720 pixels (HD)
Connectivity Technology	HDMI, USB 2.0, SCART, RCA (Audio/Video), Coaxial Digital Audio
Compatible Devices	Television
Special Features	Compact design
Power Requirements	110-240V, 50-60Hz
Batteries (Remote)	1 AAAA battery (not included)
GTIN (Global Trade Item Number)	05706751041341

WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your purchase or visit the official Denver Electronics website. Keep your proof of purchase for warranty claims.

If you require further assistance or technical support, please contact Denver Electronics customer service. Contact details can typically be found on the product packaging or the official website.

You can also visit the official Denver website for product information and support:denver.eu