

[manuals.plus](#) /› [REGENT](#) /› [REGENT Men's Radio-Controlled Analog Pocket Watch Model 11280077 Instruction Manual](#)**REGENT 11280077**

# **REGENT Men's Radio-Controlled Analog Pocket Watch Model 11280077 Instruction Manual**

Model: 11280077

## **1. INTRODUCTION**

This manual provides essential instructions for the proper setup, operation, and maintenance of your REGENT Men's Radio-Controlled Analog Pocket Watch, Model 11280077. This timepiece features a durable stainless steel case, a clear black dial with silver hands and indices, mineral glass, a perpetual calendar, and a radio-controlled movement for precise timekeeping. It is designed to be splash-resistant with a water resistance rating of 3 bar.



**Figure 1:** Front view of the REGENT Men's Radio-Controlled Analog Pocket Watch. The watch features a silver-tone stainless steel case, a black dial with large white Arabic numerals for hours (1-12) and smaller white markers for minutes (0-60). Silver-tone hour and minute hands are visible, along with a small digital display showing "14" and a radio signal icon, indicating its radio-controlled functionality. The brand "REGENT" is prominently displayed below the 12 o'clock position.

## 2. SETUP

### 2.1 Initial Activation and Time Synchronization

Your REGENT pocket watch is equipped with a radio-controlled movement, designed to automatically synchronize with the atomic time signal.

1. **Unpacking:** Carefully remove the watch from its packaging.

- Initial Signal Reception:** Place the watch near a window or in an open area, away from electronic devices that may cause interference. The watch will attempt to receive the time signal automatically. This process may take several minutes to several hours, depending on your location and signal strength.
- Confirmation:** Once the signal is successfully received, the watch hands will automatically adjust to the correct local time. The small digital display may show a signal reception indicator.

## 2.2 Manual Time Setting (If Automatic Synchronization Fails)

In areas with poor radio signal reception, or if you wish to set the time manually, follow these steps:

- Pull the Crown:** Gently pull the crown (the knob on the side of the watch) outwards to the time-setting position. The second hand may stop moving.
- Set the Time:** Rotate the crown to move the hour and minute hands to the desired time.
- Push the Crown:** Once the time is set, push the crown back into its normal operating position. The second hand will resume movement.

## 3. OPERATING INSTRUCTIONS

---

### 3.1 Reading the Time

The watch displays time using traditional analog hands:

- The **short hand** indicates the hour.
- The **long hand** indicates the minute.
- A **thin hand** (if present) indicates the second.

### 3.2 Perpetual Calendar Function

Your watch is equipped with a perpetual calendar, which automatically adjusts for different month lengths and leap years. The date is typically displayed in the small digital window. No manual adjustment for the date is required under normal radio-controlled operation.

## 4. MAINTENANCE

---

### 4.1 Water Resistance

This watch has a water resistance rating of 3 bar (3 ATM), meaning it is resistant to splashes and rain. It is **not** suitable for showering, bathing, swimming, or diving. Avoid pressing the crown or any buttons while the watch is wet.

### 4.2 Cleaning

To clean your watch, wipe the case and mineral glass with a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth can be used, followed immediately by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish.

### 4.3 Battery Replacement

The watch is powered by a battery. When the battery power is low, the watch's functionality may be affected. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance. Do not attempt to replace the battery yourself.

## 5. TROUBLESHOOTING

---

- **Watch not synchronizing with time signal:**

Ensure the watch is placed in an area with good signal reception, away from electronic interference. Try placing it near a window overnight. If issues persist, manual time setting is an option.

- **Incorrect time displayed:**

Check if the watch has successfully synchronized. If not, attempt manual time setting as described in Section 2.2. A low battery can also affect timekeeping accuracy.

- **Watch stops working:**

This may indicate a depleted battery. Contact a qualified watch technician for battery replacement. If the issue persists after battery replacement, professional inspection may be required.

- **Condensation under the glass:**

This can indicate a loss of water resistance. Avoid further exposure to moisture and have the watch inspected by a professional immediately to prevent internal damage.

## 6. SPECIFICATIONS

Feature	Detail
Model Number	11280077
Brand	REGENT
Movement	Radio-controlled
Case Material	Stainless Steel
Case Diameter	49 mm
Dial Color	Black
Glass Type	Mineral Glass
Water Resistance	3 bar (3 ATM) - Splash resistant
Special Features	Perpetual Calendar, Analog Display, Digital Date Display
Item Weight	130 grams
Package Dimensions	10.3 x 9.1 x 5.9 cm

## 7. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact your retailer. For technical support or service inquiries, please reach out to the REGENT customer service department or an authorized service center.

**Manufacturer:** Regent