

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EYE-VAC](#) /

› [EYE-VAC Home Touchless Vacuum Automatic Dustpan \(Model EVH-S\) Instruction Manual](#)

EYE-VAC EVH-S

EYE-VAC Home Touchless Vacuum Automatic Dustpan (Model EVH-S) Instruction Manual

Model: EVH-S

1. INTRODUCTION

Thank you for choosing the EYE-VAC Home Touchless Vacuum Automatic Dustpan. This device is designed to simplify floor cleaning by automatically vacuuming debris swept towards its inlet. It features touchless operation via infrared sensors, a powerful 1000-watt motor, and high-efficiency filters to capture dust, hair, and other dry debris. Please read this manual thoroughly before initial use to ensure proper operation and maintenance.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using this appliance.
- This appliance is for indoor use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum. Close supervision is necessary when used near children.
- Unplug the appliance from the electrical outlet when not in use and before cleaning or servicing.
- Do not handle the plug or appliance with wet hands.
- Do not vacuum liquids, hot ashes, burning or smoking objects, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not use without filters and dust canister in place.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present:

- EYE-VAC Home Touchless Vacuum Unit
- High-Capacity Bagless Canister

- High-Efficiency Washable Filters (Pre-Motor and Exhaust)
- Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your EYE-VAC Home unit:

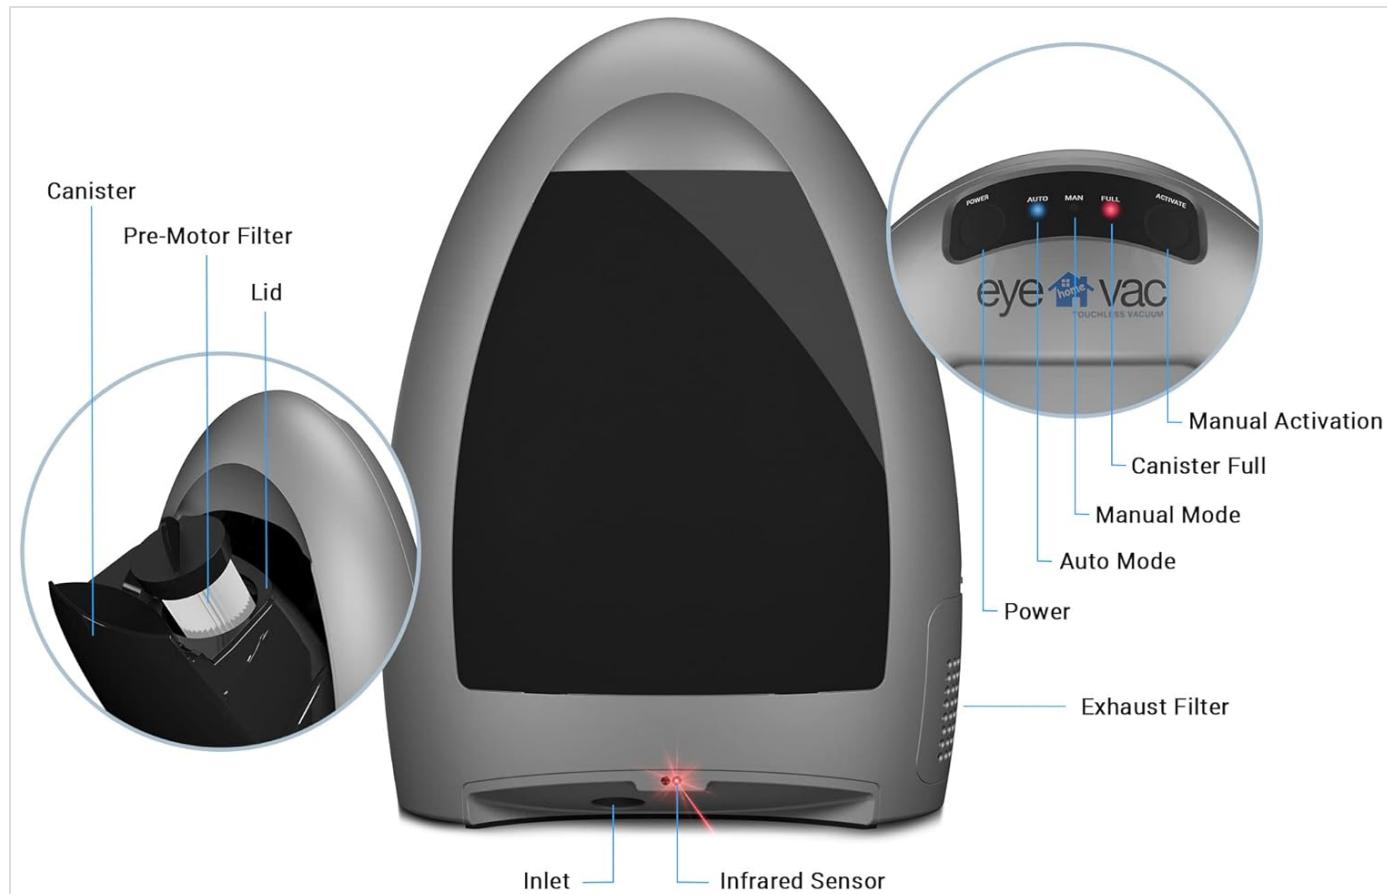


Image: An annotated diagram detailing the key components of the EyeVac unit, including its internal canister, filters, control panel, and sensor locations. Key parts shown are the Canister, Pre-Motor Filter, Lid, Power button, Auto Mode, Manual Mode, Canister Full indicator, Manual Activation button, Exhaust Filter, Inlet, and Infrared Sensor.

- **Power Button:** Turns the unit on or off.
- **Auto Mode:** Activates the infrared sensors for automatic operation.
- **Manual Mode:** Allows manual activation of the vacuum.
- **Canister Full Indicator:** Illuminates when the dust canister requires emptying.
- **Activate Button:** Used to manually start the vacuum in Manual Mode.
- **Infrared Sensor:** Detects debris swept into the inlet, triggering automatic suction.
- **Inlet:** The opening where debris is vacuumed.
- **Canister:** Removable container for collecting debris.
- **Pre-Motor Filter:** Filters air before it reaches the motor.
- **Exhaust Filter:** Filters air before it is released back into the environment.

5. SETUP

Setting up your EYE-VAC Home is a straightforward process:

1. **Unpack the Unit:** Carefully remove all packaging materials.

2. **Place in Desired Location:** Position the EyeVac on a flat, dry surface in an area where sweeping is frequently performed, such as a kitchen or entryway. Ensure the power cord can reach an electrical outlet without being strained.
3. **Plug In:** Connect the power cord to a standard electrical outlet.

4 Steps to a Clean Home



Image: A visual guide outlining the four simple steps for operating the EyeVac: placement, mode selection, sweeping debris, and emptying the canister.

6. OPERATING INSTRUCTIONS

The EYE-VAC Home offers two operating modes: Auto and Manual.

6.1. Auto Mode (Recommended for daily use)

1. Press the **Power** button to turn on the unit.
2. Press the **Auto** button. The blue indicator light for Auto mode will illuminate.
3. Sweep debris directly towards the inlet of the EyeVac. The infrared sensors will detect the debris and automatically activate the vacuum for a few seconds to suction the debris into the canister.

4. The vacuum will automatically turn off once the debris is cleared.

6.2. Manual Mode

1. Press the **Power** button to turn on the unit.
2. Press the **Manual** button. The blue indicator light for Manual mode will illuminate.
3. To activate the vacuum, press the **Activate** button. The vacuum will run continuously until the Activate button is pressed again, or until the unit is switched off.
4. Sweep debris into the inlet while the vacuum is running.



Image: This image shows the EyeVac Home Touchless Vacuum in action, demonstrating how a broom sweeps debris directly into the unit's intake port for automatic suction.

Quick. Convenient. Clean.



Image: Illustrates the versatility of the EyeVac, capable of collecting common household debris such as dust, dirt, pet hair, and food crumbs from hard floors.

Perfect for any home



Image: Depicts the EyeVac seamlessly integrated into a home kitchen, showing a user sweeping debris directly into the unit for efficient cleanup.

7. MAINTENANCE


Regular maintenance ensures optimal performance and extends the life of your EyeVac.

7.1. Emptying the Dust Canister

The "Canister Full" indicator light will illuminate when the canister needs to be emptied.

1. Ensure the unit is turned off and unplugged.
2. Grasp the lid handle and lift the lid to access the canister.
3. Carefully remove the canister from the unit.
4. Empty the collected debris into a trash bin.
5. Replace the canister and close the lid securely.

EyeVac is perfect for

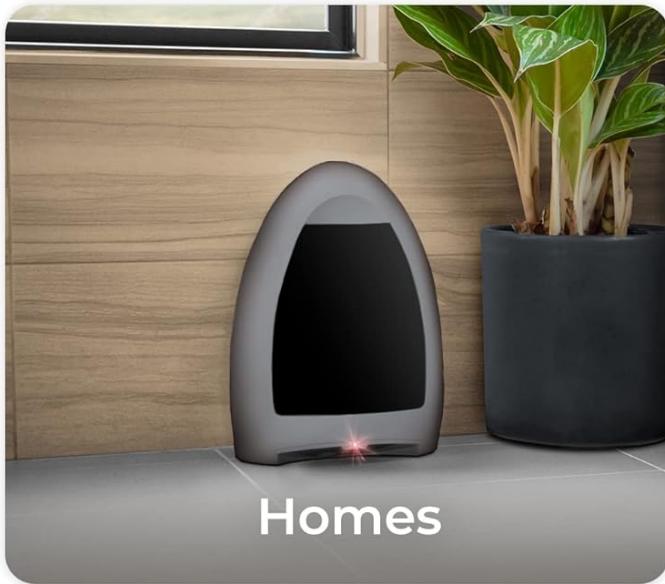


Homes



Pet Owners



Parents

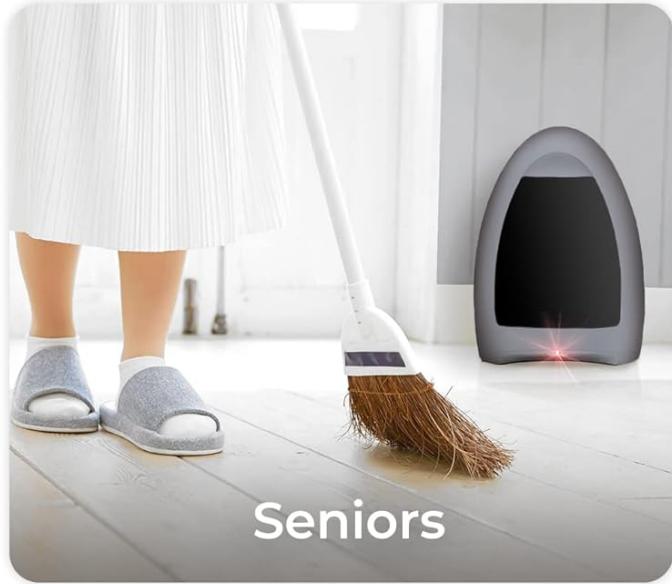

Seniors

Image: This image demonstrates the EyeVac's suitability for diverse users and settings, highlighting its utility for general home cleaning, pet owners managing pet hair, parents cleaning up messes, and seniors benefiting from its no-bend operation.

7.2. Cleaning the Filters

The EyeVac is equipped with high-efficiency washable filters. Clean them regularly to maintain suction power.

1. Ensure the unit is turned off and unplugged.
2. Remove the dust canister as described above.
3. Carefully remove the pre-motor filter from the canister.
4. Tap the filter gently over a trash bin to remove loose dust. For a deeper clean, rinse the filter under cool running water until the water runs clear.
5. Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use the vacuum with a wet filter.
6. The exhaust filter is typically located on the side or back of the unit. Refer to the product overview diagram for its exact location. Remove and clean it similarly to the pre-motor filter.
7. Replace both filters and the dust canister securely before operating the unit.

8. TROUBLESHOOTING

If you encounter issues with your EyeVac, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Unit is unplugged. No power to outlet. Power button not pressed.	Ensure unit is plugged in. Check circuit breaker. Press the Power button.
Vacuum does not activate in Auto Mode.	Infrared sensor is dirty or obstructed. Auto mode not selected. Debris is too far from sensor.	Clean the infrared sensor with a soft cloth. Ensure Auto mode is selected. Sweep debris closer to the inlet.
Reduced suction power.	Dust canister is full. Filters are clogged. Inlet is obstructed.	Empty the dust canister. Clean or replace filters. Check and clear any obstructions from the inlet.
Vacuum is excessively noisy.	Inlet or hose is blocked. Canister or filters are not properly seated.	Check for and remove any blockages. Ensure canister and filters are correctly installed.
Canister Full indicator remains on after emptying.	Sensor for canister full is dirty or obstructed.	Clean the sensor located near the canister. Ensure canister is fully seated.

9. SPECIFICATIONS

Feature	Detail
Brand	EYE-VAC
Model Name	EyeVac Home Touchless Stationary Vacuum
Model Number	EVH-S
Color	Silver
Special Feature	Motion-Activated, Powerful Suction, Easy To Use
Filter Type	Cartridge, High-Efficiency Washable Filters
Included Components	High-Capacity Bagless Canister, High-Efficiency Washable Filters
Cordless	No (Corded)
Capacity	4 Liters
Wattage	1000 watts
Recommended Uses	Vacuuming & Cleaning hard floors
Form Factor	Canister
Product Dimensions	13" L x 8" W x 18" H
Noise Level	75 dB
Amperage	8.33 Amps

Feature	Detail
Control Method	Touch, Push Button
Connectivity Technology	Infrared
Item Weight	7.6 pounds
Indoor/Outdoor Usage	Indoor
UPC	854082000911

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official EYE-VAC website. Keep your proof of purchase for any warranty claims.

Related Documents - EVH-S

	<p><u>EyeVac Professional Touchless Vacuum Cleaner User Manual and Guide</u> Comprehensive user manual for the EyeVac Professional touchless vacuum cleaner, covering safety instructions, operating procedures, maintenance, troubleshooting, and warranty information.</p>
	<p><u>EyeVac Plus User Manual: Safety, Operation, and Maintenance Guide</u> Comprehensive user manual for the EyeVac Plus touchless vacuum trash can. Includes safety instructions, setup, operation, maintenance, troubleshooting, and warranty information.</p>
	<p><u>EyeVac Quick Set Up Guide</u> A quick setup guide for the EyeVac touchless sensor activated trash bin, detailing how to replace the liner bag and open the lid, along with initial setup instructions.</p>

 User Manual	<p><u>EyeVac Pet Touchless Vacuum User Manual: Operation, Maintenance, and Troubleshooting</u></p> <p>Comprehensive user manual for the EyeVac Pet Touchless Vacuum. Learn about safety, operation, cleaning, maintenance, troubleshooting, and warranty information for your EyeVac Pet.</p>
 User Manual	<p><u>EyeVac Air User Manual: Operation, Maintenance, and Troubleshooting Guide</u></p> <p>Comprehensive user manual for the EyeVac Air touchless vacuum and air purifier. This guide provides detailed instructions on operation, maintenance, filter replacement, troubleshooting common issues, and warranty information.</p>
 USER MANUAL	<p><u>EyeVac+ Touchless Vacuum Cleaner User Manual</u></p> <p>Comprehensive user manual for the EyeVac+ touchless vacuum cleaner, detailing safety instructions, setup, operation, maintenance, troubleshooting, and warranty information for household use.</p>