

[Manuals.plus](#) /

› [SIMPLE HOUSEWARE](#) /

› Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart, Silver - Instruction Manual

SIMPLE HOUSEWARE BO-011-7

Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart, Silver

Model: BO-011-7

INTRODUCTION

Thank you for choosing the Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart. This product is designed to streamline your laundry organization with its robust construction and convenient mobility. Featuring a durable silver-finish steel frame and three heavy-duty bags, it provides an efficient solution for sorting clothes. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your laundry sorter.



Image: The Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart in Silver, showcasing its three grey laundry bags and sturdy metal frame with wheels.

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Do not overload the laundry bags or the cart. Exceeding the weight capacity may cause damage or injury.
- Ensure all bolts and connections are securely tightened before use and periodically check for looseness.
- Use the cart on a level, stable surface. Avoid sloped or uneven terrain to prevent tipping.
- Engage the wheel brakes when the cart is stationary to prevent unintended movement.
- Keep small parts and packaging materials away from children and pets to prevent choking hazards.
- This product is intended for indoor household use only.

- Proposition 65 Warning: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

PACKAGE CONTENTS



Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Steel Frame Components (various bars and connectors)
- 3 x Heavy-Duty Laundry Bags (Grey)
- 4 x Heavy-Duty Casters (2 with brakes)
- Assembly Hardware (bolts, nuts, wrench)

ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the package contents list.
2. **Assemble the Base Frame:** Connect the horizontal and vertical bars of the base frame using the provided hardware. Ensure all connections are snug but do not overtighten initially.
3. **Attach Casters:** Insert the four casters into the designated holes at the bottom corners of the base frame. Two casters have locking mechanisms; it is recommended to place these on the same side for easier access. Tighten securely.
4. **Assemble the Upper Frame:** Connect the upper horizontal bars and the curved handle bars to the vertical supports. Ensure the extra horizontal bar is positioned correctly behind the main bar for added stability.
5. **Secure All Connections:** Once the frame is fully assembled, go back and tighten all bolts and nuts firmly with the provided wrench. Ensure the frame is stable and does not wobble.
6. **Install Laundry Bags:** Hang the three heavy-duty laundry bags onto the hooks of the upper frame. Ensure the bags are evenly distributed and securely attached.

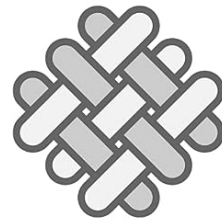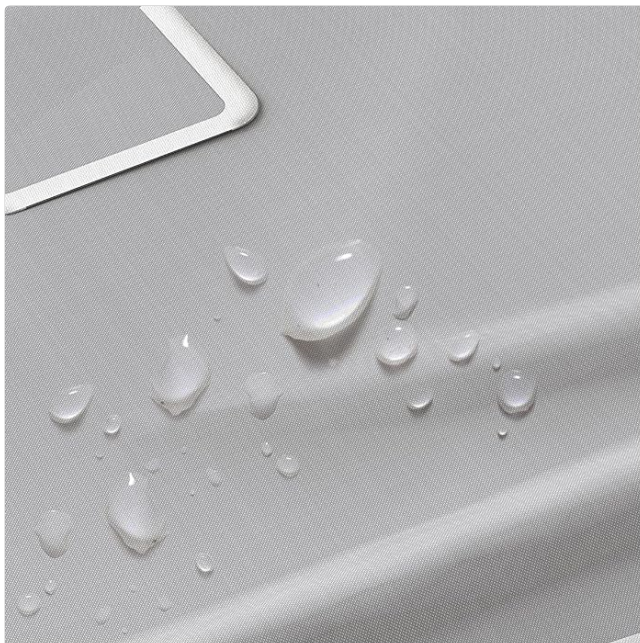

Heavy Duty 600D Polyester Fabric



Waterproof and Easy Clean

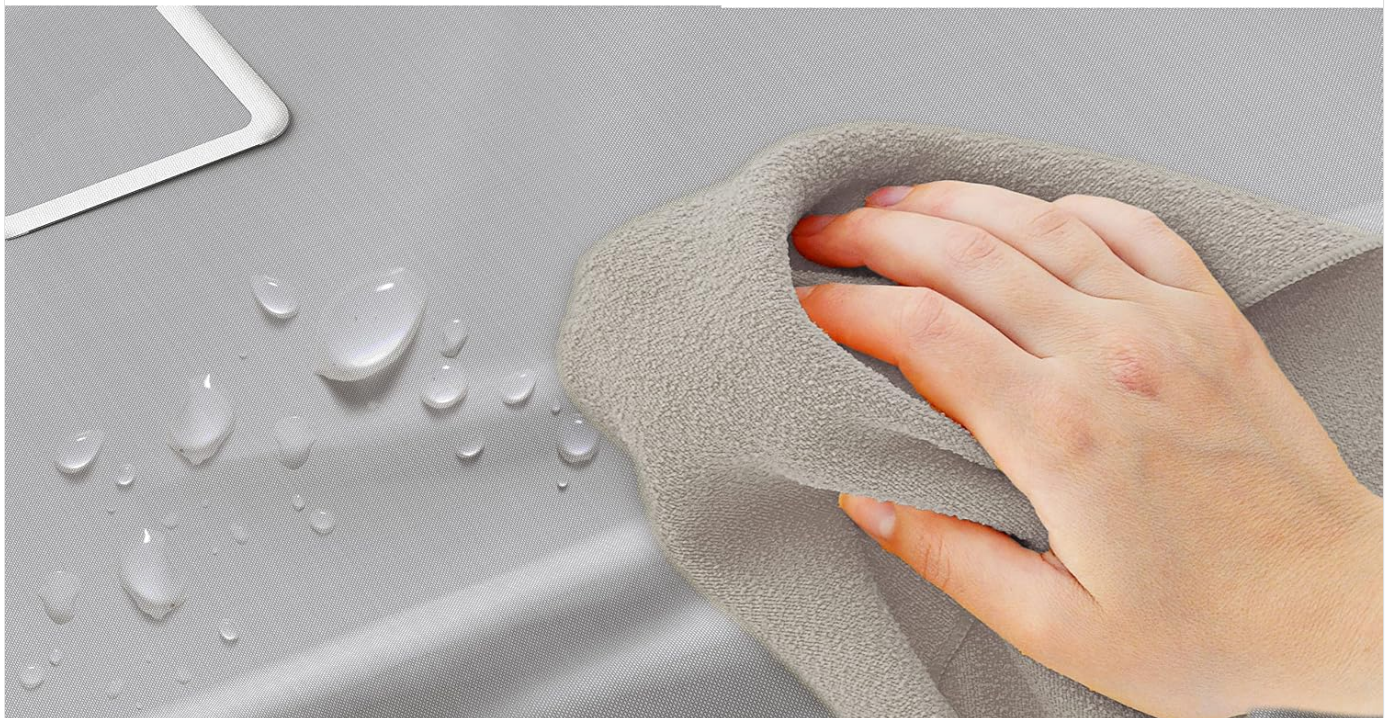 


Image: Detailed view showing the heavy-duty casters with a brake mechanism and the sturdy steel handles of the laundry bags, highlighting key features for assembly and use.

OPERATING INSTRUCTIONS

Using your Simple Houseware Laundry Sorter Cart is straightforward:

- **Sorting Laundry:** Utilize the three separate bags to sort your laundry by color, fabric type, or wash cycle. Each bag holds approximately 13 gallons of clothes.
- **Mobility:** The cart is equipped with four heavy-duty casters for smooth rolling. To move the cart, simply unlock the brakes (if engaged) and push it to your desired location.
- **Braking:** When the cart is in its desired position, engage the brakes on the two locking casters to prevent the cart from rolling.
- **Removing Bags:** The bags can be easily lifted off the frame using their integrated handles, allowing for convenient

transport of laundry to the washing machine.



Image: The laundry sorter cart positioned in a modern laundry room next to a washing machine, demonstrating its practical placement.



Image: The laundry sorter cart situated within a spacious closet, illustrating its utility for organizing clothes before washing.

CARE AND MAINTENANCE

Proper care will extend the life of your laundry sorter:

- **Cleaning the Bags:** The heavy-duty grey bags are easy to clean and waterproof. Wipe them down with a damp cloth and mild detergent as needed. Allow to air dry completely before reattaching to the frame.
- **Cleaning the Frame:** Wipe the steel frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Caster Maintenance:** Periodically check the casters for lint, hair, or debris that may impede smooth rolling. Clean as necessary.
- **Regular Inspection:** Routinely check all bolts and connections to ensure they remain tight and secure. Tighten any loose hardware to maintain stability.



Wheels with brake



Sturdy Steel Handles

Image: A close-up demonstrating the waterproof nature of the bag fabric with water droplets, and a hand wiping the fabric, illustrating its easy-to-clean surface.

TROUBLESHOOTING

If you encounter any issues with your laundry sorter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cart wobbles or feels unstable.	Loose assembly bolts.	Ensure all assembly bolts are securely tightened. Refer to assembly instructions.
Casters do not roll smoothly.	Debris caught in casters; brakes engaged.	Clean any lint, hair, or debris from the caster wheels. Ensure brakes are disengaged.
Laundry bags slip off hooks.	Bags not properly hung or overloaded.	Ensure bag handles are fully seated on the hooks. Do not exceed the bag's capacity.

PRODUCT SPECIFICATIONS

Detailed specifications for the Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart:

Product Dimensions: 17.5"D x 30.5"W x 33"H (height includes casters)

Brand: SIMPLE HOUSEWARE

Material: Alloy Steel (frame)

Color: Silver (frame), Grey (bags)

Item Weight: 9.57 Pounds

Number of Bags: 3

Bag Capacity: 13 Gallons per bag

Number of Wheels: 4 (2 with brakes)

Assembly Required: Yes

Model Number: BO-011-7

UPC: 811244030926

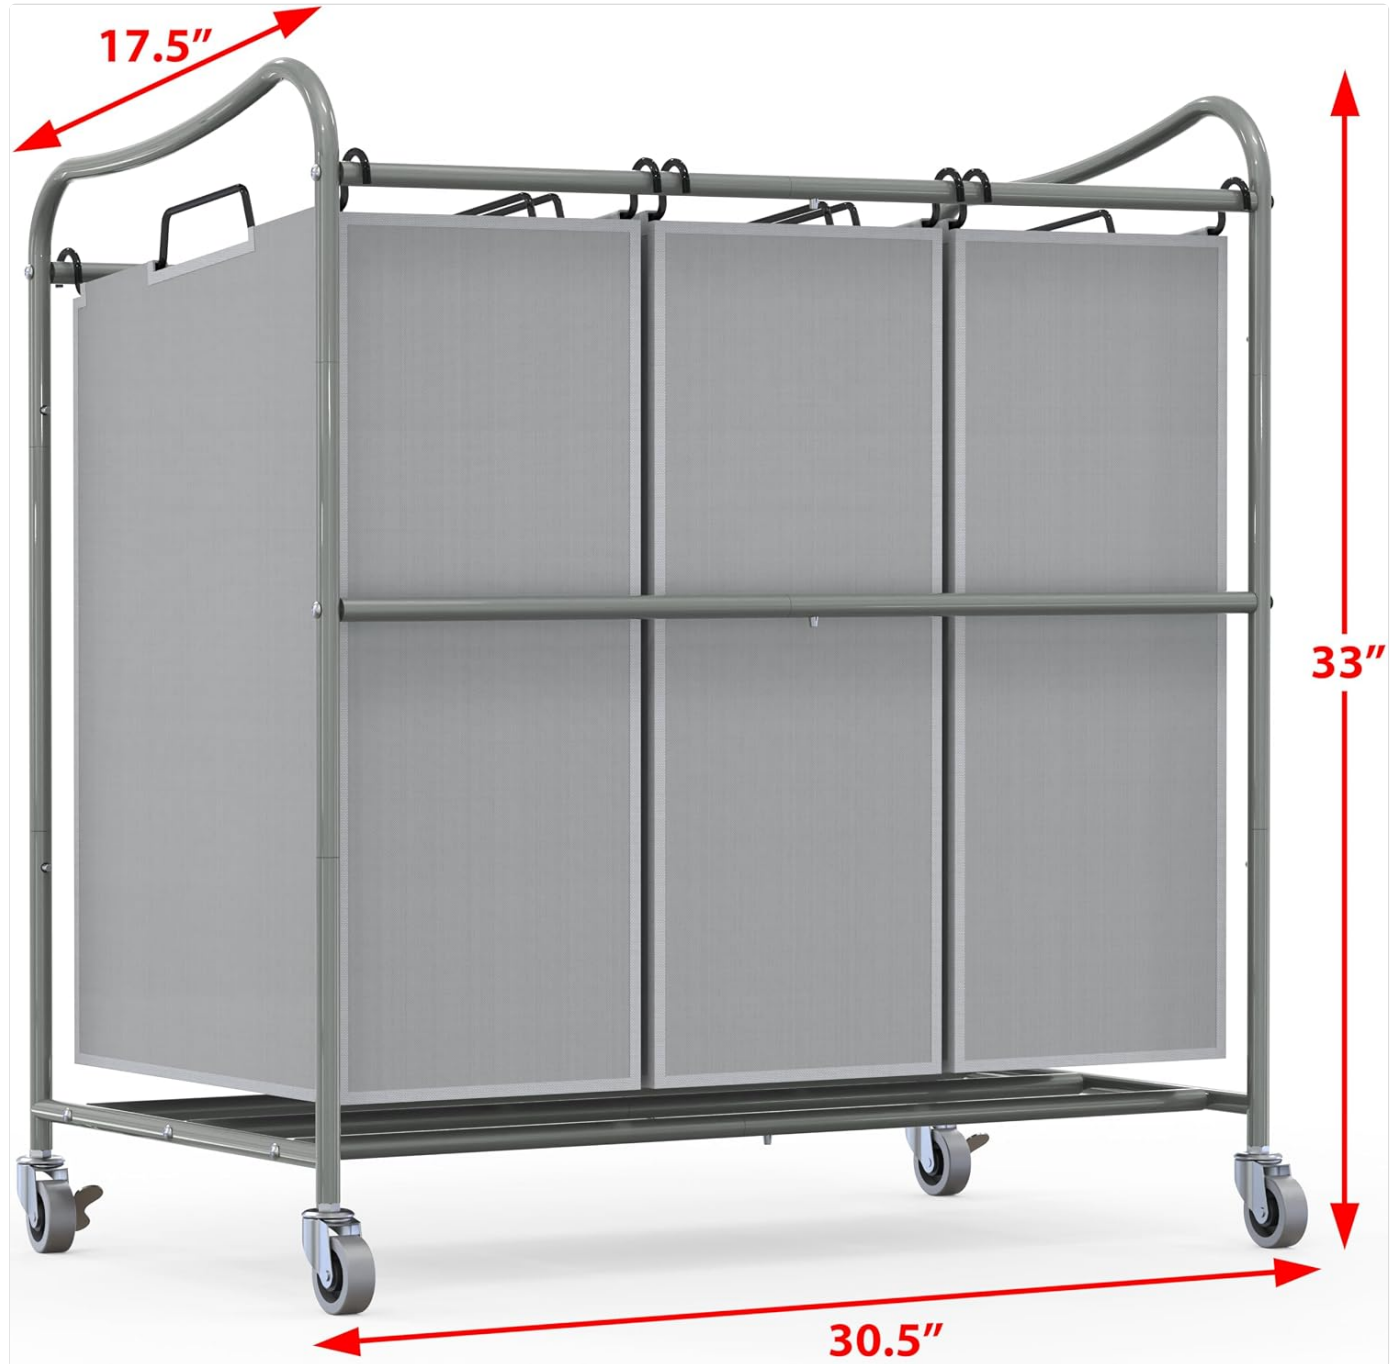 


Image: A diagram illustrating the key dimensions of the laundry sorter cart, including its depth (17.5"), width (30.5"), and height (33").

WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your Simple Houseware Heavy-Duty 3-Bag Laundry Sorter Cart, please contact the seller or manufacturer directly. Please have your model number (BO-011-7) and purchase information ready when contacting

support.

Typically, support can be reached through the platform where the product was purchased (e.g., Amazon's customer service for items sold by EPFamily Direct).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07H51TJLX>

More documents and user manuals: <https://manuals.plus/>