

- Manuals.plus /
- > [Redi-Remote](#) /
 - > Replacement Remote for Insignia NS-SB314, NSSB314 - User Manual

Redi-Remote RT600SB31405B

Replacement Remote for Insignia NS-SB314, NSSB314 - User Manual

Model: RT600SB31405B | Brand: Redi-Remote

INTRODUCTION

This user manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed specifically for Insignia NS-SB314 and NSSB314 soundbar models. This remote is a custom-built replacement and is not an original Insignia product. It is engineered to function immediately upon battery installation, requiring no programming.

PRODUCT OVERVIEW



Image: Front view of the Redi-Remote replacement remote control. The top section features power, channel, volume, mute, menu, and

recall buttons, along with a numeric keypad. The lower section, revealed by sliding down a cover, includes buttons for various audio inputs (Optical, Aux In, RCA, Bluetooth) and sound modes (Standard, Theater, News, Bass), as well as additional volume controls.

The remote features a standard layout with essential controls on the upper section and a slide-down cover revealing additional functions for sound modes and input selection. Its dimensions are approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: This remote control does not require programming. It is designed to work immediately with compatible Insignia NS-SB314 and NSSB314 soundbar models once batteries are installed.

OPERATING INSTRUCTIONS

Basic Functions (Upper Section)

- **PWR (Power):** Turns the soundbar on or off.
- **VOL +/- (Volume):** Increases or decreases the soundbar volume.
- **MUTE:** Mutes or unmutes the sound.
- **CH +/- (Channel):** Navigates through channels (if applicable to soundbar functions).
- **MENU:** Accesses the soundbar's menu options.
- **RECALL:** Recalls previous settings or channels.
- **Numeric Keypad (0-9, 100, ENT):** For direct input of channels or settings.

Advanced Functions (Lower Section - Slide Down)

To access these functions, gently slide down the cover located at the bottom of the remote.

- **POWER (Lower):** Additional power control.
- **MUTE (Lower):** Additional mute control.
- **OPTICAL:** Selects Optical audio input.
- **AUX IN:** Selects Auxiliary audio input.
- **RCA:** Selects RCA audio input.
- **BLUETOOTH:** Activates Bluetooth pairing mode or selects Bluetooth input.
- **STANDARD:** Sets sound mode to Standard.
- **THEATER:** Sets sound mode to Theater.
- **NEWS:** Sets sound mode to News.
- **BASS:** Adjusts bass levels.
- **VOL+ / VOL- (Lower):** Fine-tunes volume.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote. Do not use liquid cleaners or aerosols.
- **Battery Replacement:** Replace batteries when the remote's responsiveness decreases. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with proper polarity and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Ensure there is a clear line of sight between the remote's infrared emitter and the soundbar's receiver. Obstructions can block the signal.
- **Distance:** Operate the remote within the effective range of the soundbar.
- **Soundbar Power:** Confirm the Insignia soundbar is powered on and functioning correctly.

Specific Functions Not Working

- **Slide-Down Cover:** For advanced functions, ensure the lower cover is fully slid down to expose the buttons.
- **Compatibility:** This remote is specifically designed for Insignia NS-SB314 and NSSB314 models. It may not be compatible with other Insignia soundbar models or other brands.

SPECIFICATIONS

Model Number	RT600SB31405B
Brand	Redi-Remote
Compatibility	Insignia NS-SB314, NSSB314 Soundbars
Dimensions (L x W x H)	7.5 x 2.25 x 0.75 inches (approx.)
Weight	5 ounces
Batteries Required	4 x AAA (not included)
Connectivity Technology	Infrared

WARRANTY AND SUPPORT

Redi-Remotes are guaranteed to work right out of the package with batteries installed. They do not require programming. For any concerns or issues with the remote after purchase, please contact the seller directly for support. Refer to your purchase documentation for specific contact information.

Note: This is a custom-built replacement remote and is not covered under Insignia's original product warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07H5V2YM9>

More documents and user manuals: <https://manuals.plus/>