

ECONTROLLY N2QAYB000626

ECONTROLLY N2QAYB000626 Remote Control User Manual

For Panasonic Home Stereo Systems SC-XH50, SA-XH50

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY N2QAYB000626 remote control, designed for use with Panasonic Home Stereo Systems, including models SC-XH50 and SA-XH50. This remote control offers direct functionality without the need for programming.

2. SETUP: BATTERY INSTALLATION

To begin using your remote control, install two AAA batteries. Ensure correct polarity as indicated inside the battery compartment.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two new AAA alkaline batteries, matching the (+) and (-) terminals with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Figure 2.1: Battery compartment with N2QAYB000626 label visible, indicating where to insert AAA batteries.

3. OPERATING INSTRUCTIONS

This remote control is pre-programmed for compatible Panasonic Home Stereo Systems. No additional programming or setup is required. Once batteries are installed, the remote is ready for immediate use.

3.1. Compatibility

The N2QAYB000626 remote control is compatible with the following Panasonic Home Stereo System models:

- SC-XH50
- SA-XH50
- SAXH50

3.2. Basic Functions

Point the remote control directly at the infrared receiver on your Panasonic Home Stereo System. Press the desired function button.





Figure 3.1: Overview of the N2QAYB000626 remote control buttons.

4. PRODUCT FEATURES AND BUTTON LAYOUT

The remote control features a standard layout for easy navigation and control of your home stereo system. Below is a description of key button groups:

- **Power/Input Buttons:** Located at the top, these buttons control the power (TV, System) and input selection (TV, INPUT, AV).
- **Volume Controls:** Dedicated buttons for adjusting volume (VOL +, VOL -) and muting audio (MUTE).
- **Numeric Keypad:** Buttons 0-9, CANCEL, and ≥10 for direct track or channel selection.
- **Source Selection:** Buttons for selecting DVD, RADIO, and EXT-IN sources.
- **Playback Controls:** Includes SEARCH, PLAY, SKIP (forward/backward), SLOW, PAUSE, and STOP for media playback.
- **Navigation and Menu:** A central circular pad with directional arrows (up, down, left, right) and an OK button for menu navigation and selection. Surrounding buttons include TOP MENU, MENU, RETURN, and EXIT.
- **System Functions:** Buttons for specific audio and display settings such as SOUND, SURROUND, W SRD, FL DISPLAY, CH SELECT, SLEEP, PLAY MODE, and REPEAT.

5. SPECIFICATIONS

Model Number	N2QAYB000626
Brand	ECONTROLLY
Compatible Devices	Panasonic Home Stereo System (SC-XH50, SA-XH50, SAXH50)
Connectivity Technology	Infrared
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches
Item Weight	1 ounce

6. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the stereo system's infrared sensor.
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA alkaline batteries.
 - Ensure there are no obstructions between the remote and the stereo system.
- **Intermittent response:**
 - Batteries may be low; replace them.
 - Ensure a clear line of sight to the stereo system.

7. MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- Do not drop the remote control or subject it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the documentation provided with your purchase or contact the retailer. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question