

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY AXD7684 AV Remote Control User Manual for Pioneer Receivers X-EM21V, X-EM11

ECONTROLLY AXD7684

ECONTROLLY AXD7684 AV Remote Control User Manual

For Pioneer Receiver Models: X-EM21V, X-EM11

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your ECONTROLLY AXD7684 AV Remote Control. This remote is designed for use with Pioneer Receiver models X-EM21V and X-EM11.





Image 1: Front view of the ECONTROLLY AXD7684 AV Remote Control. The remote is black with grey buttons, featuring a central directional pad, playback controls, volume controls, and a numeric keypad. The Pioneer logo and model number AXD7684 are visible at the bottom.

SETUP

Battery Installation

The ECONTROLLY AXD7684 remote control requires two (2) AAA batteries for operation. No programming or pairing is necessary; simply install the batteries to begin use.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.

4. Replace the battery compartment cover by sliding it back into position until it clicks securely.





Image 2: Back view of the ECONTROLLY AXD7684 remote control, showing the battery compartment. A single AAA battery is shown next to the remote, illustrating the type of battery required.

Once batteries are installed, the remote is ready for immediate use with compatible Pioneer Receiver models X-EM21V and X-EM11.

OPERATING INSTRUCTIONS

This remote control provides full functionality for your compatible Pioneer AV receiver. Point the remote directly at the receiver's infrared sensor for optimal performance.

Key Functions Overview

- **STANDBY/ON ():** Powers the receiver on or off.
- **DISC/USB:** Selects the Disc or USB input source.
- **TUNER:** Selects the Tuner input source.
- **iPod:** Selects the iPod input source.
- **OPEN/CLOSE:** Opens or closes the disc tray (if applicable).
- **AUX:** Selects the Auxiliary input source.
- **MODE:** Cycles through various audio modes.
- **SLEEP/TIMER:** Sets the sleep timer or other timer functions.
- **DISPLAY/CLOCK:** Changes display information or sets the clock.
- **MENU:** Accesses the main menu of the receiver.
- **TOP MENU:** Accesses the top menu of a disc.
- **Directional Pad (▲ ▼ ◀ ▶) & ENTER:** Navigates menus and confirms selections.
- **SYSTEM MENU:** Accesses system-specific settings.
- **RETURN:** Goes back to the previous menu or screen.
- **Playback Controls (, / , , ■):** Control media playback (rewind, play/pause, fast forward, stop).
- **VOL (+/-):** Adjusts the volume level.
- **Numeric Keypad (0-9):** Direct input for track numbers, channels, or other numerical selections.
- **A-B REPEAT:** Repeats a specified section of audio/video.
- **GOTO:** Jumps to a specific time or chapter.
- **EQ:** Adjusts equalizer settings.
- **P.BASS:** Enhances bass output.
- **SUBTITLE:** Toggles or selects subtitle tracks.
- **ANGLE/PROG:** Changes camera angle or accesses programming functions.
- **ZOOM:** Zooms in on video content.
- **STEP:** Advances playback frame by frame.
- **MUTE:** Mutes or unmutes the audio.
- **AUDIO:** Selects audio tracks or formats.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new alkaline batteries of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal circuitry.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control is not working.	• Dead or incorrectly installed batteries. • Obstruction between remote and receiver. • Remote control sensor on receiver is blocked. • Remote control is out of range.	• Replace batteries with new AAA alkaline batteries, ensuring correct polarity. • Remove any objects blocking the line of sight between the remote and the receiver. • Ensure the receiver's infrared sensor is clean and unobstructed. • Move closer to the receiver and ensure you are within effective range (typically up to 20 feet).
Remote control works intermittently.	• Low battery power. • Interference from other electronic devices.	• Replace batteries. • Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

- **Model:** AXD7684 (RCEC-AXD7684)
- **Brand:** ECONTROLLY
- **Compatible Receiver Models:** Pioneer X-EM21V, X-EM11
- **Power Source:** 2 x AAA Batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 1 ounce
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 18 (referring to the remote's internal capability, but this specific model is pre-programmed for Pioneer receivers)

WARRANTY AND SUPPORT

Specific warranty information for the ECONTROLLY AXD7684 remote control is not provided in this manual. For warranty details, technical support, or further assistance, please refer to the documentation provided with your purchase or contact the seller directly.

You may also visit the [ECONTROLLY brand page on Amazon](#) for potential support resources.

© 2023 ECONTROLLY. All rights reserved.

This manual is for informational purposes only. ECONTROLLY is not responsible for any damages or injuries resulting from improper use of this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question