

Braun SES 7/880

Braun Silk-épil 7 7-880 Epilator User Manual

Model: SES 7/880

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before using the appliance. Keep them for future reference.

- This appliance is suitable for use in a bath or shower. For safety reasons, it can only be operated cordless.
- Do not use the appliance on irritated skin, open wounds, moles, or varicose veins. Consult a doctor if you have a skin condition, diabetes, or poor circulation.
- Keep the appliance dry when not in use and store it in a safe place, out of reach of children.
- The appliance is equipped with a special cord set with an integrated Safety Extra Low Voltage power supply. Do not exchange or manipulate any part of it. Otherwise, there is a risk of electric shock.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

2. PRODUCT OVERVIEW

The Braun Silk-épil 7 7-880 is a Wet & Dry epilator designed for gentle and efficient hair removal. It features SensoSmart technology to guide your epilation, ensuring optimal pressure for effective hair removal. The MicroGrip technology is engineered to remove hair as short as 0.5mm, which is four times shorter than wax can catch. This cordless device can be used in the bath or shower for a more comfortable experience.



Figure 1: Braun Silk-épil 7 7-880 Epilator with its main head.

Key features include:

- **SensoSmart Technology:** Guides your epilation with a red light to indicate too much pressure, ensuring the right amount of force for efficient hair removal.
- **MicroGrip Tweezers:** Designed to capture even the shortest hairs (0.5mm) for long-lasting smoothness.
- **Wet & Dry Use:** Can be used in the bath or shower for a more comfortable and gentle experience.
- **Smartlight:** Illuminates even the finest hairs for thorough removal.
- **Pivoting Head:** Adapts to body contours for maximum skin contact.
- **Attachments:** Comes with 7 extras, including a shaver head and trimmer cap for sensitive areas.

3. SETUP AND CHARGING

Before first use, or when the battery is low, charge your epilator. The Braun Silk-épil 7 7-880 is a cordless, rechargeable device.

1. Ensure the epilator is switched off.

2. Connect the special cord set to the epilator and plug it into an electrical outlet.
3. A charging indicator light will illuminate. Charge the device for approximately 1 hour for a full charge, providing up to 50 minutes of cordless use.
4. The epilator cannot be operated while plugged into the power outlet. This is a safety feature for wet use.

Attaching and Detaching Heads

The epilator comes with various attachments for different uses. To change an attachment:

1. Ensure the epilator is switched off.
2. Grip the sides of the current attachment and gently pull it upwards to remove it from the epilator body.
3. Align the desired attachment with the epilator body and press it down until it clicks into place.



Figure 2: The Smartlight feature illuminates fine hairs for thorough epilation.



Figure 3: The sensitive area cap helps for gentle hair removal in delicate regions.

4. OPERATING INSTRUCTIONS

For best results, ensure your skin is clean and dry, or use the epilator in the shower or bath with foam for a gentler experience.

1. **Preparation:** For optimal results, exfoliate your skin regularly to prevent ingrown hairs. Ensure hair length is between 0.5mm and 5mm. If hair is longer, use the trimmer cap or shaver head first.

2. **Power On:** Turn the epilator on by sliding the switch to position «I» (gentle) or «II» (efficient). The Smartlight will automatically turn on to illuminate fine hairs.
3. **Epilation Technique:** Hold the epilator at a 90-degree angle to your skin, with the Smartlight facing the area you are epilating. Stretch your skin taut with your free hand. Guide the epilator slowly against the direction of hair growth. Do not press too hard; the SensoSmart light will turn red if you apply too much pressure.
4. **Wet Use:** For a more comfortable experience, use the epilator in the shower or bath with your favorite shower gel or foam. The warm water helps to relax the skin and minimize discomfort.
5. **Sensitive Areas:** Use the sensitive area cap or shaver head for delicate regions like the underarms or bikini line.
6. **Post-Epilation:** After epilation, apply a soothing lotion or moisturizer to your skin.

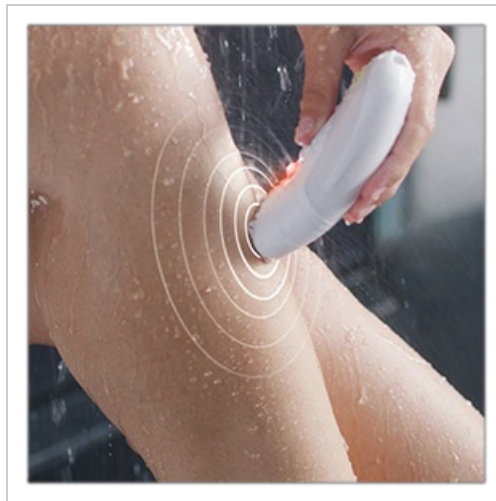


Figure 4: The SensoSmart light indicates optimal pressure for effective epilation.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your epilator.

1. **After Each Use:** Switch off the epilator and remove the attachment.
2. **Cleaning the Epilation Head:** Use the provided cleaning brush to brush out any trapped hairs from the epilation head. For thorough cleaning, you can rinse the epilation head under running water. Ensure it is completely dry before reattaching or storing.
3. **Cleaning Other Attachments:** Rinse shaver heads and trimmer caps under running water. Allow them to air dry completely.
4. **Appliance Body:** Wipe the main body of the epilator with a damp cloth. Do not immerse the main body in water unless it is specifically designed for wet cleaning (this model is Wet & Dry, but avoid submerging the charging port area).
5. **Storage:** Store the epilator and its attachments in a dry place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Epilator does not turn on.	Battery is discharged.	Charge the epilator for at least 1 hour.
Epilator does not remove hair effectively.	Incorrect angle or pressure. Hair is too short or too long. Epilation head is dirty.	Hold at a 90-degree angle, apply gentle pressure (SensoSmart light should be white/green). Ensure hair length is optimal (0.5mm - 5mm). Trim longer hair if necessary. Clean the epilation head thoroughly.
Skin irritation or redness.	Sensitive skin reaction. Too much pressure applied.	Use the epilator in the shower/bath. Apply less pressure (ensure SensoSmart light is not red). Apply a soothing lotion after epilation.

7. SPECIFICATIONS

- **Model Number:** SES 7/880
- **Power Source:** Rechargeable Lithium Ion Battery
- **Battery Type:** 1 Lithium Ion battery (included)
- **Product Dimensions:** 2.56 x 7.09 x 7.76 inches
- **Item Weight:** 14.08 ounces
- **Water Resistance:** Designed for Wet & Dry use in bath or shower.
- **Brand:** Braun
- **Color:** White

Note: The product is explicitly designed for "Wet & Dry" use, meaning it is suitable for use in the bath or shower. Always follow the specific usage guidelines provided by Braun.

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Braun website or contact their customer service directly. Keep your proof of purchase for any warranty claims.

You can visit the official Braun Store for more information: [Braun Store on Amazon](#)