

- Manuals.plus /
- › Simple Houseware /
 - › Simple Houseware Stackable 3 Tier Sliding Basket Organizer Drawer Instruction Manual

Simple Houseware CB-008-2

Simple Houseware Stackable 3 Tier Sliding Basket Organizer Drawer Instruction Manual

Model: CB-008-2

INTRODUCTION

Thank you for choosing the Simple Houseware Stackable 3 Tier Sliding Basket Organizer Drawer. This manual provides essential information for the proper assembly, operation, and maintenance of your new organizer. Please read these instructions carefully before use and retain them for future reference.

PRODUCT OVERVIEW

The Simple Houseware Stackable 3 Tier Sliding Basket Organizer is designed to enhance storage efficiency in various areas of your home, including kitchens, bathrooms, and pantries. Its chrome-finished metal construction ensures durability, while the sliding baskets provide easy access to stored items. The stackable design allows for vertical expansion, maximizing space utilization.



Figure 1: Simple Houseware 3 Tier Sliding Basket Organizer, Chrome finish.

Key Features:

- **Sliding Baskets:** Three tiers of sliding baskets for convenient access.
- **Stackable Design:** Multiple units can be stacked to create taller storage solutions.
- **Durable Construction:** Made from sturdy metal with a classic chrome finish.
- **Versatile Use:** Ideal for organizing items in cabinets, pantries, under sinks, or on countertops.
- **Easy Assembly:** No tools required for basic assembly.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- Vertical Support Bars (x2)
- Horizontal Support Bars (x1)
- Top Frame (x1)

- Sliding Baskets (x3)
- Top Panel (x1)
- Basket Liners (x3)
- Screws (x4)

ASSEMBLY INSTRUCTIONS

Follow these steps to assemble your organizer. No tools are required for the main structure, only a screwdriver for the top panel.

1. **Step 1: Assemble the Frame Base.** Connect the two vertical support bars to the horizontal support bars to form the base structure. Ensure they click securely into place.
2. **Step 2: Attach the Top Frame.** Secure the top frame to the upper ends of the vertical support bars. Verify all connections are firm.
3. **Step 3: Insert Sliding Baskets.** Carefully slide each of the three baskets into their designated runners within the frame. Ensure they glide smoothly.
4. **Step 4: Install Top Panel and Liners.** Place the top panel onto the top frame. Secure it using the four provided screws and a screwdriver. Insert the three basket liners into the bottom of each sliding basket.

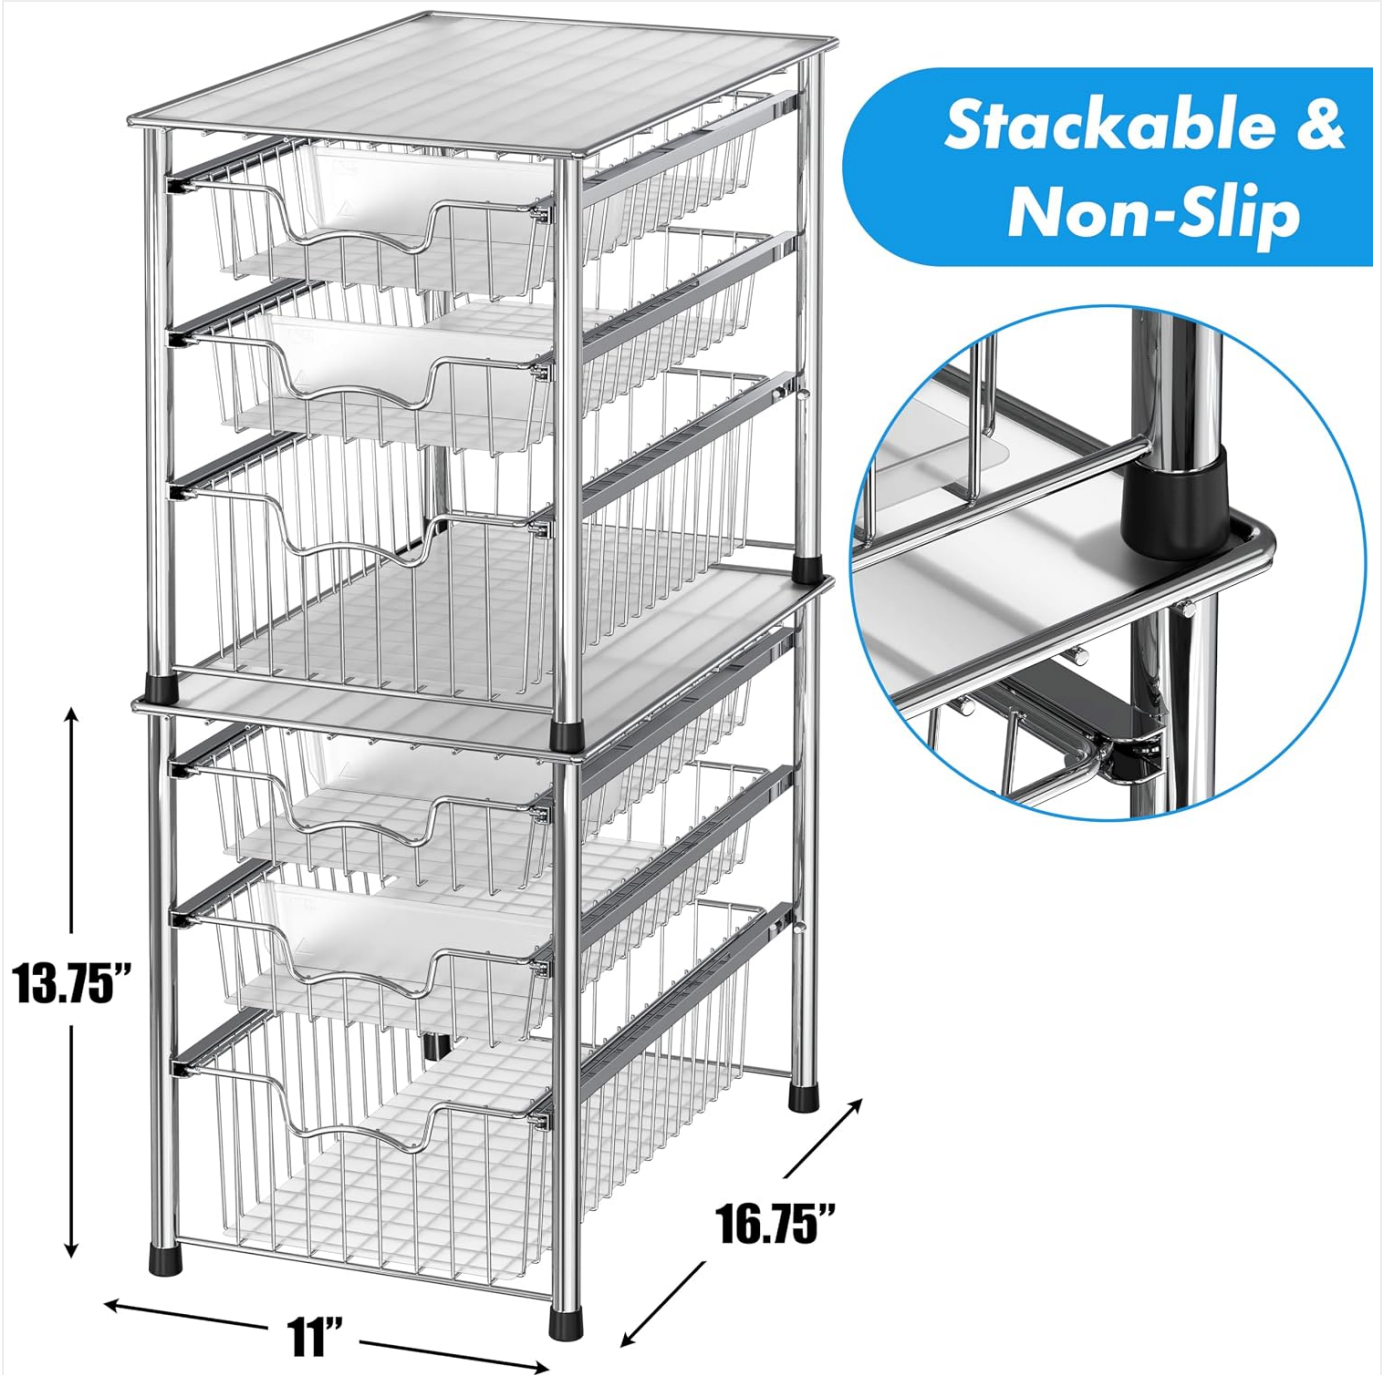


Figure 2: The organizer's dimensions and stackable capability.

OPERATING INSTRUCTIONS

Using your organizer is straightforward:

- **Accessing Items:** Gently pull the handle of any basket to slide it out for easy access to its contents. Push it back in until it is fully recessed.
- **Stacking Units:** If you have multiple units, they can be stacked vertically. Align the feet of the upper unit with the top corners of the lower unit and press down firmly until they interlock. This creates a taller, multi-tiered storage system.
- **Placement:** Position the organizer on a flat, stable surface. It is suitable for placement inside cabinets, on countertops, or in pantry shelves.



Figure 3: Organizers used for pantry storage.



Figure 4: Organizer used for under-sink storage.

MAINTENANCE

To ensure the longevity and appearance of your organizer:

- **Cleaning:** Wipe the metal frame and baskets with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, followed by thorough drying.
- **Linners:** The plastic liners can be removed and washed with soap and water. Ensure they are completely dry before placing them back into the baskets.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, scourers, or harsh chemicals, as these may damage the chrome finish.

TROUBLESHOOTING

If you encounter any issues with your organizer, refer to the following common solutions:

- **Baskets Not Sliding Smoothly:** Check for any obstructions in the runners. Ensure the unit is placed on a level surface. Verify that the baskets are correctly seated in their tracks.
- **Unit Instability:** Confirm that all frame components are securely connected and that the screws for the top panel are tightened. Ensure the organizer is on a flat, stable surface.
- **Missing Parts:** If any parts are missing upon arrival, please contact Simple Houseware customer support for assistance.

SPECIFICATIONS

Model Number	CB-008-2
Brand	Simple Houseware
Color	Chrome
Material	Metal
Product Dimensions (L x W x H)	16.75" x 11" x 13.75"
Number of Drawers	3
Item Weight	8.8 ounces
Assembly Required	Yes

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or visit the official Simple Houseware website. You may also contact their customer service directly for assistance with product inquiries, parts replacement, or any other concerns.

Online Support: [Visit the Simple Houseware Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07H7TSJF2>

More documents and user manuals: <https://manuals.plus/>