

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ABCCANOPY](#) /

› [ABCCANOPY 10x10 Instant Pop-Up Canopy Tent Instruction Manual, Gray](#)

ABCCANOPY Beach Canopy GRAY-vc

ABCCANOPY 10x10 Instant Pop-Up Canopy Tent Instruction Manual

Model: Beach Canopy GRAY-vc

INTRODUCTION

This manual provides instructions for the assembly, operation, maintenance, and care of your ABCCANOPY 10x10 Instant Pop-Up Canopy Tent. Please read all instructions carefully before use to ensure proper setup and safe operation. Retain this manual for future reference.

SAFETY INFORMATION

WARNING:

- Always ensure the tent is properly anchored to the ground using the provided stakes and ropes to prevent it from being blown away by strong winds. Failure to do so may result in property damage or personal injury.
- Avoid prolonged exposure to the sun's rays, as the canopy provides UPF50+ sun protection but is not intended for continuous, long-term outdoor installation.
- Do not use this canopy in extreme weather conditions, including heavy rain, strong winds, or snow. Disassemble and store the canopy during such conditions.
- Keep all flame and heat sources away from the canopy fabric. The fabric is not fireproof.
- Ensure all frame components are securely locked into place during setup and before use.

PACKAGE CONTENTS

Verify that all components listed below are present in your package:

EASY TO SET UP



STEP 1

Take out the frame and open a part like a picture.



STEP 2

Fix the top on the bracket and open the whole frame.



STEP 3

Adjust the height of the tent according to your needs.



Figure 1: Package Contents. This image displays the complete list of items included: 1 Canopy Top, 1 Steel Frame, 1 Wheeled Bag, 4 Ropes, 8 Stakes, and 4 Sand Bags (empty, for filling).

- 1 x Canopy Top (Gray, Fabric)
- 1 x Steel Frame (Alloy Steel)
- 1 x Wheeled Bag
- 4 x Ropes
- 8 x Stakes
- 4 x Sand Bags (Note: Sand not included)

SETUP INSTRUCTIONS

The ABCCANOPY Instant Pop-Up Canopy Tent is designed for quick and easy assembly. Follow these steps for a 1-minute setup:



Figure 2: Easy Setup Steps. A visual representation of the three main steps for canopy assembly.

1. Step 1: Unfold the Frame.

Remove the folded frame from the wheeled bag. With a partner, gently pull the frame outwards from opposite corners, partially opening it. Do not fully extend the legs yet.

2. Step 2: Attach the Canopy Top.

Drape the canopy fabric over the partially opened frame. Secure the canopy top to the frame corners and ensure the pole skirt design is properly aligned. The pole skirt helps the top hug the frame more snugly and provides additional straps for wind resistance.

3. Step 3: Extend and Lock Legs.

With the canopy top in place, continue to pull the frame outwards until it is fully extended. Press the red button on each leg to adjust the height to your desired level. Ensure all four legs are securely locked at the same height. The canopy offers three height settings, with the eave height adjustable between 69" and 79" from the ground.

4. Step 4: Secure the Canopy.

Fill the provided sandbags with sand and attach them to the canopy legs for added stability. Use the ropes and stakes to anchor the canopy to the ground, especially in windy conditions. This significantly enhances wind resistance.

OPERATING INSTRUCTIONS

Your ABCCANOPY tent is designed for versatile outdoor use, providing shade and protection.

- **Adjustable Height:** The canopy features an adjustable height mechanism. To change the height, press the red button on each leg and slide the inner leg up or down to the desired position. Ensure all legs are locked at the same height for stability.
- **Sun Protection:** The thickened, silver-coated canopy fabric provides UPF50+ sun protection, blocking harmful UV rays.
- **Wind Resistance:** The pole skirt design and additional straps enhance wind resistance. Always use the included ropes, stakes, and sandbags to secure the canopy, especially in breezy conditions.
- **Air Ventilation:** The canopy includes a top vent designed to improve air circulation and enhance stability in windy conditions.




Sturdy fabric, UV protection



Air Ventilation



Tight edge seam

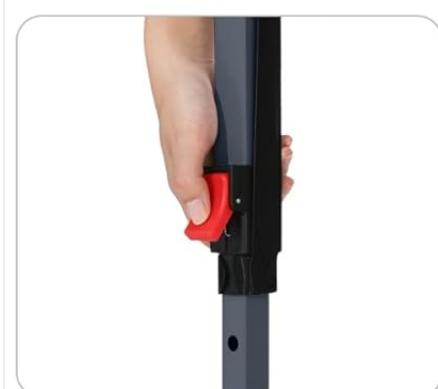

Adjustable Height



Easy Locking And Release



Secure The Tent With Ropes



Figure 3: Key Features. This image highlights the sturdy fabric, air ventilation, tight seams, adjustable height, easy locking, and rope

securing points.

MAINTENANCE

- **Cleaning the Canopy Fabric:** Clean the canopy fabric with mild soap and water. Do not use harsh detergents or abrasive cleaners, as these can damage the fabric's UV protection and water resistance. Allow the fabric to air dry completely before folding and storing.
- **Frame Care:** Inspect the steel frame periodically for any signs of damage, rust, or loose connections. Clean any dirt or debris from the frame. If rust appears, clean it and apply a rust-inhibiting paint.
- **Storage:** Always ensure the canopy fabric and frame are completely dry before storing to prevent mold, mildew, and rust. Fold the canopy neatly and store it in the wheeled bag in a cool, dry place away from direct sunlight.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Canopy is unstable or sways in wind.	Insufficient anchoring; legs not fully extended/locked.	Ensure all legs are fully extended and locked. Use all provided ropes, stakes, and sandbags to secure the canopy firmly to the ground. Do not use in strong winds.
Water pooling on canopy top.	Improper setup; uneven ground; heavy rain.	Ensure the canopy is taut and evenly stretched over the frame. Adjust leg heights if necessary to create proper tension. Disassemble in heavy rain to prevent damage.
Difficulty extending or collapsing the frame.	Frame components are stiff or misaligned.	Ensure no fabric is caught in the frame. Apply a silicone-based lubricant to moving parts if stiffness persists. Always use two people for setup and takedown.
Canopy fabric tearing or showing wear.	Exposure to extreme weather; improper storage; sharp objects.	Avoid using in extreme weather. Store dry and folded. Keep away from sharp objects. Contact customer support for replacement parts if within warranty.

SPECIFICATIONS



Figure 4: Product Dimensions. This image illustrates the overall dimensions of the canopy tent.

- **Brand:** ABCCANOPY
- **Model Number:** Beach Canopy GRAY-vc
- **Material:** Fabric (Canopy), Alloy Steel (Frame)
- **Color:** Gray
- **Product Dimensions:** 120" L x 120" W x 105.6" H (10ft x 10ft base, 105.6 inches peak height)
- **Adjustable Eave Height:** 69" - 79"
- **Item Weight:** Approximately 2.2 pounds (Note: This weight likely refers to a single component, not the entire canopy tent.)
- **Ultraviolet Light Protection:** Yes (UPF50+)
- **Water Resistance Level:** Water Resistant
- **Number of Guylines:** 4
- **Assembly Required:** Yes

WARRANTY AND SUPPORT

ABCCANOPY provides the following warranty for your product:


- **Canopy Cover:** 6-month warranty.
- **Frame:** 12-month warranty.

Warranty exclusions apply for damage due to extreme weather conditions. For warranty claims, replacement parts, or any product-related inquiries, please contact ABCCANOPY customer support through the retailer where the product was purchased or visit the official ABCCANOPY website.

For additional information and support, you may visit the [ABCCANOPY Store on Amazon](#).

© 2025 ABCCANOPY. All rights reserved.

Related Documents - Beach Canopy GRAY-vc

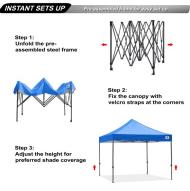	<p>ABCCANOPY Commercial Instant Shelter 10 ft. x 10 ft. Setup Guide</p> <p>Step-by-step instructions for setting up the ABCCANOPY Commercial Instant Shelter 10 ft. x 10 ft. Metal Pop-Up Canopy, featuring a pre-assembled frame for easy setup.</p>
	<p>ABCCANOPY Pop-Up Canopy Tent Setup and Care Guide</p> <p>Comprehensive guide for setting up, installing, and maintaining your ABCCANOPY pop-up canopy tent. Includes accessory information, replacement parts, and safety precautions.</p>
	<p>10 ft. x 10 ft. Easy Pop Up Outdoor Canopy Tent Installation Guide</p> <p>Step-by-step guide for setting up a 10 ft. x 10 ft. ABCCANOPY outdoor pop-up canopy tent with a central lock system. Features one-button setup, requiring one person and one minute for assembly.</p>
	<p>ABCCANOPY 10x10 Pop-Up Canopy Tent Setup Guide</p> <p>Concise, step-by-step instructions for setting up the ABCCANOPY 10x10 pop-up canopy tent. Features one-button setup, requiring one person and taking approximately one minute.</p>



[Installation Guide: 8 ft. x 5 ft. Replacement Grill Gazebo Roof Canopy - ABCCANOPY L-GZ238PST-11](#)

Step-by-step installation instructions for the ABCCANOPY 8 ft. x 5 ft. replacement grill gazebo roof canopy top, model L-GZ238PST-11. Learn how to attach the support rods to secure your gazebo canopy.



[Yaheetech 610957 10x10 ft Heavy-Duty Pop-Up Canopy Tent Installation Guide](#)

Comprehensive installation and assembly guide for the Yaheetech 610957 10x10 ft Heavy-Duty Commercial Instant Pop-Up Canopy Tent. Learn how to safely set up, adjust height, and secure your canopy for optimal stability.