

[Manuals.plus](#) /

› [GLOBO](#) /

› Globo 48304 LED Ceiling Light User Manual

GLOBO 48304

Globo 48304 LED Ceiling Light User Manual

Model: 48304 | Brand: GLOBO

1. INTRODUCTION

Thank you for choosing the Globo 48304 LED Ceiling Light. This product is designed to provide versatile lighting with adjustable color temperature and RGB color-changing capabilities, all controllable via a remote. Please read this manual carefully before installation and use to ensure proper operation and safety.



Image 1: Globo 48304 LED Ceiling Light showcasing its remote control and various color options.

2. SAFETY INSTRUCTIONS

- Always disconnect power at the main circuit breaker before installation, maintenance, or cleaning.
- Installation should be performed by a qualified electrician to ensure compliance with local electrical codes.
- Do not modify the product in any way. Unauthorized modifications may void the warranty and pose safety risks.
- Ensure the mounting surface can support the weight of the fixture.
- Keep the product away from water and high humidity. This fixture is for indoor use only.
- Do not stare directly into the LED light source when it is illuminated.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged:

- 1 x Globo 48304 LED Ceiling Light Fixture
- 1 x Remote Control
- 2 x AAA Batteries (for remote control)
- Mounting Hardware (screws, anchors)
- Instruction Manual

4. SETUP AND INSTALLATION

1. **Preparation:** Turn off the power at the main circuit breaker before starting installation. Ensure the area is dry and clear.
2. **Mounting Bracket Installation:** Secure the mounting bracket to the ceiling using the provided screws and anchors. Ensure it is firmly attached to a joist or suitable ceiling support.
3. **Wiring:** Connect the household electrical wires to the fixture's wires according to local electrical codes. Typically, connect live (L) to live, neutral (N) to neutral, and ground (GND) to ground. Ensure all connections are secure.
4. **Fixture Attachment:** Carefully lift the ceiling light fixture and attach it to the mounting bracket. Secure it with the provided screws or locking mechanism.
5. **Remote Control Batteries:** Open the battery compartment on the back of the remote control and insert the 2 AAA batteries, observing the correct polarity (+/-).
6. **Power On:** Restore power at the main circuit breaker.



Image 2: The Globo 48304 LED Ceiling Light installed in a kitchen setting.

5. OPERATING INSTRUCTIONS

The Globo 48304 LED Ceiling Light is operated using the included remote control.

Remote Control Functions:

- **ON/OFF Button:** Press to turn the light on or off.
- **Brightness Adjustment:** Use the '+' and '-' buttons to increase or decrease the light intensity.
- **Color Temperature (CCT) Adjustment:** Cycle through warm white (3000K), neutral white (4500K), and cool white (6500K) settings.
- **RGB Color Change:** Press the dedicated RGB button or color selection buttons to activate the multicolor LED. You can cycle through various colors or select a fixed color.
- **Color Fixation:** Some remotes allow you to 'fix' a specific color or CCT setting. Refer to the remote's specific button layout for this function.



Image 3: The remote control for the ceiling light, showing various function buttons.

6. MAINTENANCE

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish or acrylic.
- **LED Lifespan:** The integrated LED light source is designed for long-term use and is not user-replaceable. If the LED fails, the entire fixture may need replacement.
- **Remote Control:** Replace AAA batteries in the remote control when its range decreases or it stops responding.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose wiring; faulty remote control.	Check circuit breaker. Verify wiring connections. Replace remote batteries.
Remote control not working.	Dead batteries; remote out of range; obstruction.	Replace batteries. Ensure remote is within operating range (approx. 10m). Remove any obstructions between remote and light.
Light flickers or dims unexpectedly.	Unstable power supply; loose connection; incompatible dimmer (if applicable).	Check power supply stability. Inspect wiring connections. This fixture is designed for its own remote control dimming; do not use external wall dimmers.
Colors are incorrect or not changing.	Remote control issue; internal fault.	Ensure remote batteries are fresh. Try resetting the light by turning off power for 30 seconds and then back on.

8. SPECIFICATIONS

Feature	Detail
Brand	GLOBO
Model Number	48304
Product Dimensions (L x W x H)	50 x 50 x 9 cm (Diameter: 500mm, Height: 90mm)
Weight	1.7 Kilograms
Material	Metal (white), Acrylic (satin)
Color	Multicolor (RGB)
Voltage	230 Volts
Main LED Power	48 Watts
Main LED Luminous Flux (Source)	3900 lumens
Main LED Luminous Flux (Output)	3360 lumens
RGB LED Power	10 Watts
Color Temperature (CCT)	3000K (Warm White) - 4500K (Neutral White) - 6500K (Cool White)
Special Features	Color Changing (RGB), Dimmable, Remote Control
Energy Label	A++
Remote Control Batteries	2 x AAA (included)

A
↑
G

F

Image 4: Energy efficiency label indicating an A++ rating.

9. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact the seller or the manufacturer directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Globo

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question