

Honeshop SQ16

Honeshop SQ16 1080P HD Dice Mini Hidden Camera User Manual

Model: SQ16

1. INTRODUCTION

Thank you for purchasing the Honeshop SQ16 1080P HD Dice Mini Hidden Camera. This compact and discreet device is designed for portable video recording with ease of use. This manual provides detailed instructions on how to set up, operate, and maintain your camera to ensure optimal performance.

2. PRODUCT OVERVIEW

2.1 Key Features

- Compact and discreet dice design.
- High-definition 1080P video recording at 30 frames per second.
- Motion detection recording capability.
- Built-in microphone for audio recording.
- Supports external Micro SD card up to 32GB (not included).
- Integrated rechargeable lithium battery for up to 60 minutes of continuous recording.
- Simple one-key operation.

2.2 Package Contents

- 1 x Honeshop SQ16 Mini Hidden Camera
- 1 x USB Cable
- 1 x English User Manual

2.3 Product Diagram



Figure 1: Honeshop SQ16 Mini Hidden Camera. This image shows the compact, black dice-shaped camera from a slightly elevated angle, highlighting its discreet design.

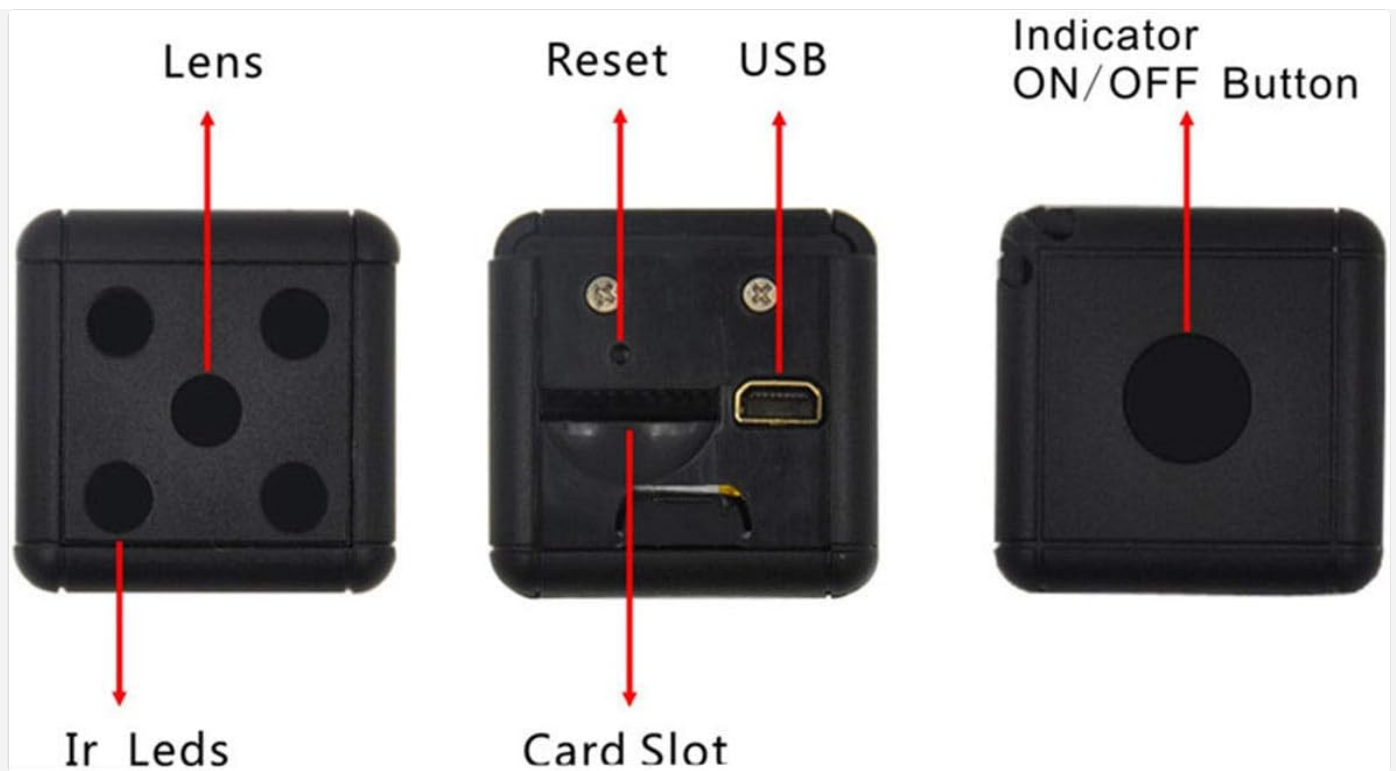


Figure 2: SQ16 Camera Component Diagram. This diagram illustrates the various parts of the camera, including the Lens, Infrared LEDs, Reset button, Micro SD Card Slot, Mini 8Pin USB port, and the Indicator/ON/OFF Button.

3. SETUP

3.1 Charging the Battery

Before first use, fully charge the camera for approximately 2 hours. The product is installed with a built-in lithium battery.

1. Connect the camera to a 5V DC power source (e.g., computer USB port or USB wall adapter) using the provided USB cable.
2. During charging, both the red and blue indicators will be on.
3. Once fully charged, the red indicator will turn off, leaving only the blue indicator on.

Note: The camera does not support video recording while charging.

3.2 Inserting the Micro SD Card

The camera supports an external Micro SD card up to 32GB (not included). Ensure the card is formatted to FAT32 for optimal performance.

1. Locate the Micro SD Card Slot on the camera (refer to Figure 2).
2. Gently insert the Micro SD card into the slot until it clicks into place. Ensure the correct orientation.
3. To remove the card, gently push it in again until it springs out.

4. OPERATING INSTRUCTIONS

4.1 Powering On/Off

- **To Power On:** Press and hold the ON/OFF Button (refer to Figure 2) for a few seconds until the indicator light turns on.
- **To Power Off:** Press and hold the ON/OFF Button again for a few seconds until the indicator light turns off.

4.2 Video Recording

The camera records video in AVI format with 1920x1080P resolution at 30 frames per second.

- Ensure the camera is powered on and a Micro SD card is inserted.
- Press the ON/OFF Button briefly to start video recording. The indicator light will change to indicate recording is in progress.
- Press the ON/OFF Button briefly again to stop recording and save the video file.

4.3 Motion Detection Recording

The camera supports motion detection recording.

- Specific instructions for activating motion detection mode are not detailed in the provided product description. Please refer to the included physical user manual for precise steps.
- Once activated, the camera will automatically begin recording when motion is detected and stop when motion ceases.

4.4 Connecting to a Computer

To access recorded files, connect the camera to your computer.

1. Ensure the camera is powered off.
2. Connect the camera to your computer using the provided USB cable via the Mini 8Pin USB port (refer to Figure 2).
3. The camera will be recognized as a removable disk. You can then access and transfer your video files.

5. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is fully charged. Connect to a power source and check indicator lights.
- **Camera not recording:** Check if a Micro SD card is inserted and properly formatted. Ensure there is sufficient space on the card.
- **Low Battery Shutdown:** When the battery is low, the product will automatically save the recorded video, and then turn off after the blue indicator has flashed for 10 times. Recharge the camera immediately.
- **Files not accessible on computer:** Ensure the camera is powered off before connecting to the computer. Try a different USB port or cable.
- **Resetting the Camera:** If the camera becomes unresponsive, locate the Reset button (refer to Figure 2) and gently press it with a thin, non-metallic object (like a paperclip) to restart the device.

6. SPECIFICATIONS

Parameter	Value
Video Format	AVI
Video Coding	M-JPEG
Video Resolution	1920x1080P
Video Frame Rate	30fps
Working Duration	Approx. 60 minutes

Charging Time	Approx. 2 hours
Charging Voltage	DC=5V
Interface Type	Mini 8Pin USB
Memory Support	External Micro SD card (Max 32GB)
Viewing Angle	65°
Night Vision Range	1-3 meters
Battery Type	Lithium Battery
Built-in Microphone	Yes

7. MAINTENANCE

- Keep the camera dry and away from moisture.
- Avoid extreme temperatures.
- Clean the lens gently with a soft, lint-free cloth.
- Do not attempt to disassemble the camera, as this will void any potential warranty.
- Store the camera in a cool, dry place when not in use.

8. IMPORTANT NOTES

- This product does not support video recording while charging.
- When the battery is low, the camera will automatically save the current recording and then power off after the blue indicator flashes 10 times.
- Ensure the Micro SD card is inserted correctly before operation.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Honeshop customer service directly. Specific warranty terms may vary by region and retailer.

© 2023 Honeshop. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question