

[Manuals.plus](#) /

› [Nautica](#) /

› Nautica N15567G / A15567G Silicone Watchband Instruction Manual

Nautica N15567G / A15567G

Nautica N15567G / A15567G Silicone Watchband Instruction Manual

Original Replacement Watchband for Nautica BFD 100 Series

INTRODUCTION

This manual provides essential information for the installation, care, and maintenance of your Nautica N15567G / A15567G silicone watchband. This watchband is designed as an original replacement for specific Nautica watch models, ensuring a comfortable fit and durable performance.

PRODUCT OVERVIEW



Image: Nautica N15567G / A15567G White Silicone Watchband. This image displays the two parts of the white silicone watchband, featuring the buckle on one side and the adjustment holes on the other. The textured surface of the band is visible.

The Nautica N15567G / A15567G watchband is crafted from high-quality, waterproof silicone rubber. It features a satin brushed finished stainless steel buckle, engraved with the authentic Nautica logo. This design ensures both durability for active use and a sleek appearance suitable for various occasions.

COMPATIBILITY

This watchband is specifically designed to fit the following Nautica watch models:

- N19566G | A19566G
- N15564G | A15564G
- N15567G | A15567G
- N15581G | A15581G

- N15606G | A15606G
- N21010G | A21010G
- N15566G | A15566G
- N15567G | A15567G
- N15579G | A15579G
- N15580G | A15580G
- N15583G | A15583G
- N15605G | A15605G
- N15607G | A15607G
- N15608G | A15608G
- N15609G | A15609G
- N16509G | A16509G

Ensure your watch model matches one of the listed identifiers for proper fitment.

INSTALLATION INSTRUCTIONS

To replace or install your Nautica watchband, follow these general steps. Professional installation is recommended if you are unfamiliar with watchband replacement.

1. **Prepare Your Workspace:** Lay your watch face down on a soft, clean cloth to prevent scratches. Ensure you have a spring bar tool or a small, flat-head screwdriver.
2. **Remove the Old Watchband (if applicable):** Locate the spring bars that hold the current watchband to the watch lugs. Use the spring bar tool to compress one end of the spring bar and gently pull the band away from the lug. Repeat for the other side of the band and the other lug.
3. **Install the New Watchband:** Insert one end of a spring bar into the hole on one side of a watch lug. Place the new watchband section between the lugs. Using the spring bar tool, compress the other end of the spring bar and guide it into the corresponding hole on the opposite lug. Release the tool and ensure the spring bar is securely seated by gently pulling on the band.
4. **Verify Installation:** Once both sections of the new watchband are installed, gently tug on each side to confirm they are firmly attached to the watch lugs. The band should not come loose with light pressure.

Note: Be careful not to scratch your watch case during installation. If you encounter difficulty, consult a professional watch repair service.

CARE AND MAINTENANCE

To ensure the longevity and appearance of your silicone watchband, follow these care guidelines:

- **Cleaning:** Clean the watchband regularly with mild soap and water. Use a soft cloth to gently wipe away dirt and residue. Rinse thoroughly with clean water and dry with a soft, lint-free cloth.
- **Avoid Harsh Chemicals:** Do not expose the silicone band to strong chemicals, solvents, or abrasive cleaners, as these can damage the material and finish.
- **Storage:** When not in use, store the watchband in a cool, dry place away from direct sunlight to prevent material degradation.
- **Water Resistance:** The silicone material is waterproof, making it suitable for swimming and water activities. However, always ensure your watch itself is also water-resistant before exposing it to water.

SPECIFICATIONS

Feature	Detail
Model Numbers	N15567G A15567G
Material	High-quality Silicone Rubber
Color	White
Buckle Material	Stainless Steel (satin brushed finish, engraved Nautica logo)
Buckle Width	27mm
Lug Width	24mm
Thickness	3mm
Length (Long Part)	Approximately 5 inches (12.5 cm)
Length (Buckle Part)	Approximately 3.75 inches (9.5 cm) including buckle

TROUBLESHOOTING

If you encounter issues during installation or use, consider the following:

- Band Not Fitting:** Double-check the compatibility list to ensure your watch model is supported. Verify the lug width of your watch matches the 24mm lug width of the band.
- Spring Bar Difficulty:** Ensure the spring bar is correctly aligned with the lug holes. Sometimes, a slight angle or gentle pressure is needed to compress the spring bar fully. Avoid excessive force.
- Band Feels Loose:** Confirm that both ends of the spring bars are securely seated in the lug holes. A loose band indicates improper installation.

For persistent issues, it is advisable to seek assistance from a professional watch repair technician.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question