



[Manuals.plus](#) /

> [Volkano](#) /

> Volkano Phonic Series Wireless Headphones User Manual

Volkano VK-2002-BK

Volkano Phonic Series Wireless Headphones

Model: VK-2002-BK

INTRODUCTION

Thank you for choosing the Volkano Phonic Series Wireless Headphones. This manual provides essential information for setting up, operating, and maintaining your new headphones. Please read it carefully before use and retain it for future reference.



Image: Volkano Phonic Series Wireless Headphones, black, showing the over-ear design and controls on the right earcup.

PACKAGE CONTENTS

Ensure all items listed below are present in your package:

- Volkano Phonic Series Bluetooth Headphones
- 3.5mm Aux Cable
- Micro USB Charging Cable

- Instruction Manual (this document)



Image: Contents of the Volkano Phonic Series headphone package, including the headphones, cables, and manual.

PRODUCT OVERVIEW AND CONTROLS

Familiarize yourself with the various parts and controls of your Volkano Phonic Series Headphones.



Image: Close-up of the right earcup showing the control buttons: On/Off, Mode Button, Play/Pause, Volume Up/Next Track, and Volume Down/Previous Track.

- **On / Off Button:** Powers the headphones on or off.
- **Mode Button (M):** Switches between Bluetooth, FM Radio, and Micro SD Card modes.
- **Play / Pause Button:** Controls audio playback and answers/ends calls.
- **Volume Up / Next Track Button (+):** Increases volume or skips to the next track.
- **Volume Down / Previous Track Button (-):** Decreases volume or goes to the previous track.
- **Micro USB Charging Port:** For charging the headphones.
- **3.5mm Aux Input:** For wired audio connection.
- **Micro SD Card Slot:** For playing music directly from a Micro SD card.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. A full charge takes approximately 2.5 hours and provides 18-24 hours of playback time.

1. Connect the Micro USB charging cable to the charging port on the headphones.
2. Connect the other end of the cable to a USB power source (e.g., computer USB port, USB wall adapter).
3. The LED indicator will show charging status.
4. Once fully charged, disconnect the charging cable.



Image: A person wearing the Volkano Phonic Series headphones, illustrating their use for extended periods, highlighting the 24-hour playtime.

2. Bluetooth Pairing

Pair your headphones with your Bluetooth-enabled device for wireless audio.

1. Ensure the headphones are fully charged and powered off.
2. Press and hold the **On / Off** button until the LED indicator flashes blue and red, indicating pairing mode.
3. On your device (smartphone, tablet, laptop), enable Bluetooth and search for new devices.

4. Select "Volkano Phonic" or similar from the list of available devices.
5. Once paired, the LED indicator will turn solid blue or flash blue slowly.

The headphones are compatible with most Bluetooth devices, including Android, Samsung Galaxy, iPhone, iPad, Laptops, Google Pixel, and other smart devices.

EXTENSIVE COMPATIBILITY

*Compatible with most Bluetooth Devices Including
Android, Apple iPhone, iPad, iPod, Computers and More*



COMPATIBLE WITH



Bluetooth[®]



Image: Illustration showing the Volkano Phonic Series headphones compatible with various devices such as laptops, smartphones, and tablets, emphasizing extensive Bluetooth compatibility.

3. Wired Connection (Aux Input)

You can use the headphones with non-Bluetooth devices or when the battery is low using the included 3.5mm Aux Cable.

1. Insert one end of the 3.5mm Aux Cable into the Aux Input port on the headphones.
2. Insert the other end of the cable into the 3.5mm audio output jack of your mobile phone, MP3 player, or PC.
3. The headphones will automatically switch to Aux mode.

OPERATING INSTRUCTIONS

Basic Audio Playback (Bluetooth Mode)

- **Play/Pause:** Press the **Play / Pause** button once.
- **Next Track:** Press and hold the **Volume Up (+)** button.
- **Previous Track:** Press and hold the **Volume Down (-)** button.
- **Volume Up:** Short press the **Volume Up (+)** button.
- **Volume Down:** Short press the **Volume Down (-)** button.

FM Radio Mode

Listen to your favorite radio stations with the built-in FM radio.

1. Turn on the headphones.
2. Press the **Mode (M)** button to switch to FM Radio mode.
3. To auto-scan and save available stations, press the **Play / Pause** button.
4. To change stations, use the **Volume Up (+)** or **Volume Down (-)** buttons.

Micro SD Card Playback

Play music directly from a Micro SD card (TF card) loaded with MP3 files.

1. Insert a Micro SD card (with music files) into the Micro SD Card Slot on the headphones.
2. The headphones will automatically switch to Micro SD Card mode, or you may need to press the **Mode (M)** button to select it.
3. Use the **Play / Pause**, **Volume Up (+)**, and **Volume Down (-)** buttons to control playback.

Hands-Free Calling

When connected via Bluetooth, you can manage calls directly from your headphones.

HANDS-FREE CALLING

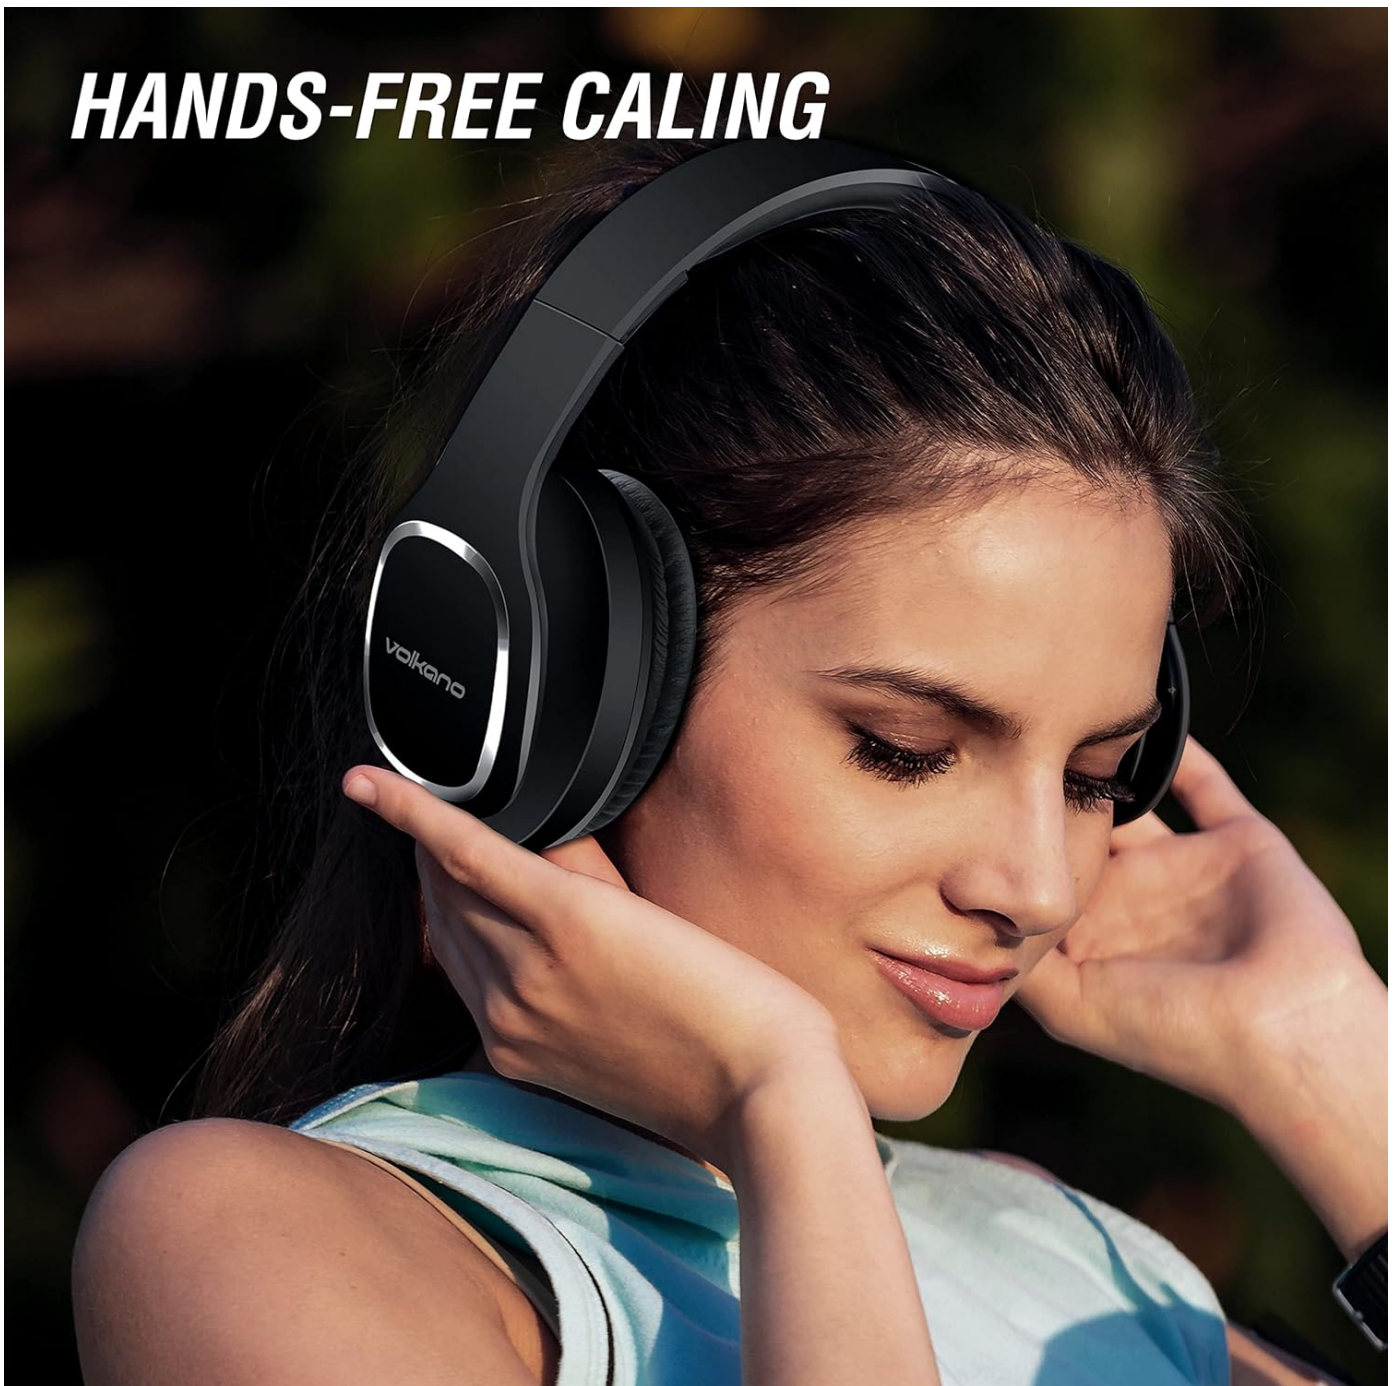


Image: A person wearing the Volcano Phonic Series headphones, demonstrating the convenience of hands-free calling.

- **Answer Call:** Press the **Play / Pause** button once when an incoming call rings.
- **End Call:** Press the **Play / Pause** button once during a call.
- **Reject Call:** Press and hold the **Play / Pause** button for 2 seconds when an incoming call rings.
- **Redial Last Number:** Double-press the **Play / Pause** button.

MAINTENANCE

Proper care will extend the life of your headphones.

- Clean the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the headphones dry. Do not expose them to water or excessive moisture.
- Store the headphones in a cool, dry place when not in use. The foldable design makes them convenient for storage and transport.
- Avoid extreme temperatures.

- Do not attempt to disassemble or modify the headphones. This will void the warranty.

CONVENIENT FOLDING HEADPHONES



Image: The Volcano Phonic Series headphones shown in their folded position, demonstrating their convenient and portable design.

TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Headphones do not turn on.	Battery is low. Charge the headphones fully.
Cannot pair with Bluetooth device.	Headphones are not in pairing mode. Ensure they are flashing blue and red. Bluetooth is not enabled on your device. Headphones are too far from the device (max 10m operating distance). Clear previous Bluetooth connections on your device and try again.

Problem	Possible Cause / Solution
No sound in Bluetooth mode.	Volume is too low on headphones or connected device. Headphones are not properly paired. Re-pair them. Ensure the correct audio output is selected on your device.
FM Radio reception is poor.	Weak signal in your location. Try moving to an open area. Re-scan for stations.
Micro SD card not playing.	Card is not inserted correctly. Card is not formatted correctly or contains unsupported file types (only MP3 supported). Card is damaged.

TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	VK-2002-BK
Bluetooth Version	5.0
Bluetooth Operating Distance	10 m
Bluetooth Profiles	A2DP, AVRCP, HFP
Driver Size	40 mm
Sensitivity	108 dB
Impedance	64 ohms
Frequency Response	20 Hz – 20 kHz
Battery Capacity	400 mAh
Charge Input	15 V DC / 1.0 A
Charge Time	2.5 hrs
Playback Time	18 - 24 Hours
Product Dimensions	5 x 5 x 5 cm
Product Weight	225 g

WARRANTY AND SUPPORT

Volkano products are designed to last and come with a commitment to hassle-free service.

- **Warranty:** This product comes with a 1-year limited warranty.
- **Customer Service:** Lifetime customer service guarantee.
- For any questions or support, please contact Volkano customer service. Refer to the product packaging or Volkano's official website for contact details.

