

Boogie Board BN0110001

Boogie Board Blackboard Authentic Reusable Notebook

MODEL: BN0110001

Instruction Manual

1. Introduction

The Boogie Board Blackboard is a 5.5" x 7.25" reusable smart notebook designed for versatile note-taking in various environments, from home to office. Its semi-transparent surface allows users to write on different templates or mark up documents. This device offers a paper-like writing experience with the convenience of digital saving and sharing.

2. What's in the Box

Upon unboxing your Boogie Board Blackboard, please ensure all the following components are present:

- Boogie Board Blackboard Notebook
- Blackboard Stylus with an eraser
- Four easy-to-swap templates
- Magnetic stylus holder



Image: The Boogie Board Blackboard notebook, stylus, and included templates.

3. Setup

The Boogie Board Blackboard is designed for immediate use with minimal setup. Simply remove the device and stylus from its packaging.

Inserting Templates

To utilize the various templates, slide your desired template into the designated slot behind the writing surface. The semi-transparent screen will overlay your writing onto the template.



Image: A hand demonstrating how to insert a template into the Boogie Board Blackboard.

4. Operating Instructions

The Boogie Board Blackboard offers intuitive controls for writing, erasing, and managing your notes.

Writing

Use the included stylus to write directly on the Blackboard's surface. The pressure-sensitive screen will display your notes in a clear, green line.



Image: A user writing notes on the Boogie Board Blackboard using the stylus.

Erasing Notes

The Blackboard features two primary erasing methods:

- **QuickClear™ Technology (Full Erase):** Press the circular button at the top center of the device to instantly clear the entire screen.
- **Exact-Erase™ (Partial Erase):** Use the eraser tip on the stylus to selectively erase specific parts of your notes. Hold down the small button on the stylus while applying the eraser tip to the screen. This allows for precise edits without clearing the entire display.



Image: A close-up view of a hand using the Exact-Erase feature with the stylus on the Blackboard.

Lock Function

To prevent accidental erasure of your notes, slide the lock switch located on the top right of the device. This will disable the QuickClear™ button until unlocked.

Using Interchangeable Templates

The Blackboard comes with four easy-to-swap templates (lined, grid, dotted, and blank) that slide in behind the writing surface. Choose the template that best suits your note-taking or drawing needs.



Image: A selection of interchangeable templates for the Boogie Board Blackboard.

App Integration (Smart Scan)

The Blackboard is compatible with a dedicated mobile app (available for iOS and Android) that allows you to scan, save, enhance, markup, send, and share your notes. The app is compatible with cloud services like OneNote, Google Drive, Dropbox, and Evernote.



Image: A user scanning their handwritten notes from the Blackboard using a smartphone camera.



Image: A smartphone displaying a digital version of notes that were scanned from the Boogie Board Blackboard.

Video Demonstration

For a visual guide on using the Boogie Board Blackboard's features, including writing, scanning, locking, and erasing, please watch the official product video below.

Your browser does not support the video tag.

Video: Official Boogie Board Blackboard demonstration, showcasing writing, scanning, lock function, QuickClear, and Exact-Erase features.

5. Maintenance

To ensure the longevity and optimal performance of your Boogie Board Blackboard, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the writing surface. Avoid abrasive cleaners or solvents.
- **Stylus Care:** Keep the stylus clean and free from debris. Store it in the magnetic holder when not in use.
- **Battery:** The device requires 1 CR2 battery. Replace the battery when the erase function becomes

less effective.

- **Storage:** Store the Blackboard in a cool, dry place away from direct sunlight and extreme temperatures.

6. Troubleshooting

If you encounter any issues with your Boogie Board Blackboard, please refer to the following common solutions:

- **Screen not clearing:** Ensure the lock switch is in the unlocked position before pressing the QuickClear button. If the issue persists, the battery may need replacement.
- **Faint writing:** Ensure you are using the correct stylus and applying adequate pressure. The screen's visibility can vary slightly with ambient light.
- **Partial erase not working:** Confirm you are holding down the small button on the stylus while using the eraser tip.

7. Specifications

Feature	Detail
Brand	Boogie Board
Model Number	BN0110001
Product Dimensions	9 x 6 x 0.25 inches
Item Weight	8.8 ounces
Color	Blackboard Note 5.5x7.25
Material Type	Paper (for templates)
Batteries	1 CR2 battery required
Connectivity Technology	Android, iOS (via app)
Pressure Sensitivity	4096 Levels
Special Feature	Stylus



Image: A diagram illustrating the physical dimensions of the Boogie Board Blackboard.

8. Warranty and Support

For warranty information and customer support, please refer to the official Boogie Board website or contact their customer service department. Specific warranty terms may vary by region and retailer.

You can visit the official Boogie Board store for more information: [Boogie Board Store](#)

