

[Manuals.plus](#) /

› [Samsonite](#) /

› Samsonite Underseat Carry-On Spinner with USB Port (Model 112934-1041) Instruction Manual

Samsonite 112934-1041

Samsonite Underseat Carry-On Spinner with USB Port

Model: 112934-1041

PRODUCT OVERVIEW

The Samsonite Underseat Carry-On Spinner with USB Port is designed for convenient travel, fitting under most airline seats. It features multi-directional spinner wheels for easy mobility and a built-in USB port for charging electronic devices on the go. This manual provides essential information for the proper use and care of your luggage.

KEY FEATURES

- **Underseat Compatibility:** Designed to fit under most airline seats for easy access during travel. Please verify airline specific dimensions.
- **Multi-directional Spinner Wheels:** Four wheels allow for 360-degree rolling, enhancing mobility and reducing strain.
- **Integrated USB Port:** A convenient USB port allows for charging electronic devices. (Note: Battery pack not included).
- **Ergonomic Handle:** Push-button locking handle designed for comfortable grip and easy maneuverability.
- **Quick-Stash Exterior Pockets:** Multiple exterior pockets for organized storage of smaller items.
- **Padded Laptop Compartment:** Main compartment includes a padded sleeve for laptops up to 13.3 inches, secured with an elastic band.

SETUP

Upon receiving your Samsonite Underseat Carry-On Spinner, inspect it for any signs of damage. Ensure all zippers and components are functioning correctly before use.

Handle Extension

To extend the telescopic handle, press the push-button located on the top of the handle and pull upwards. To retract, press the button again and push the handle downwards until fully collapsed.



Image: The carry-on with its telescopic handle fully extended for easy pulling.

Wheel Functionality

The four multi-directional spinner wheels are designed to rotate 360 degrees, allowing the luggage to glide smoothly in any direction. No specific setup is required for the wheels; they are ready for use.



Image: A close-up view of the durable multi-directional spinner wheels on the luggage.

OPERATING INSTRUCTIONS

Main Compartment Access

The main compartment can be fully opened for convenient packing. Unzip the top zipper and then unzip the side zippers to lay the luggage flat, providing full access to the interior.



Image: The main compartment of the carry-on is fully unzipped and laid open, revealing internal straps and a zippered mesh pocket.

Front Pocket Organization

The front pocket features multiple organizational sleeves, including a padded compartment for a laptop (up to 13.3 inches) or tablet, and smaller pockets for pens, passports, or other quick-access items.



Image: The front pocket is open, displaying various organizational slots for a tablet, pens, and other small essentials.

USB Charging Port

To use the integrated USB port, connect your portable power bank (not included) to the internal USB cable located within the side pocket. Then, connect your device to the external USB port for charging.



Image: A smartphone is shown connected to the external USB port on the side of the luggage, illustrating the charging function.

Trolley Sleeve

A rear trolley sleeve allows you to securely attach the underseat spinner to the handle of a larger rolling suitcase, consolidating your luggage for easier transport.



Image: The underseat carry-on is shown with its rear sleeve slid over the extended handle of a larger suitcase, demonstrating the piggyback feature.

CARE AND MAINTENANCE

- **Cleaning:** For general cleaning, wipe the exterior with a damp cloth and mild soap. Avoid harsh chemicals.
- **Stain Removal:** For stubborn stains, use a specialized fabric cleaner, testing on an inconspicuous area first.
- **Zipper Care:** Periodically lubricate zippers with a silicone-based spray to ensure smooth operation.
- **Wheel Maintenance:** Keep wheels free of debris. If wheels become stiff, clean around the axle and apply a small amount of lubricant.
- **Storage:** Store luggage in a cool, dry place away from direct sunlight when not in use.

TROUBLESHOOTING

Issue	Possible Solution
-------	-------------------

Issue	Possible Solution
Handle is stiff or stuck	Ensure the push-button is fully depressed. Check for obstructions in the handle mechanism. Apply a silicone lubricant if needed.
Wheels are not rolling smoothly	Remove any debris (hair, lint) from around the wheel axles. Apply a small amount of silicone lubricant to the wheel bearings.
USB port not charging	Verify that a charged portable power bank is correctly connected to the internal USB cable. Ensure your device's charging cable is properly inserted into the external port.
Zippers are difficult to move	Apply a zipper lubricant or rub a graphite pencil along the zipper teeth to ease movement. Avoid forcing the zipper.

PRODUCT SPECIFICATIONS

Specification	Detail
Product Dimensions	9 x 13.5 x 16.5 inches
Item Weight	5.5 pounds (2.5 Kilograms)
Capacity	176 Cubic Inches (10.5 Liters)
Model Number	112934-1041
Manufacturer	Samsonite Corporation
Material	Polyester (as inferred from product description)

WARRANTY INFORMATION

Samsonite products are rigorously tested to ensure they meet stringent standards. This product may be covered by a limited warranty against defects in materials and workmanship. For specific warranty details and to register your product, please refer to the documentation included with your purchase or visit the official Samsonite website. Optional protection plans are also available for purchase:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly plan covering eligible past and future purchases)

For further assistance or support, please contact Samsonite customer service.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question