

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ariete](#) /
- › [Ariete Robox 1799 Food Processor Replacement Bowl User Guide](#)

Ariete Robox 1799

Ariete Robox 1799 Food Processor Replacement Bowl User Guide

Model: Robox 1799 (Part Number: part_B07H9CL87B)

1. PRODUCT OVERVIEW

This document provides essential information for the Ariete Robox 1799 food processor replacement bowl. This is an original Ariete spare part designed to ensure proper function and fit with compatible Ariete Robox food processor models.



Image 1: Ariete Robox 1799 Food Processor Replacement Bowl. This image shows the clear plastic bowl with a handle, designed for food processing tasks.

The replacement bowl features a sturdy plastic construction and an integrated handle for easy handling and pouring. It is designed to seamlessly integrate with your existing Ariete Robox food processor base.

2. COMPATIBILITY

To ensure correct fit and operation, verify that your food processor model is listed below. The product data for your appliance can typically be found on the rating plate, usually located on the underside of the unit.

This replacement bowl is compatible with the following Ariete Robox food processor models:

- 00 C179900ar0 Robox

- 00 C179900aras Robox
- 00 C179901aa0 Robox
- 00 C179901aaas Robox

If your specific model number is not listed, please contact Ariete customer support for assistance before purchasing.

3. INSTALLATION/REPLACEMENT

Follow these steps to safely replace the bowl on your Ariete Robox food processor:

1. **Safety First:** Ensure the food processor is unplugged from the power outlet before attempting any installation or replacement.
2. **Remove Old Bowl (if applicable):** If replacing an existing bowl, carefully lift it off the motor base.
3. **Position New Bowl:** Place the new Ariete Robox 1799 replacement bowl onto the motor base. Align the bowl's bottom with the base's locking mechanism.
4. **Secure the Bowl:** Gently rotate the bowl clockwise until it clicks securely into place. Ensure it is firmly seated and does not wobble.
5. **Verify:** Once installed, attempt to gently lift the bowl without rotating to confirm it is locked. Do not force it.
6. **Ready for Use:** The food processor is now ready for use with the new bowl.

Note: Always refer to your food processor's main instruction manual for specific safety precautions and operating procedures.

4. CARE AND CLEANING

Proper care and cleaning will extend the life of your replacement bowl and maintain hygiene.

- **Before First Use:** Wash the bowl thoroughly with warm, soapy water, then rinse and dry completely.
- **After Each Use:** Disassemble any removable parts (if applicable, e.g., lid, blades - not included with this bowl but relevant for the overall appliance) and wash the bowl immediately.
- **Washing:** The plastic bowl can typically be washed by hand with warm water and mild dish soap. Avoid abrasive cleaners or scouring pads, which can scratch the plastic.
- **Dishwasher Safety:** Refer to your main food processor manual for specific dishwasher compatibility of its components. Generally, plastic parts may be placed on the top rack of a dishwasher, but hand washing is often recommended to preserve material integrity over time.
- **Drying:** Allow the bowl to air dry completely or dry with a soft cloth before storing.
- **Storage:** Store the bowl in a clean, dry place, away from direct sunlight or extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with the replacement bowl, consider the following:

- **Bowl Not Locking:** Ensure the bowl is correctly aligned with the motor base and rotated fully clockwise until it clicks. Check for any obstructions on the base or the bowl's locking tabs.
- **Leaks:** If the bowl leaks, ensure it is properly seated and locked. Also, check the condition of any seals or gaskets (if applicable to your specific food processor model and not part of the bowl itself).
- **Damage:** Inspect the bowl for any cracks or damage that may have occurred during shipping or handling. Do not use a damaged bowl.

For further troubleshooting or issues not resolved by these steps, please contact Ariete customer support.

6. SPECIFICATIONS

Feature	Detail
Brand	Ariete
Model Name	Robox 1799 (Replacement Bowl)
Part Number	part_B07H9CL87B
Material	Plastic
Dimensions (L x W x H)	Approximately 24 x 18 x 13 cm (9.45 x 7.09 x 5.12 inches)
Item Weight	Approximately 350 g (0.77 lbs)
Special Feature	Integrated handle

7. WARRANTY AND SUPPORT

For warranty information regarding this replacement part, please refer to the original purchase documentation or contact the seller directly. Ariete provides customer support for their products.

If you require technical assistance or have questions about compatibility, please visit the official Ariete website or contact their customer service department. Contact information can typically be found on the manufacturer's website or in the original appliance manual.

This user guide is for informational purposes only. Ariete reserves the right to make changes to products without prior notice.