

[Manuals.plus](#) /

› [IKEA](#) /

› IKEA HEKTAR Wall/Clamp Spotlight with E17 LED Bulb Bundle User Manual

IKEA 1f8906f5-faf6-44f4-9689-47a8fb5287da

IKEA HEKTAR Wall/Clamp Spotlight User Manual

Model: 1f8906f5-faf6-44f4-9689-47a8fb5287da

1. PRODUCT OVERVIEW

The IKEA HEKTAR Wall/Clamp Spotlight is a versatile lighting solution designed for indoor use, offering both wall-mount and clamp-mount installation options. This bundle includes three dark gray spotlights and three E17 LED bulbs, providing a modern and functional lighting experience for your home or office. The spotlights feature a dimmable function and are controlled via a push button switch.



Image 1.1: Overview of the IKEA HEKTAR Wall/Clamp Spotlight bundle, showing three dark gray spotlights and three E17 LED bulbs.

What's in the Box:

- 3 x IKEA HEKTAR Wall/Clamp Spotlight (Dark Gray)
- 3 x E17 LED Bulb

2. SAFETY GUIDELINES

Please read all safety instructions carefully before installation and use. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Indoor Use Only:** This product is designed for indoor use only and is not water resistant. Do not expose to water or high humidity.
- **Electrical Safety:** Always disconnect power at the main circuit breaker before installing, cleaning, or performing maintenance on the fixture.
- **Bulb Type:** Use only E17 LED bulbs as specified. Using incorrect bulb types may damage the fixture or pose a fire hazard.
- **Ventilation:** Ensure adequate ventilation around the spotlight to prevent overheating. Do not cover the fixture

with flammable materials.

- **Installation:** Ensure the mounting surface is strong enough to support the weight of the fixture. If unsure, consult a qualified electrician.
- **Cleaning:** Clean the fixture with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Children and Pets:** Keep the product out of reach of children and pets.

3. ASSEMBLY & INSTALLATION

The IKEA HEKTAR spotlight offers two installation methods: wall mount and clamp mount. Assembly is required.

3.1. Wall Mount Installation

1. **Prepare the Area:** Choose a suitable indoor location. Ensure the power is off at the circuit breaker before starting.
2. **Mark Drilling Points:** Hold the mounting bracket against the wall at the desired height and mark the screw hole positions.
3. **Drill Holes:** Drill pilot holes at the marked positions. Insert appropriate wall anchors if necessary (not included).
4. **Secure Bracket:** Attach the mounting bracket to the wall using screws (not included). Ensure it is firmly secured.
5. **Attach Spotlight:** Align the spotlight's base with the secured wall bracket and fasten it according to the included assembly instructions.
6. **Insert Bulb:** Carefully screw the E17 LED bulb into the lamp holder.
7. **Connect Power:** Plug the spotlight's cord into a suitable wall outlet.



Image 3.1: A single IKEA HEKTAR spotlight showing its design and how it connects to the wall mount bracket.

3.2. Clamp Mount Installation

1. **Choose Location:** Select a sturdy surface (e.g., shelf, desk edge) that the clamp can securely grip.
2. **Attach Clamp:** Secure the clamp mechanism of the spotlight to the chosen surface. Tighten the clamp screw until the spotlight is stable and does not wobble.
3. **Insert Bulb:** Carefully screw the E17 LED bulb into the lamp holder.
4. **Connect Power:** Plug the spotlight's cord into a suitable wall outlet.



Image 3.2: Detailed view of the clamp and wall mount bracket, highlighting the versatility of the HEKTAR spotlight's installation.

4. OPERATING INSTRUCTIONS

The IKEA HEKTAR spotlight is simple to operate.

- **Power On/Off:** Locate the push button switch on the spotlight's cord or base. Press the button once to turn the light on, and press it again to turn it off.
- **Dimming Function:** This spotlight features a dimmable function. To adjust brightness, press and hold the push button switch. The light will gradually dim or brighten. Release the button when the desired brightness level is reached.
- **Adjusting Light Direction:** The spotlight head is adjustable. Gently pivot the lamp head to direct the light beam as needed.

5. MAINTENANCE

5.1. Care & Cleaning

To maintain the appearance and functionality of your spotlight:

- Always unplug the spotlight from the power outlet before cleaning.
- Wipe the exterior surfaces with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- Ensure no moisture enters the electrical components.

5.2. Bulb Replacement

When the E17 LED bulb needs replacement:

1. **Disconnect Power:** Ensure the spotlight is unplugged and has cooled down completely.
2. **Remove Old Bulb:** Carefully unscrew the old E17 bulb from the lamp holder.
3. **Insert New Bulb:** Gently screw in a new E17 LED bulb. Do not overtighten.
4. **Reconnect Power:** Plug the spotlight back into the power outlet.



Image 5.1: Detailed view of the spotlight head, illustrating where the E17 LED bulb is inserted.



Image 5.2: A close-up of the E17 LED bulb, highlighting its base type.

6. TROUBLESHOOTING

If you encounter issues with your IKEA HEKTAR spotlight, refer to the table below for common problems and

solutions.

Problem	Possible Cause	Solution
Light does not turn on.	No power to the outlet. Bulb is loose or faulty. Switch is faulty.	Check the power outlet with another device. Ensure the bulb is screwed in tightly. Replace the bulb if necessary. Contact customer support if the switch is unresponsive.
Light flickers or dims unexpectedly.	Loose bulb connection. Incompatible dimmer (if using external dimmer). Faulty bulb.	Tighten the bulb. Ensure you are using the integrated dimming function correctly. If using an external dimmer, ensure it is compatible with LED bulbs. Replace the bulb.
Spotlight gets too hot.	Poor ventilation. Incorrect bulb wattage.	Ensure the spotlight is not covered and has adequate airflow. Use only the specified 7-watt E17 LED bulbs.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	IKEA
Model Number	1f8906f5-faf6-44f4-9689-47a8fb5287da
Color	Dark Gray
Material	Aluminum, Plastic, Polycarbonate
Light Source Type	LED
Bulb Base	E17
Wattage	7 Watts
Brightness	400 Lumen
Control Method	Push Button
Special Feature	Dimmable
Installation Type	Clamp Mount, Wall Mount
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant
Plug Format	A- US style

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the purchase documentation or contact the retailer directly. IKEA products typically come with a limited warranty; details can be found on the official IKEA website or by contacting IKEA customer service.

For further assistance, please visit the official IKEA support page or contact their customer service department.

IKEA Official Website: www.ikea.com