

oneisall P2

oneisall P2 Dog Shaver Clippers User Manual

Model: P2

INTRODUCTION

Thank you for choosing the oneisall P2 Dog Shaver Clippers. This manual provides essential information for the safe and effective use, maintenance, and troubleshooting of your pet grooming device. Please read it thoroughly before first use and keep it for future reference.



Image: The oneisall P2 clippers are designed for low-noise operation, making grooming a more comfortable experience for pets. The graphic compares its 50dB noise level to common sounds like a hairdryer (80dB), conversation (60dB), refrigerator (40dB), and falling leaves (20dB).

SAFETY INFORMATION

- Read all instructions before using the appliance.
- Keep the appliance away from water or other liquids. Do not use it in wet conditions.

- Do not disassemble the clipper. For repairs, contact qualified service personnel.
- Keep out of reach of children and pets when not in use.
- Ensure the clipper is fully charged before use to maintain optimal performance.
- Do not use the clipper on open wounds, irritated skin, or if your pet shows signs of discomfort.
- Always check the blade for damage before use. Replace if necessary.
- Unplug the charger from the power outlet when not in use and before cleaning.

PACKAGE CONTENTS

The oneisall P2 Dog Shaver Clippers package typically includes the following items:

- oneisall P2 Pet Clipper
- Comb Attachments (various lengths, e.g., 3mm, 6mm, 9mm, 12mm, 15mm, 18mm)
- Charging Cable
- Cleaning Brush
- Lubricating Oil
- User Manual

Low noise No Afraid

Make your pet
love Grooming



Image: The oneisall P2 pet grooming kit, showing the main clipper unit, various comb guides for different hair lengths, a charging cable, a small cleaning brush, and a bottle of lubricating oil.

PRODUCT OVERVIEW

The oneisall P2 clipper features a durable stainless steel blade, a rechargeable battery for cordless operation, and an ergonomic design for comfortable handling. It is equipped with an adjustable blade and includes multiple comb attachments to achieve desired hair lengths.

SETUP

1. Charging the Clippers

1. Connect the charging cable to the clipper's charging port.
2. Plug the other end of the cable into a suitable USB power adapter (not included) or a USB port.
3. The indicator light will show the charging status. Allow sufficient time for a full charge before first use.

2. Attaching Comb Guides

1. Ensure the clipper is turned off.
2. Select the desired comb attachment for the hair length you wish to achieve.
3. Align the comb guide with the clipper blade and slide it on until it clicks securely into place.
4. To remove, gently push the comb guide upwards and off the blade.

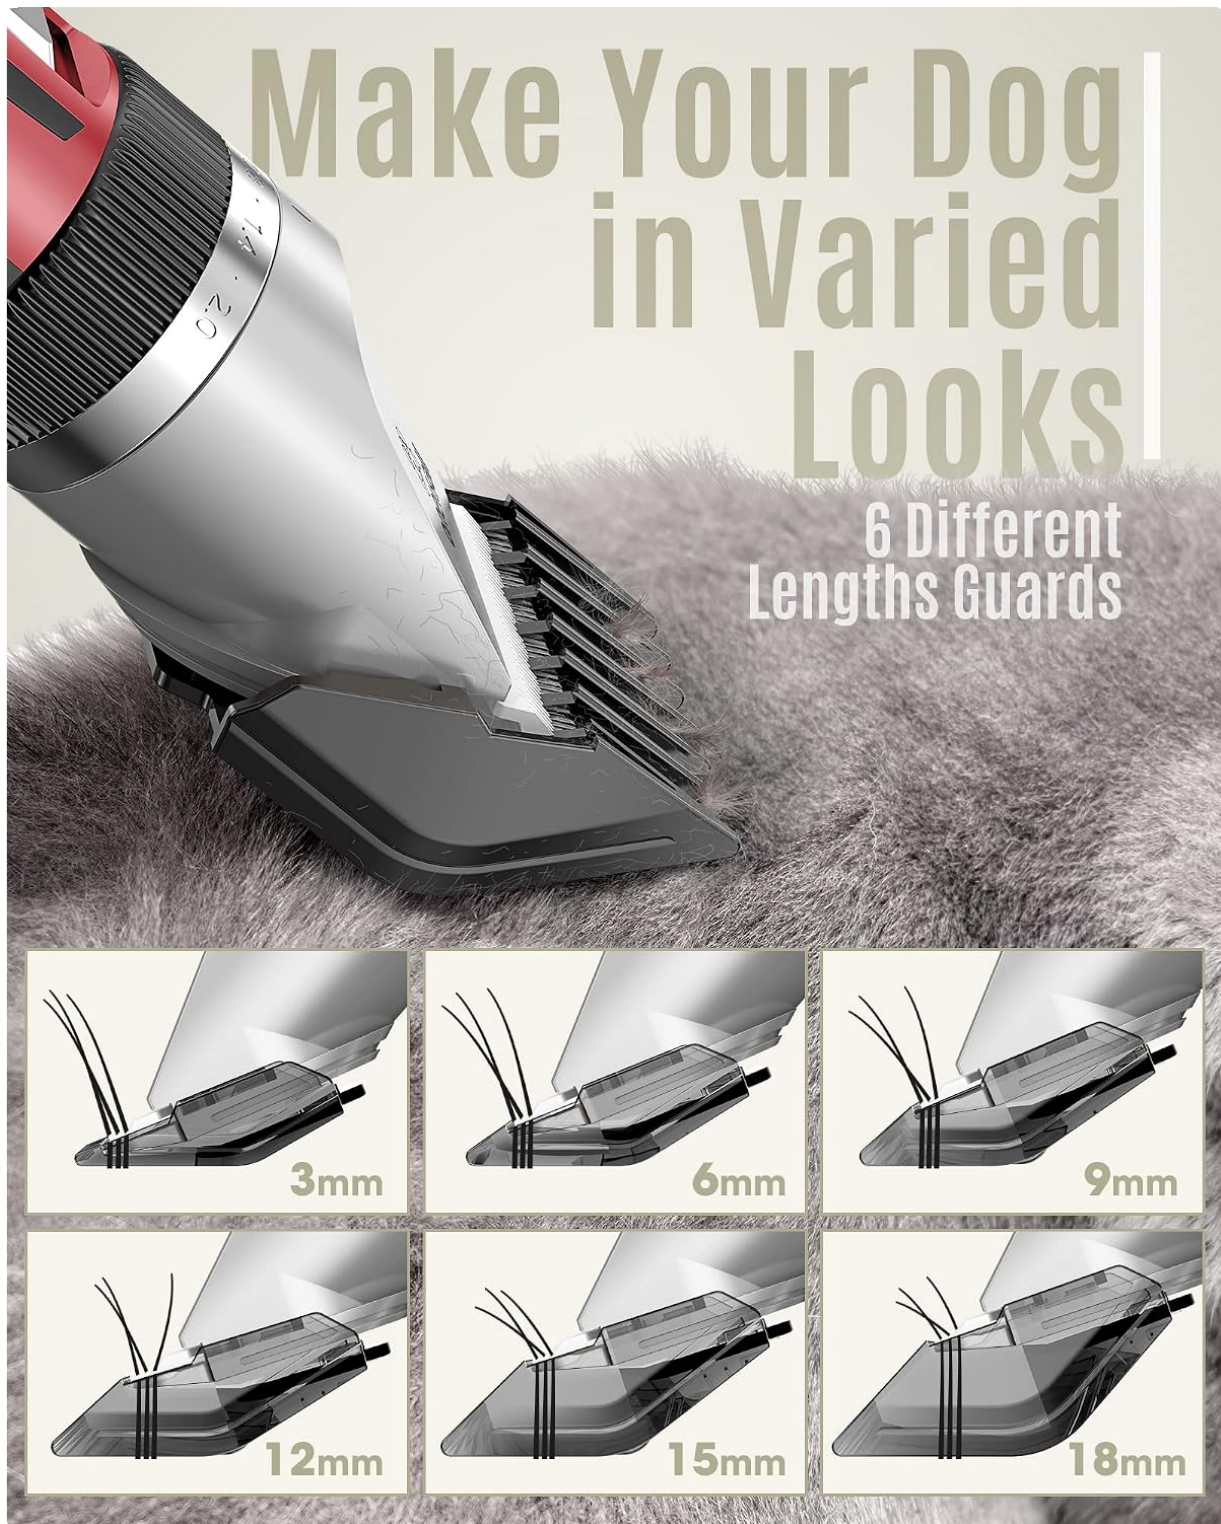


Image: A detailed view of the clipper blade demonstrating how different comb attachments (3mm, 6mm, 9mm, 12mm, 15mm, 18mm) are used to achieve varied hair lengths during grooming.

OPERATING INSTRUCTIONS

1. Preparing Your Pet

- Bathe and dry your pet thoroughly before grooming.
- Brush out any tangles or mats from your pet's fur. This prevents the blade from snagging and ensures an even cut.
- Ensure your pet is calm and comfortable.

2. Grooming Process

1. Turn on the clipper using the power button.
2. Hold the clipper firmly and move it in the direction of hair growth for a smoother finish, or against the direction for a closer cut.
3. Use the comb attachments to achieve the desired hair length. Start with a longer comb if unsure, and gradually switch to shorter ones.
4. Periodically clear accumulated hair from the blade during grooming to maintain cutting efficiency.
5. Turn off the clipper immediately after use.

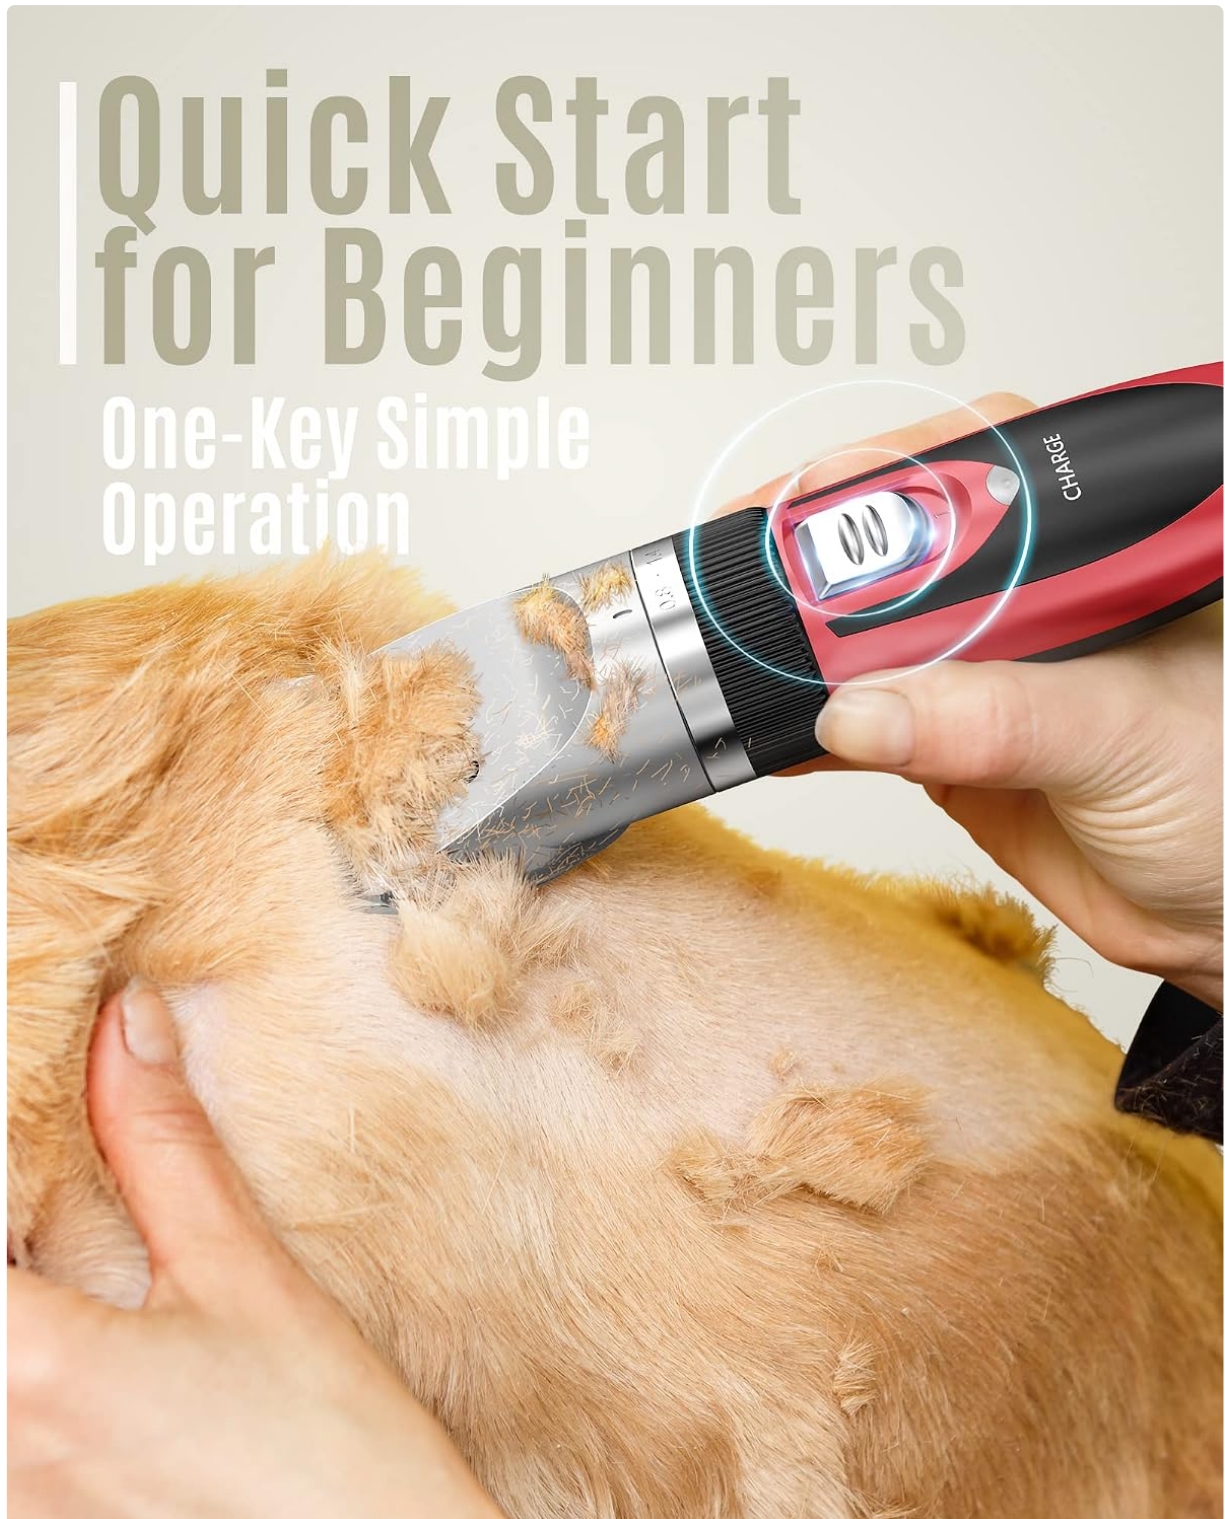


Image: A close-up of the oneisall P2 clipper being used to trim a dog's fur, demonstrating the grooming process.



220

Million+

Annual Social Media Reach



26

Countries

Available on Amazon



14

Years of Innovation

Pioneer in Pet Grooming

Image: The oneisall P2 clipper in use, emphasizing its user-friendly design with a quick start and simple one-key operation, suitable for beginners.

Grooming Pets Outdoor Also

Cordless Designed



Image: A person grooming a dog outdoors using the oneisall P2 cordless clipper, illustrating the convenience and flexibility of its cordless design for grooming in various locations.

3. Instructional Videos

Your browser does not support the video tag.

Video: A comprehensive demonstration of the oneisall P2 Dog Shaver Clippers in use, covering various grooming techniques and features.

Your browser does not support the video tag.

Video: A shorter instructional video showcasing key aspects of using the oneisall P2 Dog Shaver Clippers for pet grooming.

MAINTENANCE

1. Cleaning the Blade

1. Turn off the clipper and detach the blade unit.
2. Use the provided cleaning brush to remove any hair trapped between the blades.
3. The blade unit is washable. Rinse the detached blade under running water to remove fine hairs and debris. Ensure the main clipper body does not get wet.
4. Dry the blade thoroughly before reattaching or storing.

2. Oiling the Blade

1. After cleaning and drying, apply 1-2 drops of lubricating oil (included) to the blade teeth.
2. Turn on the clipper for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil. Regular oiling ensures smooth operation and extends blade life.

3. Storage

- Store the clipper in a dry, cool place, away from direct sunlight and moisture.
- Keep the clipper and accessories in their original packaging or a protective case.



Detachable Washable Blade



Convenient Cleaning

Image: The oneisall P2 clipper features a detachable and washable blade for convenient cleaning. The image shows the blade being removed from the clipper and then being rinsed under water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper not turning on	Low battery; Power button not pressed correctly	Charge the clipper fully; Ensure the power button is pressed firmly.

Problem	Possible Cause	Solution
Clipper not cutting effectively	Blade clogged with hair; Blade not oiled; Dull blade; Pet's fur matted	Clean the blade thoroughly; Apply lubricating oil; Replace the blade if dull; Brush out pet's fur before grooming.
Clipper making unusual noise	Blade not properly aligned; Lack of lubrication	Reattach the blade correctly; Apply lubricating oil.
Clipper getting hot	Extended use; Lack of lubrication	Allow the clipper to cool down; Apply lubricating oil to the blade.

SPECIFICATIONS

Feature	Detail
Model Number	P2
Power Source	Electric (Rechargeable, Cordless)
Battery Type	Lithium Polymer
Blade Material	Stainless Steel
Product Dimensions	10 x 8 x 2 cm
Item Weight	380 Grams
Special Features	Low Noise, Cordless, Rechargeable

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the product packaging or contact oneisall customer service directly. Keep your purchase receipt as proof of purchase.