

SENIX CSX5-M-0

SENIX X5 58 Volt Max Cordless Chainsaw (Model CSX5-M-0) Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your SENIX X5 58 Volt Max Cordless Chainsaw (Model CSX5-M-0). Featuring a 14-inch Oregon bar and 3/8-inch pitch chain, this tool is designed for aggressive and smooth cutting of trees, limbs, and firewood. Please read this manual thoroughly before initial use and retain it for future reference.

2. SAFETY INFORMATION

Operating a chainsaw can be dangerous if proper safety precautions are not followed. Always prioritize your safety and the safety of others. Failure to follow these instructions may result in serious injury or death.

- **Personal Protective Equipment (PPE):** Always wear appropriate PPE, including safety glasses or goggles, hearing protection, heavy-duty gloves, a hard hat, and sturdy footwear. Long pants and a long-sleeved shirt are also recommended.
- **Work Area:** Ensure the work area is clear of bystanders, children, and pets. Maintain a safe distance from other people and objects.
- **Kickback Awareness:** Understand the risks of kickback and how to prevent it. Always maintain a firm grip with both hands and be aware of the chain's position.
- **Battery Safety:** Use only the specified SENIX 58V Max lithium-ion battery and charger. Do not expose batteries to water or extreme temperatures.
- **Tool Condition:** Before each use, inspect the chainsaw for any damage, loose parts, or dull chain. Do not operate a damaged tool.
- **Proper Grip:** Always hold the chainsaw firmly with both hands, with your thumb wrapped around the handle.

3. PRODUCT OVERVIEW AND COMPONENTS

The SENIX X5 58 Volt Max Cordless Chainsaw is engineered for efficient cutting tasks. Key components and features include:

- **14-inch Oregon Bar and Chain:** Provides aggressive and smooth cutting performance.
- **Brushless Motor:** Delivers gas-like cutting performance without emissions, offering longer run-time and reduced

maintenance.

- **Tool-less Chain Tensioning System:** Allows for easy and quick chain adjustments to maintain optimal cutting tension.
- **Automatic Oiling System:** Ensures continuous lubrication to the bar and chain from the 4 oz. built-in oil tank, reducing wear and tear. An oil level window allows for easy monitoring.
- **Chain Brake:** A crucial safety feature that stops the chain instantly in the event of kickback, protecting the operator.
- **Handle-Mounted Trigger Lock Out:** Prevents accidental starting of the chainsaw.



Figure 3.1: Key features of the SENIX X5 Cordless Chainsaw, including the brushless motor, tool-free chain tensioning, automatic oiling system, and chain brake.



Figure 3.2: Front view of the SENIX X5 Cordless Chainsaw, showing the bar and chain.



Figure 3.3: Side view of the SENIX X5 Cordless Chainsaw, illustrating the handle and motor housing.

BRUSHLESS MOTOR

No maintenance. Longer run-time.

TOOL-FREE CHAIN TENSIONING

For easy chain adjustments

AUTOMATIC OILING SYSTEM

Provides continuous lubrication
for less maintenance



CHAIN BREAK

Stops the chain in event of kickback

X5 **58V*** **LITHIUM-ION** **BRUSHLESS**

*58V max initial voltage. 50.4V nominal voltage.

Figure 3.4: Rear view of the SENIX X5 Cordless Chainsaw, showing the battery compartment.



Figure 3.5: The SENIX X5 Chainsaw, accompanied by its instruction manual and bar cover.

4. SETUP

4.1 Battery and Charger

The SENIX CSX5-M-0 is a tool-only product. The SENIX B25X5 58V Max* 2.5 Ah battery and CHX5 2 Amp charger are sold separately. Ensure the battery is fully charged before use. Refer to the battery and charger manuals for specific charging instructions.

4.2 Bar and Chain Installation

1. Ensure the chainsaw is turned off and the battery is removed.
2. Remove the chain cover.
3. Carefully place the chain around the drive sprocket and guide bar, ensuring the cutting edges face the correct direction.
4. Reattach the chain cover and hand-tighten the knob.
5. Use the tool-less chain tensioning system to adjust the chain. The chain should be snug against the guide bar but still able to be pulled freely by hand.
6. Tighten the knob securely.

4.3 Oiling System

The chainsaw features an automatic oiling system. Before each use, fill the oil reservoir with appropriate bar and chain oil. Monitor the oil level through the oil level window during operation and refill as needed to ensure continuous lubrication.

5. OPERATING INSTRUCTIONS

5.1 Starting the Chainsaw

1. Ensure the chain brake is disengaged (pulled back towards the handle).

2. Insert a fully charged 58V Max battery into the battery compartment.
3. Press the handle-mounted trigger lock out button, then squeeze the trigger to start the chainsaw.

5.2 Cutting Techniques

Always maintain a balanced stance and firm grip. Let the chainsaw do the work; do not force it. For trimming limbs and small branches, position the chainsaw securely and make smooth, controlled cuts. For larger pieces of firewood or trees up to 28 inches in diameter, plan your cuts to avoid pinching the bar or causing kickback. Always be aware of the direction of falling wood.



Figure 5.1: Demonstrating proper technique for cutting a log with the SENIX X5 Chainsaw.



Figure 5.2: A close-up view of the chainsaw in action, cutting through wood.



Figure 5.3: The SENIX X5 Chainsaw positioned on tree stumps, ready for use.

5.3 Chain Brake Operation

The chain brake is a safety device designed to stop the chain quickly. It can be engaged manually by pushing the front hand guard forward or automatically during a kickback event. Always ensure the chain brake is engaged when carrying the chainsaw or when not actively cutting.

6. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your chainsaw. Always remove the battery before performing any maintenance.

6.1 Chain Tensioning

Check chain tension frequently, especially during initial use. A properly tensioned chain should be snug against the guide bar but still allow you to pull it around the bar by hand. Adjust using the tool-less tensioning system as described in Section 4.2.

6.2 Oiling

Ensure the automatic oiling system is functioning correctly and the oil reservoir is filled with quality bar and chain oil. Proper lubrication is critical for chain and bar life.

6.3 Cleaning

After each use, clean sawdust, chips, and debris from the chainsaw, especially around the bar, chain, and motor housing. Use a brush or compressed air. Do not use water to clean the electrical components.

7. TROUBLESHOOTING

If you encounter issues with your chainsaw, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Chainsaw does not start	Battery not charged or inserted correctly; Chain brake engaged; Trigger lock out not pressed.	Charge battery and ensure proper insertion; Disengage chain brake; Press trigger lock out before squeezing trigger.
Chain not moving	Chain brake engaged; Chain too tight; Obstruction.	Disengage chain brake; Adjust chain tension; Clear any obstructions.
Poor cutting performance	Dull chain; Incorrect chain tension; Insufficient oil.	Sharpen or replace chain; Adjust chain tension; Refill oil reservoir.
Oil leakage	Overfilled reservoir; Damaged cap or seal.	Do not overfill; Inspect and replace cap or seal if damaged.

If the problem persists after attempting these solutions, contact SENIX customer support.

8. SPECIFICATIONS

Specification	Detail
Brand	SENIX
Model Number	CSX5-M-0
Power Source	Battery Powered (58 Volt Max*)
Chain Length	14 Inches

Specification	Detail
Bar and Chain Type	Oregon Bar and 3/8-inch pitch chain
Item Weight	4 Ounces (tool only)
Product Dimensions (L x W x H)	32" x 8.5" x 10"
Included Components	Bar and chain cover
Battery and Charger	Sold separately (Recommended: SENIX B25X5 58V Max* 2.5 Ah battery and CHX5 2 Amp charger)
Nominal Voltage	50.4 Volts

*58 Volt Max battery, maximum initial battery voltage (measured without a workload) is 58 volts.

9. WARRANTY AND SUPPORT

All SENIX 58 Volt Max* cordless products and all SENIX lithium-ion batteries and chargers are backed by a **3-year limited warranty** for your peace of mind. For warranty claims, technical support, or replacement parts, please contact SENIX customer service. Keep your purchase receipt as proof of purchase.

10. PRODUCT VIDEO

Watch this official product video for a visual overview of the SENIX 14" 58V Cordless Brushless Chainsaw with Oregon Bar.

Your browser does not support the video tag.

Video: 14" 58V Cordless Brushless Chainsaw, Oregon Bar, Tool Only (Duration: 0:29). This video provides a visual demonstration of the chainsaw's features and operation.

© 2026 SENIX. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question