

Redi-Remote RT850158345

Replacement Remote Control User Manual

Model: RT850158345

1. INTRODUCTION

This manual provides instructions for the Redi-Remote Replacement Remote Control, model RT850158345. This remote is designed as a direct replacement for specific RCA units, including models 850158345, LED32E30RH, LED40E45RH, and LED50E45RH. It is not an original RCA remote control but a custom replacement manufactured by Redi-Remote. This remote is pre-programmed and requires no additional setup for compatible devices.

The remote control measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness, with a weight of 5 ounces.

2. SAFETY INFORMATION

- Do not expose the remote control to direct sunlight, high humidity, or extreme temperatures.
- Avoid dropping or subjecting the remote control to strong impacts.
- Do not attempt to disassemble or modify the remote control. This may void any implied warranty.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Dispose of used batteries according to local regulations. Do not mix old and new batteries, or different types of batteries.

3. SETUP: BATTERY INSTALLATION

The remote control requires four (4) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.

3. Insert four new AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Remove batteries if the remote control will not be used for an extended period to prevent leakage.

4. OPERATING INSTRUCTIONS

This section details the functions of the buttons on your replacement remote control. The remote features a sliding cover that reveals additional, model-specific functions.



Image 1: Full view of the Redi-Remote Replacement Remote Control. The top section includes power, volume, channel, and number buttons. The lower section, revealed by sliding down the cover, contains navigation, playback, input selection, and other advanced functions.

4.1. Upper Section Buttons

PWR (Power): Turns the television or compatible device on or off.

SLEEP: Activates the sleep timer function, if available on your device.

TV/VIDEO: Switches between TV and video input modes.

DISP (Display): Shows on-screen information such as current channel, time, or program details.

VOL+ / VOL- (Volume Up / Down): Adjusts the audio volume level.

CH+ / CH- (Channel Up / Down): Changes the television channel.

MUTE: Silences or restores the audio.

MENU: Accesses the main menu of the television or device.

RECALL: Switches between the current and previously viewed channel.

Number Pad (0-9, 100): Directly enters channel numbers. The '100' button may be used for three-digit channel entry or specific functions depending on the device.

ENT (Enter): Confirms channel selection after using the number pad.

4.2. Lower Section Buttons (Slide Down to Reveal)

To access these functions, slide the cover located at the bottom of the remote control downwards.

HOME: Returns to the home screen or main menu of smart TVs.

INPUT /*EPG/I: Selects input sources (e.g., HDMI 1, AV) or accesses the Electronic Program Guide (EPG) or Information.

EXIT: Exits menus or on-screen displays.

Navigation Buttons (Up, Down, Left, Right): Navigates through menus and options.

ENTER: Confirms selections within menus.

Playback Controls (Rewind, Play/Pause, Fast Forward, Stop, Previous Track, Next Track): Controls media playback functions for compatible devices (e.g., DVD player, USB media).

FAV CH (Favorite Channel): Accesses or cycles through favorite channels.

ASPECT: Changes the screen aspect ratio (e.g., 4:3, 16:9).

C.C. (Closed Caption): Toggles closed captions on or off.

AUDIO: Selects audio tracks or modes.

HDMI: Directly selects an HDMI input.

COMP (Component): Directly selects a Component video input.

AV (Audio/Video): Directly selects an Audio/Video input.

USB: Directly selects a USB input for media playback.

5. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the surface.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and moisture when not in

use for extended periods.

- **Battery Replacement:** Replace all batteries simultaneously when they are depleted. Do not mix old and new batteries.

6. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote control is not working.	<ul style="list-style-type: none">◦ Check if the batteries are inserted correctly with the correct polarity.◦ Replace old or depleted batteries with new AAA batteries.◦ Ensure there are no obstructions between the remote control and the device's infrared sensor.◦ Confirm the remote is pointed directly at the device.
Some buttons do not function.	<ul style="list-style-type: none">◦ Ensure the remote is compatible with your specific device model (850158345, LED32E30RH, LED40E45RH, LED50E45RH).◦ Some functions may not be supported by all compatible devices.◦ Clean the remote control buttons and surface to ensure no debris is interfering.
Remote control range is reduced.	<ul style="list-style-type: none">◦ Batteries may be low; replace them.◦ Ensure the infrared sensor on the device is not blocked.

7. SPECIFICATIONS

- **Product Type:** Replacement Remote Control
- **Brand:** Redi-Remote
- **Model Number:** RT850158345
- **Compatible RCA Models:** 850158345, LED32E30RH, LED40E45RH, LED50E45RH
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 4 x AAA Batteries (not included)
- **Dimensions:** Approximately 7.5" L x 2.25" W x 0.75" H (Remote Control); 7 x 3 x 1 inches (Product/Packaging Dimensions)
- **Item Weight:** 5 ounces
- **Special Feature:** No Programming Needed
- **Max Number of Supported Devices:** 1

8. WARRANTY INFORMATION

As a replacement product, specific warranty details are typically provided by the seller at the time of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and return policies.

This remote control is manufactured by Redi-Remote.

9. SUPPORT

For any questions, concerns, or troubleshooting assistance not covered in this manual, please contact the seller from whom you purchased this product. They will be able to provide the most accurate and timely support.

Seller: [RemotesPro](#)

© 2023 Redi-Remote. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.