

Manuals.plus /

› KitchenAid /

› KitchenAid 5 Cup Food Chopper KFC0516WH Instruction Manual

KitchenAid KFC0516WH

KitchenAid 5 Cup Food Chopper KFC0516WH Instruction Manual

Model: KFC0516WH

PRODUCT OVERVIEW

This compact and lightweight 5 Cup Food Chopper is ideal for everyday use, offering fresh options to quickly chop, whip, mix, and puree. It is designed to simplify meal preparation, whether for healthier eating, creative cooking, or saving time.

Key Features

- **Precisely chop or puree** with the stainless steel multi-purpose blade that locks in place for convenient pouring.
- **Whisk, whip, and stir** a variety of ingredients, including whipped cream in just 30 seconds with the included whisk accessory (Based on 1 cup of heavy cream).
- With its small, countertop-friendly footprint and simple cord wrap, it's **easy to store**, neatly tucking away when you're finished prepping.
- **2 speeds and pulse** for coarse or fine results for anything from chunky pico de gallo and salsa, to a creamy hummus, smooth sauce, or tasty dressing.
- Easily incorporate liquid ingredients for sauces and dressings while processing with the **drizzle basin**.
- Model KFC0516 includes (1) 5 Cup Work Bowl with Handle and Pour Spout, (1) Lid with Drizzle Basin, (1) Stainless Steel Multi-Purpose Blade, (1) Whisk Accessory.

COMPONENTS

The KitchenAid 5 Cup Food Chopper consists of several key components designed for ease of use and versatility:

- **Motor Base:** The main power unit of the chopper.
- **5 Cup Work Bowl:** A transparent bowl with a handle and pour spout for processing ingredients.
- **Lid with Drizzle Basin:** Covers the work bowl and features an opening for adding liquids during operation.

- **Stainless Steel Multi-Purpose Blade:** Sharp blade for chopping and pureeing.
- **Whisk Accessory:** Used for whipping and stirring lighter ingredients.



Image: The KitchenAid 5 Cup Food Chopper shown with fresh strawberries and whipped cream, demonstrating its use for various food preparations.

SETUP AND ASSEMBLY

Follow these steps to properly set up your KitchenAid 5 Cup Food Chopper:

1. Place the motor base on a clean, dry, flat surface.
2. Place the 5-cup work bowl onto the motor base, aligning the handle with the front. Twist clockwise until it locks securely into place.
3. Carefully insert the desired blade (multi-purpose or whisk accessory) onto the drive pin in the work bowl. Ensure it is seated properly.
4. Add your ingredients to the work bowl. Do not exceed the maximum fill line.
5. Place the lid onto the work bowl, aligning the handle with the work bowl handle. Twist clockwise until it locks securely. The chopper will not operate if the lid is not properly locked.



Image: The fully assembled KitchenAid 5 Cup Food Chopper, ready for use.

OPERATING INSTRUCTIONS

Your KitchenAid Food Chopper is designed for intuitive operation:

Speed Settings

The chopper offers two distinct speed settings for various tasks:

- **Chop (Speed 1):** This setting is ideal for coarse chopping ingredients such as onions, nuts, or herbs.
- **Puree (Speed 2):** Use this setting for fine chopping, pureeing, or emulsifying, perfect for creating smooth sauces, dressings, or baby food.

Using the Pulse Function

To operate the chopper, press and hold the button located on the handle. For precise control and to achieve desired consistency, use the pulse function by pressing and releasing the button repeatedly.

Drizzle Basin

The lid features a convenient drizzle basin. This allows you to slowly incorporate liquid ingredients, such as oil for mayonnaise or dressings, while the chopper is running, ensuring smooth emulsification.



Image: Close-up of the KitchenAid Food Chopper's lid, highlighting the drizzle basin for adding liquids during processing.

CARE AND CLEANING

Proper care and cleaning will ensure the longevity and optimal performance of your food chopper. Always unplug the food chopper before cleaning.

Dishwasher Safe Parts

The following parts are dishwasher safe (top rack only):

- Work Bowl
- Lid
- Multi-Purpose Blade
- Whisk Accessory

Hand Washing

The motor base should be wiped clean with a damp cloth. **Do not immerse the motor base in water or any other liquid.**

Cord Storage

For convenient and tidy storage, the power cord can be wrapped neatly around the base of the motor unit.



Image: The KitchenAid Food Chopper demonstrating its integrated cord wrap feature for compact storage.

TROUBLESHOOTING

If you encounter any issues with your KitchenAid 5 Cup Food Chopper, refer to the following common problems and solutions:

| Problem | Solution |
|------------------------------------|---|
| Chopper does not turn on. | Ensure the work bowl and lid are correctly assembled and securely locked into place. The safety interlock system prevents operation if not properly secured. |
| Ingredients are unevenly chopped. | Use the pulse function for better control over consistency. Process ingredients in smaller batches if necessary to ensure even chopping. |
| Lid is difficult to open or close. | Ensure the lid is aligned correctly with the work bowl handle. Apply firm, even pressure and twist clockwise to lock, or counter-clockwise to unlock. Initial use may require more effort due to new seals. |
| Liquid leaks from the work bowl. | Verify that the lid is securely locked and the work bowl is properly seated on the motor base. Do not overfill the work bowl past the maximum fill line. |

SPECIFICATIONS

Detailed specifications for your KitchenAid 5 Cup Food Chopper:

| Feature | Detail |
|---------------------------|----------------------------|
| Brand | KitchenAid |
| Model Name | 5 Cup Chopper |
| Product Dimensions | 5.95"D x 7"W x 10"H |
| Color | White |
| Wattage | 240 |
| Voltage | 110 Volts |
| Bowl Capacity | 5 Cups |
| Number of Speeds | 2 |
| Material | Plastic, Stainless Steel |
| Blade Material | Stainless Steel |
| Special Feature | Cord Storage |
| Product Care Instructions | Dishwasher Safe, Hand Wash |



Image: The KitchenAid 5 Cup Food Chopper with its dimensions clearly marked.

WARRANTY INFORMATION

The KitchenAid 5 Cup Food Chopper KFC0516WH comes with a **1-year limited warranty**. For complete details regarding warranty coverage, terms, and conditions, please refer to the warranty card included in your product packaging or visit the official KitchenAid website.

CUSTOMER SUPPORT

For further assistance, product registration, or to explore additional accessories and parts for your KitchenAid 5 Cup Food Chopper, please visit the official KitchenAid website or contact their customer service department. Contact information can typically be found in your product manual or on the KitchenAid website.