

## Redi-Remote RTMKJ39170828

# Redi-Remote Replacement Remote Control User Manual

For LG Models 105-201M and MKJ39170828

## 1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with specific LG television models. This remote is a custom replacement and is not an original LG product. It is engineered to perform all functions of the original remote for the compatible LG units.

**Compatible LG Models:** 105-201M, MKJ39170828

## 2. PACKAGE CONTENTS

- 1 x Redi-Remote Replacement Remote Control
- (Batteries are not included and must be purchased separately)

## 3. SETUP AND BATTERY INSTALLATION

The Redi-Remote is designed for immediate use without programming. Simply install the batteries, and the remote will be ready to operate your compatible LG unit.

### 3.1. Battery Requirements

This remote control requires **4 AAA batteries**. Ensure you use fresh, high-quality batteries for optimal performance.

### 3.2. Installing Batteries

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

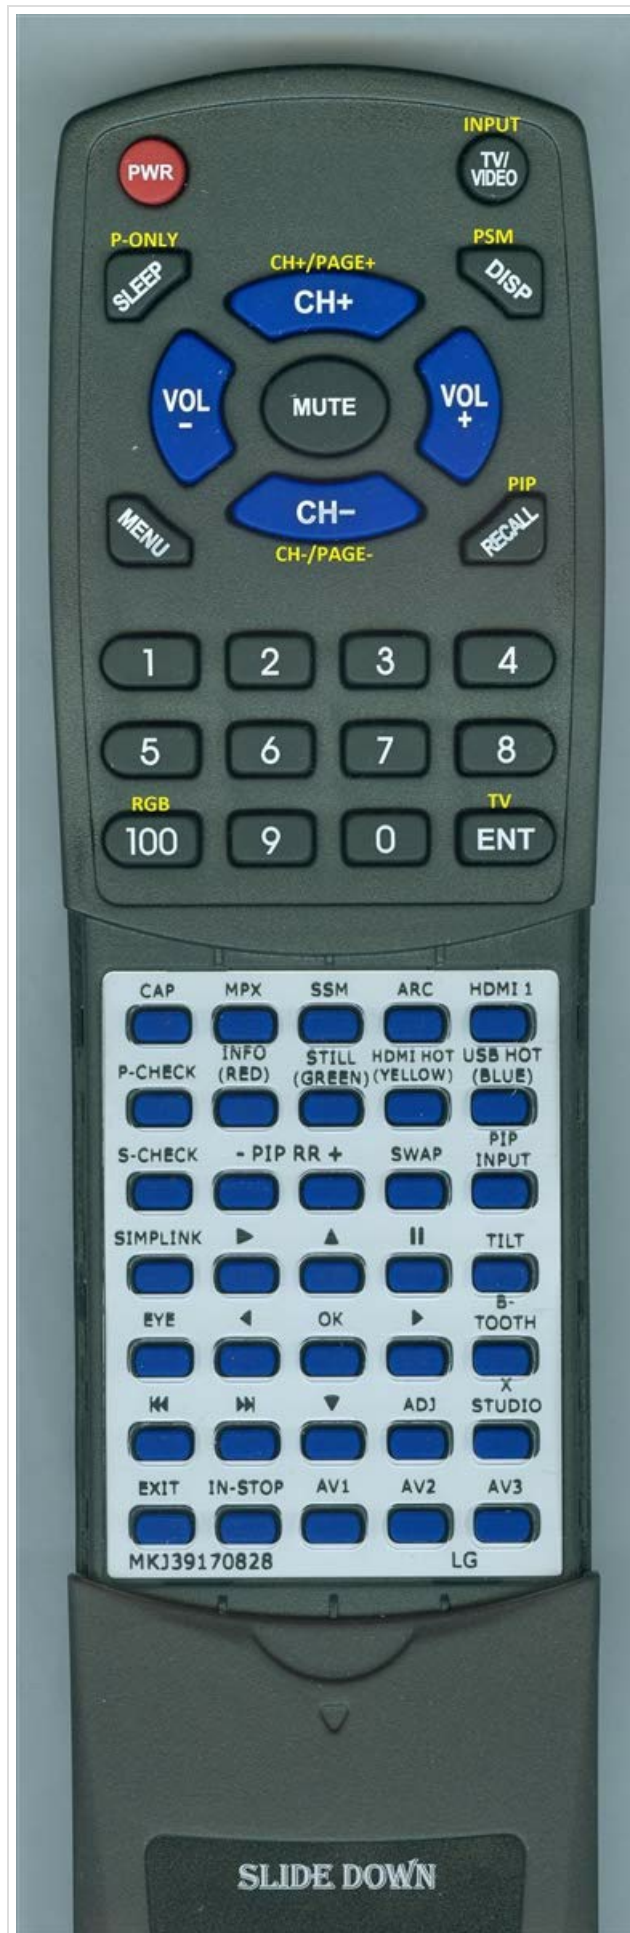


Image 1: Redi-Remote Replacement Remote Control. This image shows the front view of the remote control, highlighting its design and button layout.

## 4. OPERATING THE REMOTE CONTROL

Once batteries are installed, point the remote control directly at your LG unit and press the desired function buttons.

### 4.1. Basic Functions

The remote provides standard functions such as Power, Volume Up/Down, Channel Up/Down, Mute, Number Pad, and Menu navigation, identical to your original LG remote.

### 4.2. Accessing Model-Specific Functions

A protective cover is located over the lower half of the remote. To access model-specific functions, gently slide this cover downwards. This will reveal additional buttons tailored to the specific features of your compatible LG unit.

## 5. MAINTENANCE AND CARE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all batteries simultaneously when the remote's performance diminishes. Do not mix old and new batteries or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.
- **Avoid Damage:** Do not drop the remote, expose it to extreme temperatures, or immerse it in water.

## 6. TROUBLESHOOTING

If you experience issues with your Redi-Remote, please refer to the following common solutions:

| Problem                       | Solution                                                                                                                                                                                                                                                                                                                                                 |
|-------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote is not responding.     | <ul style="list-style-type: none"><li>◦ Ensure batteries are installed correctly with the correct polarity.</li><li>◦ Replace old batteries with new AAA batteries.</li><li>◦ Check for any obstructions between the remote and the LG unit's infrared receiver.</li><li>◦ Ensure you are within the effective range of the LG unit.</li></ul>           |
| Some buttons are not working. | <ul style="list-style-type: none"><li>◦ Verify that the remote is compatible with your specific LG model (105-201M or MKJ39170828).</li><li>◦ Clean the remote's surface and buttons to ensure no debris is interfering.</li><li>◦ If specific functions are under the sliding cover, ensure the cover is correctly positioned to reveal them.</li></ul> |

## 7. SPECIFICATIONS

| Feature | Detail |
|---------|--------|
|---------|--------|

| Feature                 | Detail                   |
|-------------------------|--------------------------|
| Brand                   | Redi-Remote              |
| Model Number            | RTMKJ39170828            |
| Compatibility           | LG 105-201M, MKJ39170828 |
| Connectivity Technology | Infrared                 |
| Batteries Required      | 4 x AAA (not included)   |
| Product Dimensions      | 7 x 2.5 x 1 inches       |
| Item Weight             | 5 ounces                 |
| Special Feature         | No Programming Required  |

## 8. SUPPORT AND CONTACT

If you encounter any issues or have questions regarding your Redi-Remote replacement control, please contact the seller directly for assistance. Refer to your purchase documentation for seller contact information.