

[Manuals.plus](#) /

› [Maserati](#) /

› Maserati Traguardo Quartz Chronograph Watch R8873612010 User Manual

Maserati R8873612010

Maserati Traguardo Quartz Chronograph Watch R8873612010 User Manual

Model: R8873612010

INTRODUCTION

Thank you for choosing the Maserati Traguardo Quartz Chronograph Wrist Watch, model R8873612010. This manual provides essential information for the proper setup, operation, and maintenance of your watch. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.

PRODUCT OVERVIEW

Components

Familiarize yourself with the key components of your Maserati Traguardo watch:

- **Crown:** Used for setting the time and date.
- **Pushers:** Operate the chronograph functions (start, stop, reset).
- **Dial:** Displays time, chronograph sub-dials, and date window.
- **Hands:** Hour, minute, second, and chronograph hands.
- **Strap:** Gold-colored steel with Yellow Gold PVD coating.
- **Case Back:** Engraved with model information and water resistance rating.



Figure 1: Front view of the Maserati Traguardo R8873612010 watch, showcasing the black dial, gold case, and mesh strap.



Figure 2: Side view of the watch, highlighting the crown and chronograph pushers on the right side of the case.

SETUP

Initial Setup

Your watch comes with a pre-installed battery. No initial charging or winding is required. If the watch is not running, pull the crown out to the time-setting position and push it back in firmly to start the movement.

Adjusting the Strap

The steel mesh strap is adjustable to fit various wrist sizes. It features a push-button foldover clasp with safety. For precise adjustment, it is recommended to visit a professional jeweler or watchmaker. Ensure the clasp is securely fastened after adjustment.

Setting the Time

1. Pull the crown out to the second click position (farthest out). The second hand will stop.
2. Turn the crown to set the hour and minute hands to the desired time.
3. Push the crown back in to the normal position. The second hand will resume movement.

OPERATING INSTRUCTIONS

Time and Date Adjustment

- **Setting Time:** Follow the steps outlined in the "Setting the Time" section above.
- **Setting Date:** Pull the crown out to the first click position. Turn the crown to adjust the date. Push the crown back in to the normal position. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.

Using the Chronograph Function

Your watch features a chronograph (stopwatch) function.

1. **Start:** Press the upper pusher to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press the upper pusher again to stop the chronograph. The elapsed time will be displayed.
3. **Reset:** With the chronograph stopped, press the lower pusher to reset all chronograph hands to their zero positions.

Water Resistance

This watch is water resistant up to 100 meters (10 ATM). This rating makes it suitable for swimming and snorkeling, but it is **not** suitable for scuba diving. Do not operate the crown or pushers while the watch is wet or submerged, as this can compromise the water resistance.



Figure 3: Back view of the watch, showing the engraved case back with water resistance information and Maserati logo.



Figure 4: Detailed view of the watch's case back, displaying model number, water resistance, and 'Italian Design' inscription.

MAINTENANCE

Cleaning

To maintain the appearance of your watch, clean it regularly with a soft cotton cloth. For more thorough cleaning, especially after exposure to saltwater, rinse the watch with fresh water and dry it completely with a soft cloth. Do not use harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by a quartz movement requiring a D battery. When the battery runs low, the second hand may start to jump in two-second intervals. Battery replacement should be performed by a qualified watchmaker to ensure the water resistance seal is properly maintained.

General Care

- Avoid exposing your watch to extreme temperatures or sudden temperature changes.
- Keep the watch away from strong magnetic fields, which can affect the accuracy of the quartz movement.
- Protect the watch from impacts and drops.
- Regularly check the condition of the strap and clasp for any signs of wear or damage.

TROUBLESHOOTING

Watch Has Stopped

- Check if the crown is fully pushed in.
- The battery may need replacement. Consult a professional watchmaker.

Time is Inaccurate

- Ensure the time is set correctly.
- Exposure to strong magnetic fields can affect quartz accuracy.
- If the issue persists, professional inspection may be required.

Chronograph Hands Not Resetting to Zero

- Ensure the chronograph is stopped before pressing the reset pusher.
- If hands are misaligned, consult the watch's specific module instructions for chronograph hand calibration, or seek professional assistance.

SPECIFICATIONS

Model Number	R8873612010
Movement Type	Quartz
Case Material	Steel with Yellow Gold PVD
Case Diameter	45 Millimetres
Case Thickness	12 Millimetres
Band Material	Steel with Yellow Gold PVD
Band Width	2.2 Centimetres
Dial Colour	Black
Crystal Material	Mineral
Water Resistance Depth	100 Metres (10 ATM)
Clasp Type	Push Button Foldover Clasp With Safety
Item Weight	151 Grams



Figure 5: The Maserati Traguardo watch worn on a wrist, demonstrating its appearance and fit.

WARRANTY AND SUPPORT

Warranty Information

This Maserati Traguardo watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects under normal use.

Customer Support

For warranty claims, service, or technical support, please contact the authorized Maserati watch service center or the retailer from whom you purchased the watch. Keep your proof of purchase and warranty card in a safe place.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07HC777H8>

More documents and user manuals: <https://manuals.plus/>